

## Proline 520.450 ANC

### Operating instructions

Before transporting and using the machine,  
please read the instructions thoroughly!

# Service and information

Your BOMAR dealer:

## Direct BOMAR contact:

**BOMAR spol. s r.o.**  
Těžební 1236/1  
62700 Brno  
Czech Republic, EU

telefon: +420 –  
533 426 100  
fax: +420 –  
533 426 109  
e-mail: [info@bomar.cz](mailto:info@bomar.cz)  
www:

## We are available:

Mondays to Fridays 7<sup>00</sup> – 16<sup>00</sup>

## Version:

1.05 / Feb. 2016  
rev. 1

**BOMAR, spol. s r.o.** © – Subject to modifications and amendments.

## EC Declaration of Conformity

1)

We:

**BOMAR, spol. s r.o.**  
**Těžební 1236/1**  
**627 00 Brno, Czech Republic**  
 Id. No: 48908827  
**declare herewith**

that the following designated device based on its conception and construction as well as the design launched by us meets the relevant basic safety requirements of the decrees of the government. This statement applies exclusively to the machine device in conditions in which it was brought to the market. It does not apply to parts subsequently added by the end user or to modifications performed subsequently by the end user. In the event of any device modification not approved by us this declaration shall lose its validity

**Name:** Band Saw  
**Type :** Proline 520.450 Anc  
**Serial number:**

**Manufacturer** BOMAR, spol. s r.o., Těžební 1236/1, 627 00 Brno

**Product data**

**Determination:** for cross dividing and cutting of rolled and towed bars and profiles made of steel, stainless steel, non-ferrous metals and plastics

**Description:** Stand, table, cutting unit with the arm, saw band and drive, hand clamping device, cooling system, machine control  
 Pneumatic  NO  YES Hydraulic  NO  YES  YES  Control system  NO  YES

**Technical data:**

Cutting rate	20–120 m.min <sup>-1</sup>
Cutting angle	0°
Total dimensions in mm (l×w×h)	2900x2050x2400
Total power requirement	6 kVA
Weight	1600 kg

**Documentation:**

Technical documentation for this machine device was elaborated in compliance with Government regulation no. 176/2008, Annex 7, part A.

**The device meets relevant requirements of the given directives:** 2006/42/ES

2004/108/ES

The applied harmonized standards, National standards and technical specifications:

ČSN EN ISO 12100:2011	ČSN EN 13898+A1:2009	ČSN EN ISO 13857:2008
ČSN EN ISO 4413:2011		ČSN EN 60204 -1 ed.2+A1:2009
ČSN EN 55011 ed.3+A1:2011	ČSN EN 61000-6-2 ed.3:2006	ČSN EN 61000-6-4 ed.2+A1:2011

**The product is safe on condition of the common and determined usage.**


The conformity judging was performed according to §12, par. 3, let. b), of the Law no. 22/1997 Coll. as amended.

The declaration of conformity was carried out in the cooperation with the TÜV SÜD Czech s.r.o, 2) , Novodvorská 994, 142 21 Prague 4 – Czech Republic, Identification number: 63987121 - Inspection body no. 4002.

The inspection certificate no

04.863.175

was issued

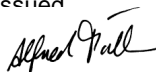

**BOMAR, spol. s r.o.**  
 Těžební 1236/1, 627 00 Brno  
 Czech Republic  
 IČO: 48908827  
 DIČ: CZ48908827

**Alfred Pichlmann, Managing Director**

*Name and function of the responsible subject, signature*

Brno, 8.1.2016  
*Point of issue, datum*

Person authorized to complete the technical documentation:: BOMAR, spol. s r. o., Těžební 1236/1, 627 00 Brno  
 1) Name, address and identification number of the subject issuing the conformity declaration (producer of importer)  
 2) The authorized or accredited body co-operating on the conformity judging



If the equipment is installed without safety equipment offered by BOMAR, spol. s ro or its agents and used by the customer (or buyer) then EC declaration loses validity.  
 EC Declaration of conformity is valid only if customer (buyer) installed the BOMAR safety

equipment with the machine or with some other with equivalent safety device in accordance with current applicable regulations and standards.  
All machine elements and components that were built into the device by BOMAR, spol. s ro have been declared "identical" to a safety device, as offered by BOMAR, spol. s ro or its agents.



# Content

<b>1. SAFETY NOTES.....</b>	<b>10</b>
1.1. Machine determination .....	12
1.2. Protective suit and personal safety .....	12
1.3. Safety notes for machine operator .....	13
1.4. Safety notes for the servicing and repairs .....	14
1.5. Safety notes for the servicing and repairs on hydraulic unit.....	14
1.6. Safety machine accessories .....	14
1.6.1. Total Stop .....	14
1.6.2. Arm covers .....	15
1.6.3. Saw band stretching and rupture inspection.....	15
1.6.4. Band saw cover .....	15
1.6.5. Brush cover .....	16
1.7. Safety notes for the cooling .....	16
1.7.1. Instructions for first help .....	16
1.8. Umístění štítku stroje / Maschinenschild position / Position of machine label .....	16
1.9. Umístění bezpečnostních značek / Verteilung der Sicherheitszeichen / Position of safety symbols.....	17
<b>2. MACHINE DOCUMENTATION.....</b>	<b>18</b>
2.1. Technická data / Technische Daten / Technical data .....	20
2.2. Rozměrové schéma / Aufstellzeichnung / Installation diagram .....	22
2.3. Popis / Beschreibung / Description .....	23
2.4. Transportation and stocking.....	24
2.4.1. Conditions for transportation and stocking.....	24
2.4.2. Transport and stocking preparations .....	24
2.4.3. Transport and stocking.....	24
2.4.4. Transportní schéma / Transport schema / Transport scheme.....	25
2.5. Activation.....	26
2.5.1. Machine working conditions .....	26
2.6. Band saw unpacking and assembling .....	26
2.6.1. Machine installing and levelling.....	26
2.6.2. Machine disposal after lifetime.....	27
2.6.3. First run of the power pack.....	27
2.6.4. Filling the reservoir with hydraulic oil .....	27
2.6.5. Kotevní plan / Verankerungsplan / Grounding plan .....	29
2.7. Electrical connection.....	30
2.7.1. Check the direction of the saw band.....	30
2.7.2. Check machine connection into electrical network.....	31
2.8. Filling of the cooling system.....	31
2.9. Check machine function .....	31
2.10. Saw band.....	31
2.10.1. Saw band size .....	31
2.10.2. Selection of the saw band tooth system .....	31
2.10.3. Saw band running-in .....	33
2.10.4. Tables for teeth selection .....	34
<b>3. MACHINE CONTROL.....</b>	<b>35</b>
3.1. Starting the band saw .....	37
3.2. Machine referring.....	37
3.3. Control panel .....	38
3.4. Machine control in manual mode .....	41
3.5. Machine control in automatic mode.....	42
3.5.1. Final cutting of material of short lengths at automatic cycle .....	45
3.5.2. Cycle breaking.....	46
3.6. Machine setup .....	46
3.6.1. SETUP.....	46
3.6.2. SERVIS (password) .....	47
3.7. Error messages .....	49
3.8. Band saw adjusting.....	49
3.8.1. Adjusting band guides .....	49
3.8.2. Cutting speed adjusting.....	51
3.8.3. Adjustment of pressure to the cut .....	51
3.8.4. Speed adjustment of the arm lowering .....	51
3.8.5. Brush adjustment .....	51
3.9. Material insertion .....	52
3.9.1. Handling agent selection .....	52
3.9.2. Insertion.....	52
3.9.3. Bundle material cutting.....	53
3.9.4. Supporting roller .....	53
<b>4. MACHINE SERVICE.....</b>	<b>55</b>
4.1. Saw band dismantling.....	57

4.2. Saw band instalation.....	57
4.3. Saw band stretching and inspection.....	58
4.3.1. Saw band stretching.....	58
4.4. Saw band run adjustment on stretching wheel.....	58
4.4.1. Saw band run inspection.....	58
4.4.2. Saw band setting.....	59
4.5. Saw frame lower stop position adjustment.....	59
4.6. Limit switch of the saw frame lower position adjustment.....	60
4.6.1. Check setting.....	60
4.6.2. Limit switch setting.....	60
4.7. Cooling agents and chips disposal.....	60
4.7.1. Coolant device inspection.....	60
4.7.2. Chips disposal.....	61
4.8. Hydraulic, Greases and oils.....	61
4.8.1. Gearbox oils.....	61
4.8.2. Lubricant greases.....	62
4.8.3. Lubrication.....	62
4.8.4. Hydraulic oils.....	63
4.8.5. Hydraulic unit service.....	63
4.9. Machine cleaning.....	64
4.10. Worn pieces replacement.....	64
4.10.1. Hard metal guides replacement.....	64
4.10.2. Round brush replacement.....	65
4.10.3. Saw band guiding rollers replacement.....	65
4.10.4. Stretching wheel replacement.....	68
4.10.5. Driving wheel replacement.....	70
4.10.6. Cooling pump replacement.....	71
<b>5. ZÁVADY / TROUBLESHOOTING.....</b>	<b>74</b>
5.1. Mechanical problems.....	76
5.2. Electric and hydraulic problems.....	78
5.3. Hydraulic problems.....	79
<b>6. SCHÉMATA / SCHEMAS / SCHEMATICS.....</b>	<b>81</b>
6.1. Elektrické schéma / Elektroschema / Electric scheme – 3x400 V, PE+N, 50 Hz . 83	
6.2. Elektrické schéma / Elektroschema / Electric scheme – 3x400 V, PE, 50 Hz.... 102	
6.3. Elektrické schéma / Elektroschema / Electric scheme – 3x230 V, PE, 50 Hz.... 121	
6.4. Hydraulické schéma / Hydraulikschema / Hydraulic diagram..... 140	
<b>7. VÝKRESY SESTAV PRO OBJEDNÁNÍ NÁHRADNÍCH DÍLŮ / ZEICHNUNGEN FÜR BESTELLUNG DER ERSATZTEILE / DRAWING ASSEMBLIES FOR SPARE PARTS ORDER.....</b>	<b>143</b>
7.1. Proline 520.450 ANC.....	144
7.2. Kusovník / Piece list / Stückliste - Proline 520.450 ANC.....	145
7.3. Ovladačí panel / Control panel / Bedienpult.....	146
7.4. Kusovník / Piece list / Stückliste - Ovladačí panel / Control panel / Bedienpult..	147
7.5. Ovladačí panel / Control panel / Bedienpult.....	148
7.6. Kusovník / Piece list / Stückliste - Ovladačí panel / Control panel / Bedienpult..	149
7.7. Sloup / Pole / Säule.....	150
7.8. Kusovník / Piece list / Stückliste - Sloup / Pole / Säule.....	151
7.9. Odměrování / Pole / Säule.....	152
7.10. Kusovník / Piece list / Stückliste - Odměrování / Pole / Säule.....	153
7.11. Odměrování / Measuring / Gehrungsmessung.....	154
7.12. Sloup / Pole / Säule.....	156
7.13. Kusovník / Piece list / Stückliste - Sloup / Pole / Säule.....	157
7.14. Svěrák / Vice / Schraubstock.....	158
7.15. Kusovník / Piece list / Stückliste - Svěrák / Vice / Schraubstock.....	159
7.16. Skluz / Slide / Rutsch.....	160
7.17. Válec svěráku / Vice cylinder / Schraubstockzylinder.....	162
7.18. Kusovník / Piece list / Stückliste - Válec svěráku / Vice cylinder / Schraubstockzylinder.....	163
7.19. Rameno / Saw arm / Sagerahmen.....	164
7.20. Kusovník / Piece list / Stückliste - Rameno / Saw arm / Sagerahmen.....	165
7.21. Rameno / Saw arm / Sagerahmen.....	166
7.22. Kusovník / Piece list / Stückliste - Rameno / Saw arm / Sagerahmen.....	167
7.23. Kartáč / Brush / Bürste.....	168
7.24. Kusovník / Piece list / Stückliste - Kartáč / Brush / Bürste.....	169
7.25. Kolečko / Wheel / Rolle.....	170
7.26. Konzola / Console / Konsole.....	171
7.27. Kryt / Cover / Abdeckung.....	172
7.28. Zámek / Lock / Schloss.....	173
7.29. Držák / Holder / Halter.....	174
7.30. Vedení pásu / Belt guide / Sägebandführung.....	176

7.31.	Kusovník / Piece list / Stückliste - Vedení pásu / Belt guide / Sägebandführung .....	177
7.32.	Kostka regulace / Regulation cube / Regelungswürfel.....	178
7.33.	Kostka vodící / Lead cube / Führungsklotz .....	180
7.34.	Kusovník / Piece list / Stückliste - Kostka vodící / Lead cube / Führungsklotz	181
7.35.	Vedení / Guide / Backenführung .....	182
7.36.	Kostka vodící / Lead cube / Führungsklotz.....	184
7.37.	Kusovník / Piece list / Stückliste - Kostka vodící / Lead cube / Führungsklotz	185
7.38.	Vedení / Guide / Backenführung .....	186
7.39.	Pohon / Drive / Antrieb .....	188
7.40.	Kusovník / Piece list / Stückliste - Pohon / Drive / Antrieb.....	189
7.41.	Napínání / Tensioning / Spannung .....	190
7.42.	Kusovník / Piece list / Stückliste - Napínání / Tensioning / Spannung.....	191
7.43.	Válec / Roller / Zylinder .....	192
7.44.	Kusovník / Piece list / Stückliste - Válec / Roller / Zylinder.....	193
7.45.	Podavač / Feeder / Vorschub .....	194
7.46.	Kusovník / Piece list / Stückliste - Podavač / Feeder / Vorschub .....	195
7.47.	Element válečkový / Roller element / Rollenelement .....	196
7.48.	Závora optická / Optical gate / Lichtschranke .....	197
7.49.	Válec svěráku / Vice cylinder / Schraubstockzylinder .....	198
7.50.	Kusovník / Piece list / Stückliste - Válec svěráku / Vice cylinder / Schraubstockzylinder .....	199
7.51.	Trať / Track / Bahn.....	200
7.52.	Kusovník / Piece list / Stückliste - Trať / Track / Bahn .....	201
7.53.	Válec svěráku / Vice cylinder / Schraubstockzylinder .....	202
7.54.	Kusovník / Piece list / Stückliste - Válec svěráku / Vice cylinder / Schraubstockzylinder.....	203
7.55.	Plot / Fence / Zaun.....	204
7.56.	Kusovník / Piece list / Stückliste - Plot / Fence / Zaun .....	205
7.57.	Válec pomocný / Auxiliary cylinde / Hilfszylinder .....	206
7.58.	Válec zvedací / Lifting cylinder / Hebezyylinder.....	208
7.59.	Kusovník / Piece list / Stückliste - Válec zvedací / Lifting cylinder / Hebezyylinder .....	209
7.60.	Podstavec / Base / Untersatz .....	210
7.61.	Kusovník / Piece list / Stückliste - Podstavec / Base / Untersatz.....	211





# 1. Safety notes



The operating instructions must be read by the person, who keeps in touch with the machine before transportation, installation, using, servicing, reparation, stocking or removal!

The operating instructions include relevant information. The operator must familiarise himself with the install and operation, safety notes and machine servicing, because reliability and service life must be reached. The operating instructions must avoid risks, which are linked to work on the machine. Before transporting and using of the machine, please read the instructions thoroughly!

**Attention!**

*The operating instructions must be available at the machine! Keep the operating instructions in good condition!*

### 1.1. Machine determination

The band saw **Proline 520.450 ANC** is determined for cutting and shortening of rolled bars and drawn bars and profiles from steels, stainless steels, non-ferrous metals and plastics **without angle cutting**.

**Combustible materials are excluded for cutting!** Any other usage and operation outside this range are unauthorized and the manufacturer/supplier does not accept any responsibility for any damages resulting from such misuse. **The operator has full responsibility!**

The machine is equipped with safety and protective guarding for operator and machine protection. Nevertheless, this safety and protective guarding cannot prevent injury. Service personnel must read this chapter and comprehend it, before he starts to work on the machine. **Always keep instructions about work safety!** Service personnel must take into account other aspects of the risk, which refer to the ambient conditions and the material.

**Attention!**

*Consider the safety signs on the machine. Do not remove or damage them!*

### 1.2. Protective suit and personal safety

**Wear tight fitting overalls!** Loose fitting clothes may be caught with machine parts and cause serious injury.

**Wear protective gloves!** Material cuts and saw band have sharp edges and may cause serious injuries.

**Attention!**

*Gloves you can use only at working material replacement (saw band)! The machine and accessories must be inactive!  
If the machine is running, you must not wear gloves! It is dangerous, because some parts of the machine can catch gloves!*

**Wear protective shoes with non-skid soles!** The unsuitable shoes may cause balance loss and following injury. Falling work pieces may cause serious injuries too.

**Wear protective goggles!** Chips and cooling liquid may damage your eyes.

**Always wear ear protections!** Most of the machines emit up to 80 dB and may damage your hearing.

**Do not wear jewellery and always tie back long hair!** Moving machine parts can catch jewellery or loose hair and may cause serious injuries.

**Operate the machine only when you are fit enough to work.** Illnesses or injuries diminish concentration. Avoid machine work, which may compromise the safety of you and your colleagues!

**Attention!**

*Machine can be operated by person older than 18 years!  
Machine can be operated only person physically and mentally fit for this activity*

**Keep instructions and orders about work safety!**

*Read the operating instructions, before you start to work on the machine! Keep the operating instructions in good condition!*

### 1.3. Safety notes for machine operator

Only one person can operate machine. Machine operator is responsible for presence of other persons by the machine.

Close covers before the machine starting and check, if the covers are not damaged. Damaged covers must be repaired or changed. Do not start the machine, if the cover is removed! Check, if the electric cables are not damaged.

- Do not hold the material for clamping to the vice and for cutting!

**Attention!**

**Do not connect the machine to electricity if the covers are removed. Do not touch the electrical equipment.**

- Do not operate with the buttons and the switches on the control panel, when you have gloves!
- For machine starting take care, that there is nobody in the working area of the machine (it means in the working area of the vice, the saw band, the saw arm etc.).
- In no circumstances, touch the rotating elements.
- Work on the machine only when the machine is in good condition!
- Check at least once in a shift, if the machine is not damaged. If the machine is damaged, you must bring the machine in order and you must inform your superior!
- Keep your working area clean! Ensure sufficient lighting in the working area.
- Take off the spilt water or the oil from the floor and dry it. Do not touch the cooling liquid with bare hands! Do not set the nozzle of the cooling liquid, when the machine is started on
- Do not remove the chips from the working area of the machine, when the machine is started on!
- Do not use the compressed air for the machine cleaning or for the chips removing!
- Use the protective instruments for chips removal!

#### 1.4. Safety notes for the servicing and repairs

**Attention!**

*Only a qualified professional can carry out the servicing and repairs of the electric equipment! Take special care during the work with electrical equipment. High voltage shock can have fatal consequences! Always keep notes about work safety! Otherwise, there is possibility of heavy injury!*

Switch off the main switch and lock it, before you start service work! Otherwise, there is possibility of hazardous machine starting.

Only qualified person can do the servicing and repairs. For parts changing, use only parts, which are identical with the originals. Otherwise, there is possibility of health hazard. Use only recommended type of the hydraulic oils and oils and lubricants!

Do not remove or do not lock the limit switches or safety equipments! Any use of the saw, accessories or machine parts other than that intended by the BOMAR, spol. s r.o. company is not permitted. The guarantee on this product will be afterward lost and BOMAR, spol. s r.o. takes no responsibility for caused damages.

#### 1.5. Safety notes for the servicing and repairs on hydraulic unit

Compliance with the the principles of cleanliness is basic requirement for trouble-free operation of hydraulic equipment. Hydraulic components are products made with high accuracy, and any contamination leads to a reduction lifetime or even malfunction. The consequences are very difficult to remove and expensive.

Always use clean tools. Parts and fasteners, which are part of a hydraulic circuit, never put away the dirty surface. The best cleaning agent is crepe paper, because the fibers of the cleaning cloths can also cause malfunction.

Protective cap from the threaded chamber remove just before the assembly of the unit.

Hoses and pipes before mounting flush with gasoline or other cleaning agent and blow compressed air.

All fittings must be properly tightened. However, do not raw power.

#### 1.6. Safety machine accessories

The machine is equipped with safety accessories. It protects the operator from injuries and the machine before damage. The safety accessories are blocking accessories, emergency switches and covers. Check once in a week the function of the safety accessories. If the safety accessories are functionless, you must stop work and repair or change the safety accessories.

**Enhanced risk!**

*Do not come into or intervene in the cutting area. Otherwise, there is possibility of heavy injury.*

##### 1.6.1. Total Stop

**TOTAL STOP** button is used for emergency switching – off the machine in case defect or health hazard. By pressing **TOTAL STOP** button is interrupted the supply of the electrical power.

**If any damages or fault appears, immediately press TOTAL STOP button!**

Release the pressing button is possible by twisting of the upper part of the button.

### 1.6.2. Arm covers


If the cover is opened during operation, the limit switch is opened and the band saw is stopped. The band saw is not possible to start in set mode.



**The band saw is stated to the operation, when the covers is closed!** Limit switched on saw arm control if covers are open or not.

### 1.6.3. Saw band stretching and rupture inspection

This device checks the saw band stretching and causes immediate machine shut – down in the event the band ruptures.

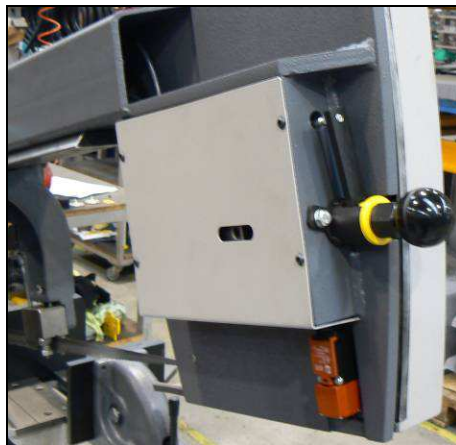

The device contains limit switch. Check the stretching carefully and periodically – eventually adjust.

### 1.6.4. Band saw cover


It covers the visible area of the saw band from left guiding cube to the frame.



Never switch on the saw band driver if this cover is not mounted!

### 1.6.5. Brush cover

It covers the brush for saw blade.

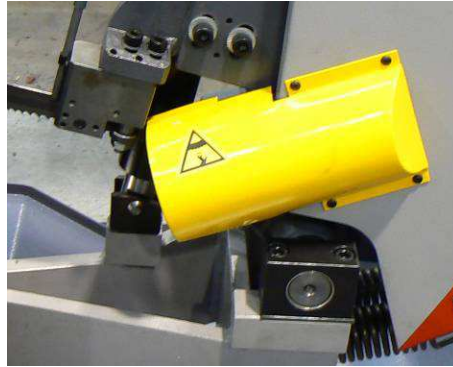

Never switch on the saw band driver if this cover is not mounted!

### 1.7. Safety notes for the cooling

#### **Attention!**

- *When handling cooling agents always wear hazardous fluid-proof gloves!*
- *Wear protective goggles!*
- *Cooling liquid can get in contact with your eyes and may cause permanent severe injuries*

#### 1.7.1. Instructions for first help

1. Pull off and safely remove polluted, soaked clothing.
2. For breathing, go out in the fresh air or look for first aid treatment.
3. Wash with water or use crèmes for contact with the skin.
4. Flush with water for eyes and look for first aid treatment.
5. For swallowing, drink a lot of water and induce vomiting. Look for medical help.

### 1.8. Umístění štítku stroje / Maschinenschild position / Position of machine label



Machine label is placed on saw frame.



## 1.9. Umístění bezpečnostních značek / Verteilung der Sicherheitszeichen / Position of safety symbols

**PO:**

Noste pevnou pracovní obuv  
 Tragen Sie Sicherheitsschuhe  
 Wear fixed protective shoes



**CZ:**

Přečíst návod k použití  
 Bedienungsanleitung lesen  
 Read the operating instructions



**OBS:**

Noste ochranné brýle a sluchátka  
 Tragen Sie eine Schutzbrille und  
 Gehörschutz  
 Wear protective goggles  
 and headphones



**SP:**

Směr pohybu  
 Bewegungsrichtung  
 Direction of motion



**NS**

Nebezpečí stlačení  
 Pressungsgefahr  
 Crushing hazard




**NE**

Nebezpečí úrazu  
 elektrickým proudem  
 Verletzungsgefahr vom  
 elektrischen Strom  
 Electrical hazard



**NR:**

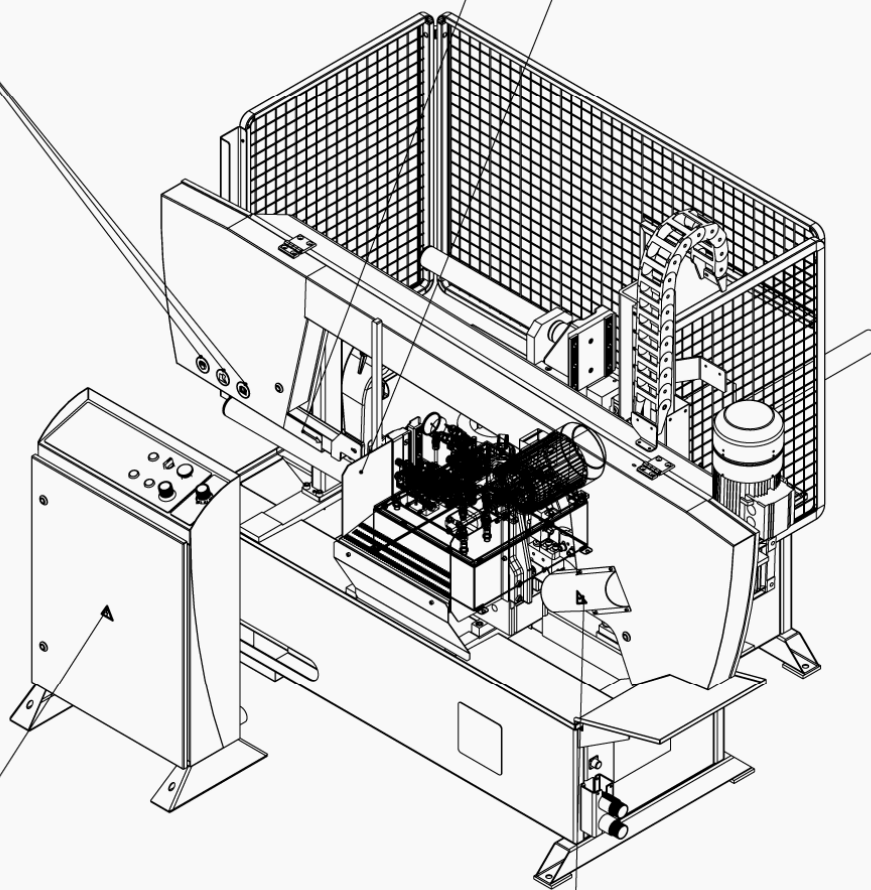



Nebezpečí říznutí  
 Schnittgefahr  
 Cutting or severing hazard



## 2. Machine documentation

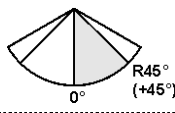

## 2.1. Technická data / Technische Daten / Technical data
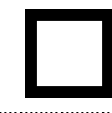
<b>Hmotnost stroje / Maschinengewicht / Machine weight:</b>				
• Hmotnost / Gewicht / Weight	1600 kg			
<b>Rozměry stroje / Maschinengröße / Machine size :</b>				
• Délka / Länge / Length	2900 mm			
• Šířka / Breite / Width	2050 mm			
• Výška / Höhe / Height	2400 mm			
<b>Elektrické vybavení / Elektrische Ausrüstung / Electrical equipment:</b>				
• Napájení / Versorgungsspannung / Supply voltage	~3 x 400 V, 50Hz, TN-C-S/TN-C			
• Příkon / Gesamtschlusswert / Total Input	6 kVA			
• Max.jištění / Max. Vorschaltssicherung / Max. Fuse	25 A			
• Krytí / Schutzart / Protection	IP 54			
<b>Akustický tlak / Schalldruckpegel / Acoustic pressure:</b>				
• Proline 520.450 ANC	$L_{Aeqv} = 76,3$ dB			
<b>Pohon / Atrieb / Drive:</b>				
• Typ / Typ / Type	BN112M4			
• Napájení / Versorgungsspannung / Supply voltage	~3x400V, 50Hz			
• Výkon / Leistung / Output	4 kW			
• Jmenovitá otáčky / Motornendrehzahl / Nominal speed	1440 min <sup>-1</sup>			
<b>Hydraulické zařízení / Hydraulikeinrichtung / Hydraulic equipment:</b>				
• Typ / Typ / Type	PPM-AC0,37-PG1/2,5-TM16-CB03-FR (92.001.070, FWM)			
• Výkon / Leistung / Output	4 MPa / 1,1 kW			
<b>Chladicí zařízení / Kühlmiteleinrichtung / Cooling equipment:</b>				
• Typ / Typ / Type	2COP1-12H1-4			
• Obsah nádrže / Volumen vom Kühlmittel / Capacity	45 l			
<b>Rozměr pásu / Sägebanddimension / Band size:</b>				
<b>6020x41x1,3 mm</b>				
<b>Jeden Zdvih / Vorschublänge Einfachhub / One Upstroak::</b>				
<b>600 mm</b>				
<b>Max. hmotnost podávaného materiálu / Materialmaximalgewicht / Material max. weight:</b>				
<b>3460 kg</b>				
<b>Řezná rychlost / Schnittgeschwindigkeit / Cutting speed:</b>				
<b>20–120 m/min.</b>				
<b>Řezné rozsahy / Schnittbereiche / Cutting size:</b>				
 <p>0°</p>	 <p>Ø450 mm</p>	 <p>520x450 mm</p>	 <p>520x450 mm</p>	 <p>450x450 mm</p>

### Warning:

If the material detection device is installed on the machine then maximal workpiece height is 10 mm shorter.

If the bundle device is installed on the machine then maximal material height is half.


**Level of acoustic pressure:**

Equivalent level of acoustic pressure A (noise) at operator position are  $L_{Aeqv}=76,3$  dB.


Mentioned values are levels of emission which doesn't have to represent safe levels.

Factors which influence real level of acoustic pressure on machine operator are: working place characteristics, cut material, saw band. These factors have significantly influence on acoustic pressure.

## 2.2. Rozměrové schéma / Aufstellzeichnung / Installation diagram

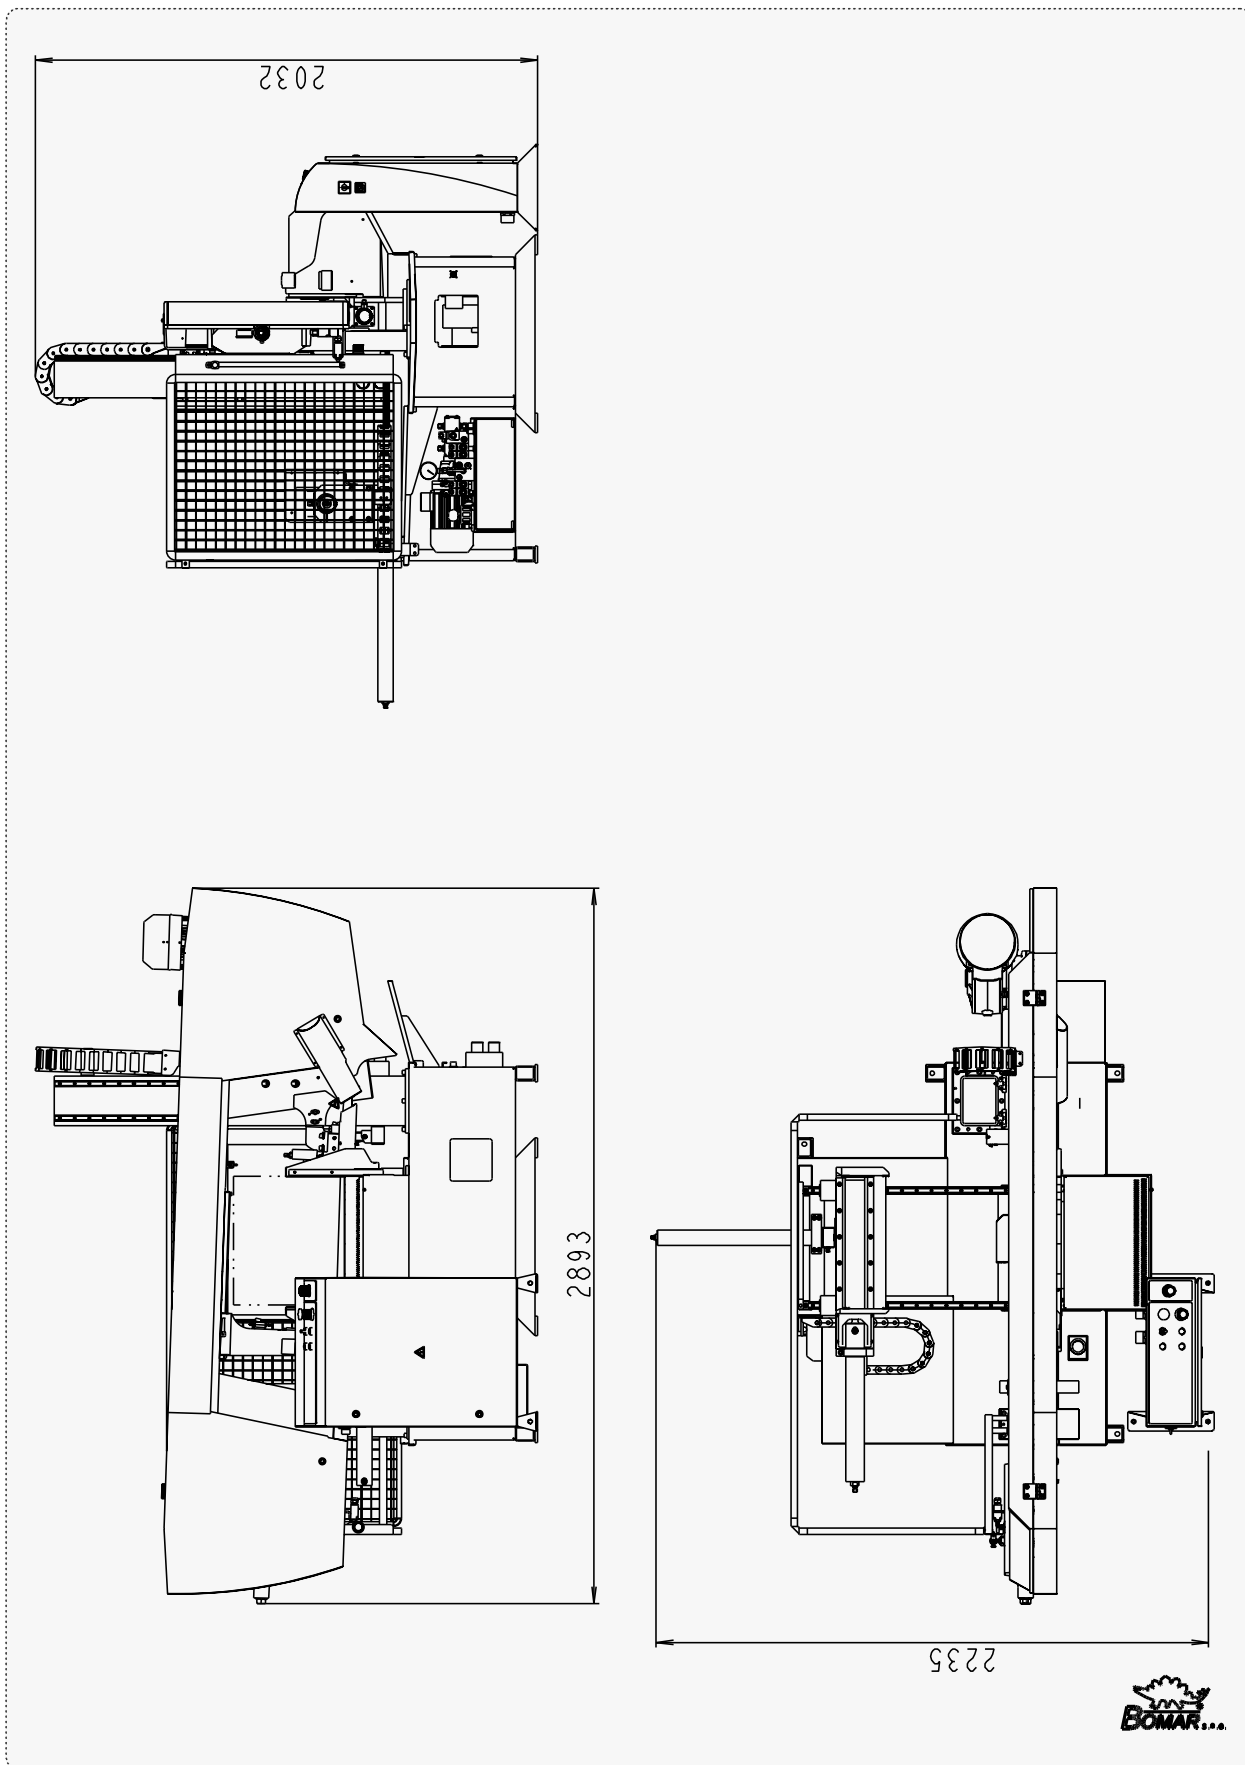

2.3. Popis /  
Beschreibung /  
Description

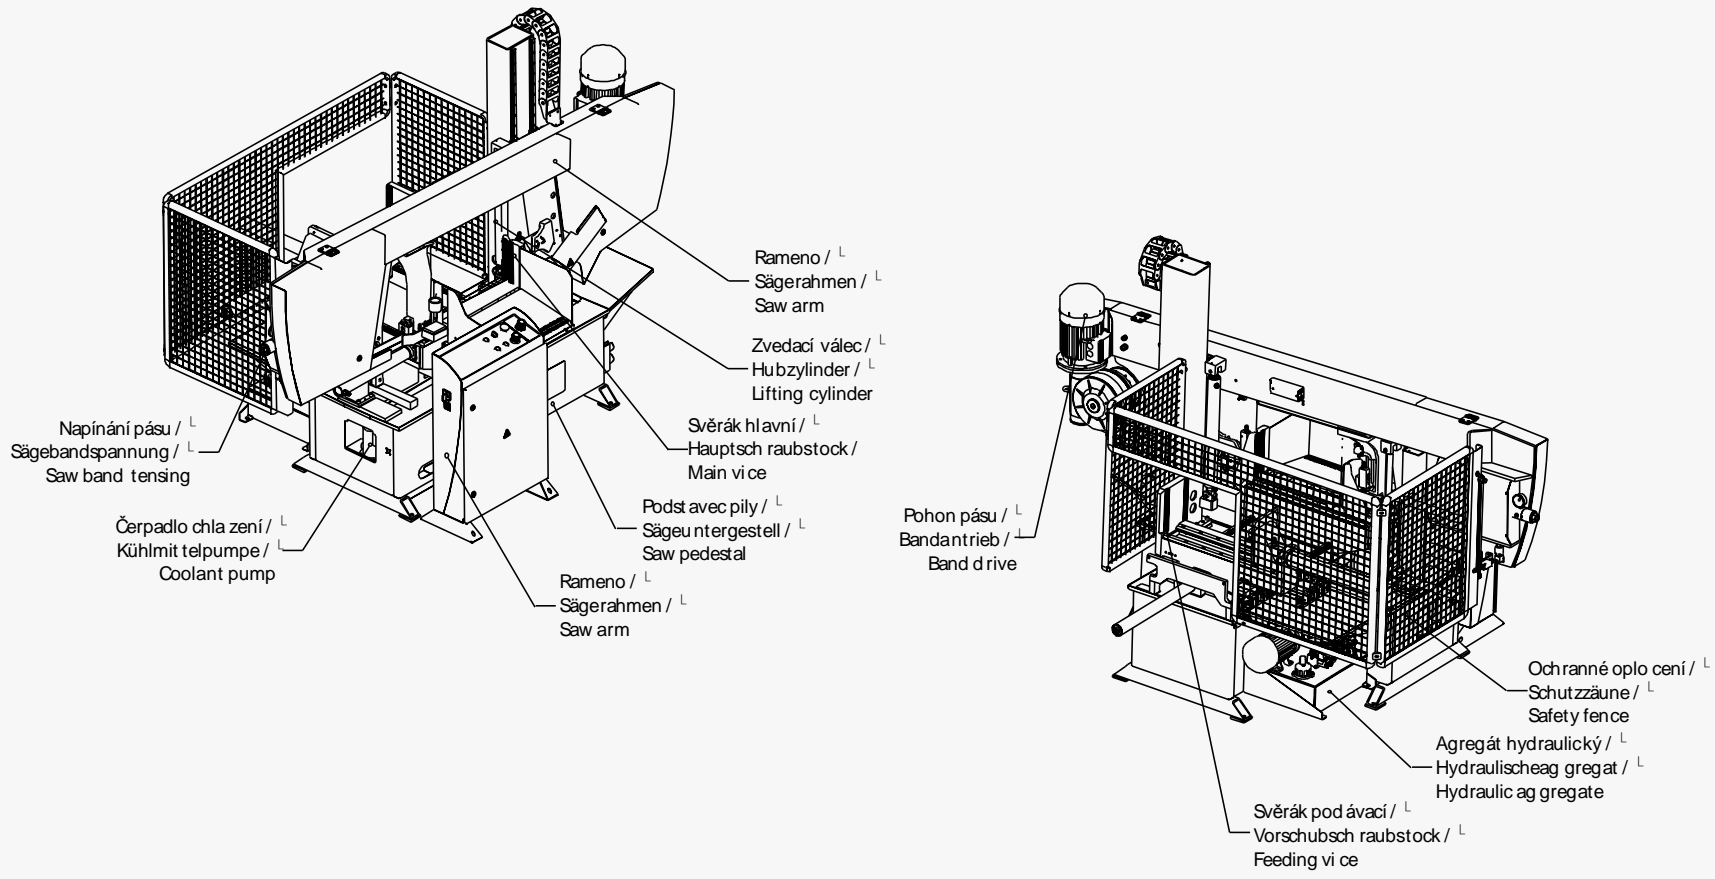

## 2.4. Transportation and stocking

### 2.4.1. Conditions for transportation and stocking

Keep recommendations for the manufacturers for transportation and stocking!  
If the recommendations are not kept, damage can occur to the machine.

- Don't use a forklift truck for handling the machine, if you do not have license for it!
- Don't move under suspended loads! Fault in lifting device may cause serious injury.
- Keep a safe distance from the machine during the transport.
- Temperature of the air from  $-25^{\circ}\text{C}$  to  $55^{\circ}\text{C}$ , for a *short term* (max. 24 hours) temperature of the air until  $70^{\circ}\text{C}$
- Do not expose the machine to radiation (for example microwave radiation, ultraviolet radiation, laser radiation, x-ray radiation). Radiation can cause problems with the machine function and deteriorating condition of the isolation.
- Take measures, to prevent damage by dampness, by vibrations and by shakes.

### 2.4.2. Transport and stocking preparations

Close the vice and thoroughly oil all blank surfaces.

Lower the saw frame to the lowest position.

Make sure to empty the machine of all traces of the cooling agent.

Fasten all loose parts securely to the machine.

Pack and wrap the control desk securely to avoid damage during transport.

Fix the stickers stating the minimum approximate machine weight to at least five well visible places.



### 2.4.3. Transport and stocking

The machine must be secured during transportation. Screw on the palette to the floor of the van or the trailer. Be careful that the machine is not damaged during transportation. Store the machine only under conditions mentioned in the manual, to avoid damage of the machine.


It is forbidden to handle the machine any other way, than it is written in this operating instructions, the machine can be damaged.



2.4.4. Transportní schéma /  
Transport schema /  
Transport scheme

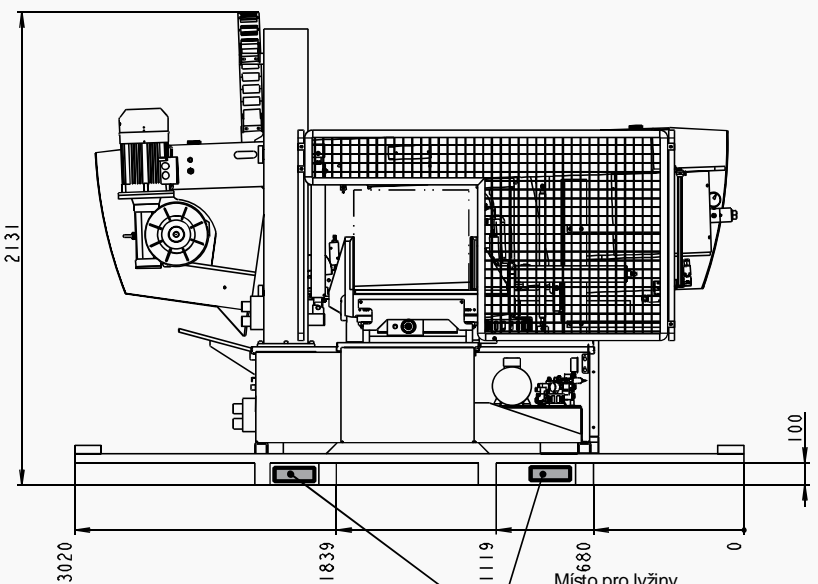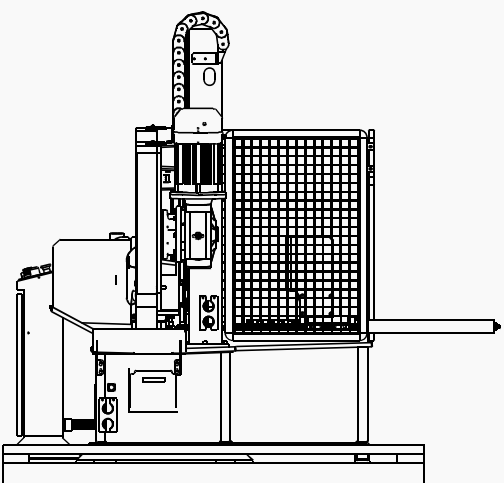

Místo pro lyžiny  
vysokozdvížeého vozíku  
Die Stelle für Greifen mit  
der Gabel des Gabelstaplers  
Place for forklift's skides

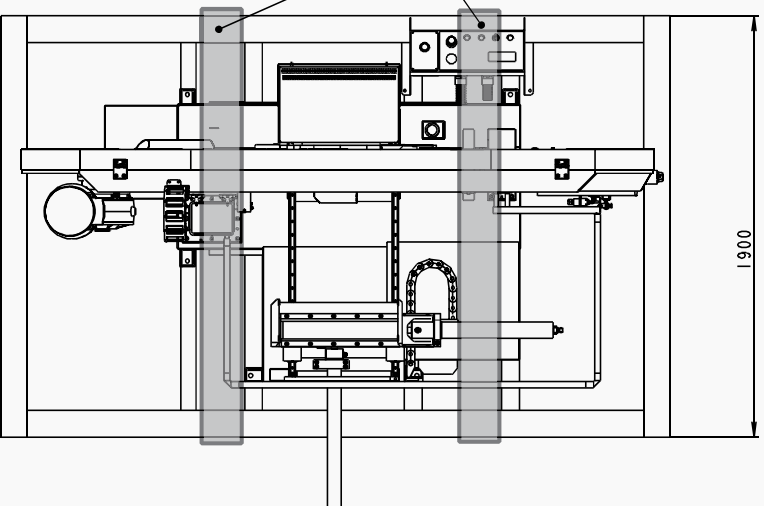

## 2.5. Activation

### 2.5.1. Machine working conditions

Keep the conditions of the manufacturer for machine operating! If recommendations are not kept, damage can occur to the machine.

**The manufacturer warrants the correct function of the machine for these conditions:**

- At temperature air from **10°C to 40°C**, the temperature average during 24 hours must **not exceed over 35°C**.
- At relative dampness of the air in the extend from 30% to 95% (not concentrate). Altitude lower than 1000 metres.

#### **Attention!**

*If the ambient temperature drops below 15 ° C is required before operating the machine to have switch on hydraulic unit around 10 minutes and then made several motion few times (for example, in manual mode) by all hydraulic cylinders. The reason is to heat hydraulic oil to the operating temperature for proper function of the pressure switches (and choke).*

- Do not expose the machine to the radiation (for example microwave radiation, ultra-violet radiation, laser radiation, x-ray radiation). Radiation can cause problems with the machine function and deteriorating condition of the isolation.

## 2.6. Band saw unpacking and assembling

Remove the packing from the machine and unpack all parts.

#### **Attention!**

*Switch off the main switch and lock it, before you start assembly! Otherwise, there is possibility of hazardous machine starting.*

If the hydraulic unit is outside the machine (the machine only connected hoses and cables), it needs to be placed and mounted on a solid basis (floors, etc.). The mounting holes are used on the bottom (bases) of the tank.

### 2.6.1. Machine installing and levelling

Check the floor supporting capacity before machine installing. If the floor capacity does not agree with requirements, you must prepare the necessary base for the machine.

#### **Minimal requirement:**

machine weight – Proline 520.450 ANC – 1600 kg

+ weight of accessories

+ maximum weight of material

- The machine must be levelled at the horizontal position. All feet of the machine must touch with the floor after levelling
- The machine must be levelled by means of the calibrated spirit level. Spirit level is put on the vice area. Set the roller conveyors according to the spirit level.

- For machine levelling, take care that there is sufficient available space for operation, repair work, servicing of the machine and handling the material..
- The machine including appended parts and accessories must be visible from the place of operation.

### 2.6.2. Machine disposal after lifetime

Blown out all service fluids (cooling liquid, hydraulic oil) into designated reservoir. Dismantle machine into separate parts and dispose them in accordance with valid directives.

### 2.6.3. First run of the power pack

#### Before the first run check:

- The direction of the Pump, while run the power pack for max. 2seconds.
- The cooling fan of the motor has to rotate in the same direction as the arrow on the top of the motor cowling indicates.
- In case of wrong rotational direction, the electrical phase in the connection box is to be changed. This check is required after every disconnection from the power source
- Wiring matches with electrical and hydraulic diagrams
- the electric motors (pump and cooler) are properly connected and have the prescribed rotation
- the hydraulic accumulator with nitrogen gas to the specified value
- aux. elements work right (thermometer, level gauge, heater)

#### First run (Attention – working pressure on securing valve is set by producer in accoring the hydraulic diagram):

- In the short intervals activate an electric pump
- check for leaks and noise
- Bleed the hydraulic circuit
- if possible, test the circuit function with minimum load
- test the electrical equipment
- during operation monitor measuring equipment, noise, height and temperature of oil in the tank
- During this time a careful bleeding off for the whole hydraulic system is necessary. In case there is no bleeder port, the power pack will bleed itself after a while via the air breather on the tank or the return line filter.
- After multiple start-up.

### 2.6.4. Filling the reservoir with hydraulic oil

Oil regulations and recommendations of the manufacturer in the technical documentation (appendix) are to be carefully observed. For standard power packs we recommend the oiltype OH-HM32 (DIN 51524) of all known oil manufacturers.


Power packs have to be filled up with clean, pre-filtered oil! The purity of the hydraulic fluid must correspond to the class 10 NAS 1638 (reachable with filter  $\beta = 75$ )!

Filling from container, such as barrels, buckets, etc. is not recommended or permitted!

The maximum oil level will be shown on the upper marking at the dipstick or the sight level glass. Overfilling has to be prevent. The maximum filling rate of 15 l/min shouldn't be exceed.

Oil type	Kinematic viscosity $\nu$ in mm <sup>2</sup> /s in relationship to the fluid temperatur					Freezing point
	0°C	20°C	40°C	60°C	80°C	°C
OH-HM 32	220	100	32	15	7	-40
OH-HV 32	180	67	32	17	11	-40

## 2.6.5. Kotevní plan / Verankerungsplan / Grounding plan

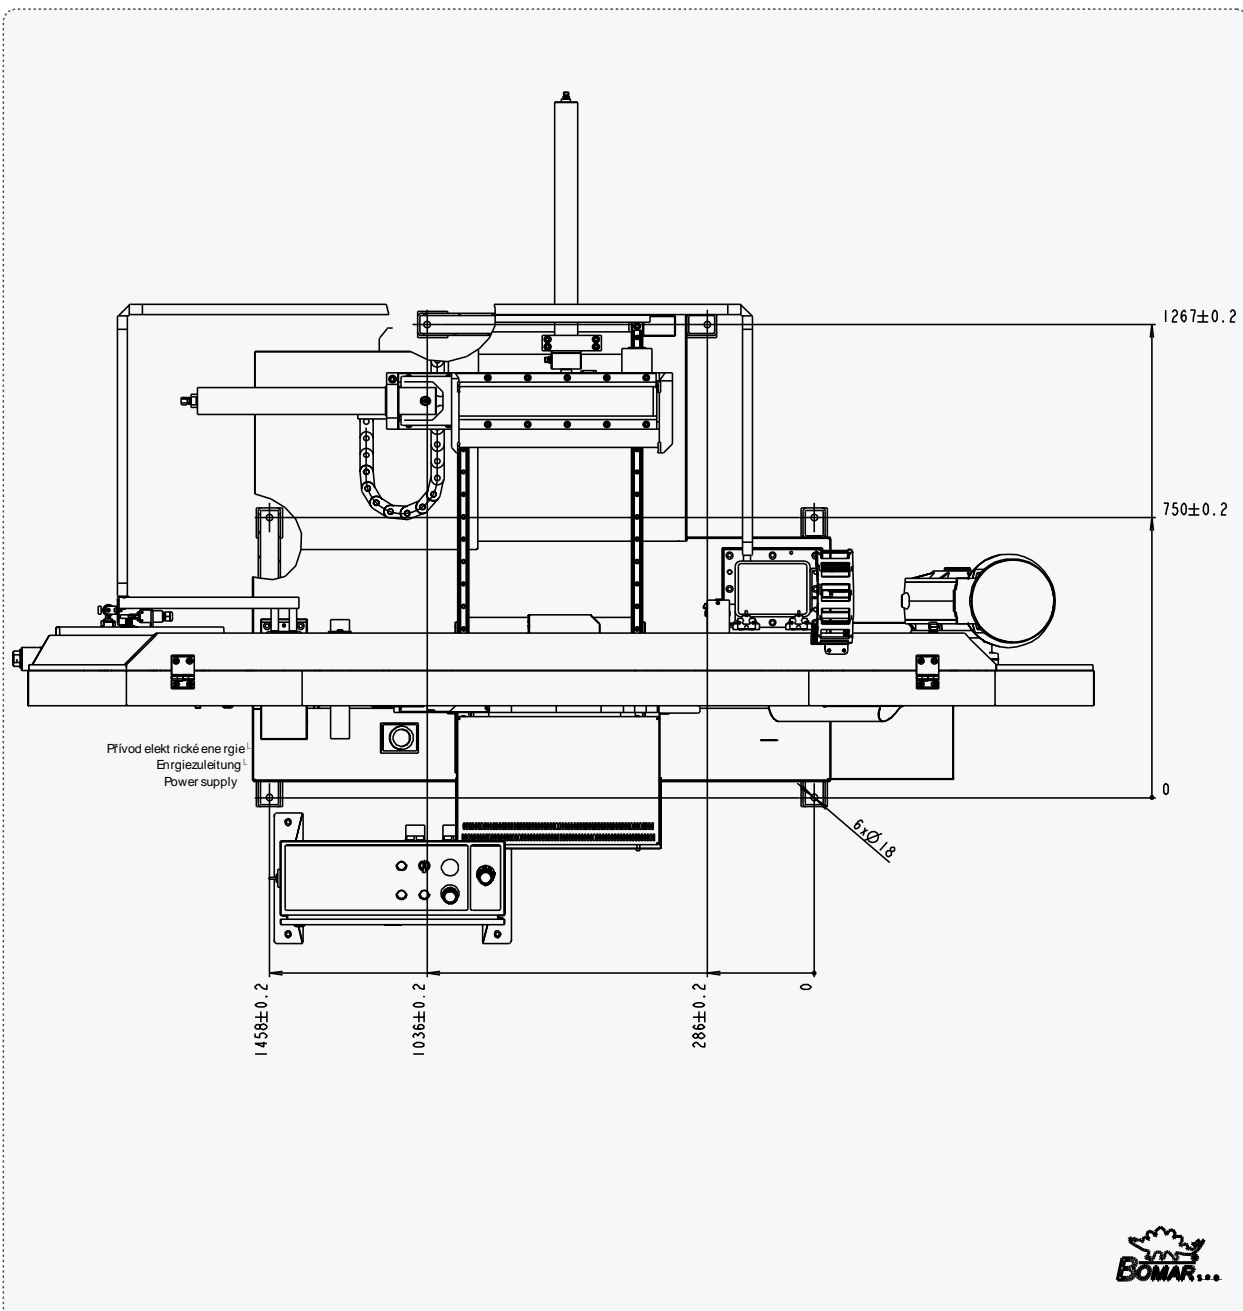

### Kotvící materiál / Verankerungsmaterial / Grounding material

- 6x Hmoždina / Dübel / Plug –  $\varnothing 12$  mm
- Vrtáno do hloubky / In die Tiefe gebohrt / Drilled to – 95 mm
- Šrouby / Schraube / Screws – M16x135

- Šrouby podložit deskami o min. rozměrech P10x100-100
- Die Schrauben mit Platten mit Minimaldimensionen P10x100-100 unterlegen
  - Screw must be bolted with plates (min. dimensions P10x100-100)

### Požadavky na rovinnost podlahy / Anforderungen an die Bodenebenheit / Requirements for floor flatness

$\pm 10$  mm / 1 m

## 2.7. Electrical connection

### **Attention!**

**Only a qualified professional must carry out the servicing and repairs of the electric equipment! Take special care during work with electrical equipment. High voltage shock can have fatal consequences! Always keep notes about work safety.**

### **Electrical parameters of the machine:**

- Service voltage: ~ 3x400 V, 50 Hz, TN-C-S
- Total input / Max. fuse: 6 kVA / 25 A

Before connecting switch off the main switch of the power supply circuit for the machine and ensure dry place when doing connecting works!

### **Note:**

*The values of the crosscut of the conductor and the rated current are in the norms.*

*Service voltage must agree with the line voltage! Crosscut of the supply line must respond with rated current for max. machine load.*

### **Note:**

*The socket with the fork can be used only at the machines with the rated current less than 16 A and total input less than 3 kW.*

### **Attention!**

*In this case the extra main switch becomes primary and the main switch on the machine has only secondary function.*

In case the machine is connected with a direct connection, an extra main switch must be added which can be locked in zero position.

### 2.7.1. Check the direction of the saw band



After the machine has been successfully connected, briefly switch on the machine and put the driving engine of the band in the running position. The direction must be in accordance with the arrow direction on the saw band cover. In case the direction of the saw band does not match, two phases at the terminal strip must be switched.

### 2.7.2. Check machine connection into electrical network

## 2.8. Filling of the cooling system

Prepare the mixture of the water and the cooling liquid. Keep the concentration specified by manufacturer. Shift away the cover from the drainage hole. Fill the mixture of the water and the cooling liquid to the tank of the cooling system. Area of the tank for the cooling liquid is discovered from the chapter *Technical data*.

**Note:**

*If machine is equipped with microniser, fill microniser with prescribed cooling liquid. This made the Microniser ready for use.*

Let the drainage hole opened and with the sieve during operation, because it secures the right work of the cooling system. Filling the tank with the cooling liquid, take care that the liquid does not drip out of the tank and the tank does not overflowed.

## 2.9. Check machine function

Check, if the machine or some parts of the machine were not damaged during transport.

Check, if covers are installed and functional. Check by means of the Tenzomat if the saw band is correctly stretched. If it is necessary, you can stretch the saw band according to chapter *Selection and replacement of the saw band*. Values of the saw band stretching are on the Tenzomat. Switch on the main switch and check the motors and systems (saw band drive, hydraulic pump, cooling pump, chips conveyor).

Open and close the main vice. Turn the saw frame of the band saw from one outer position to other outer position. Raise the saw frame to the top position and drop the saw frame to the lowest position.

Start the machine with the cooling pump and let it run without load until the cooling system will be filled with cooling liquid. As soon as the cooling liquid starts to escape from the nozzles of the cooling system, the cooling system is ready for the operation. Carry one cycle of cutting without material. Check, if the machine runs with no irregularities. If all machine functions are right, the machine is ready for operation..

## 2.10. Saw band

Refit the saw band cover only after you have installed and tightened the saw band.



### 2.10.1. Saw band size

**6020x41x1,3 mm**

### 2.10.2. Selection of the saw band tooth system

**Attention!**

*When you connect the machine to the electrical network observe correct connection of all phases!*

**ENGINE IN IN HYDRAULIC AGGREGATE CANNOT BE OPERATED WITH REVERSE TURNING MORE THEN 10 SECONDS!!!**

The manufacturers provide the saw bands with constant and variable tooth system. The important factor for selection of the tooth system is length of the cutting canal with respect to the size of the product

***BOMAR recommended Variable tooth system for band saw.***

1. *Constant tooth system* – the saw band has parallel tooth pitch all over length. This way is suitable for cutting of solid material.
2. *Variable tooth system* – tooth pitch is variable. Variable tooth system is used for profiled materials and bundle cutting. Variable tooth pitch lowers vibration of the saw band, increases service life of the saw band and quality of the cutting area.

In tables, there are advised type of the tooth system depending on sizes and form of the cutting material.

**Footnotes:**

Z<sub>p</sub>Z – teeth number on one inch S – tooth with zero angle of the teeth K – tooth with positive angle of the teeth



#### Examples of the tooth system marking:

32 S – number „32“ means 32 teeth on one inch (that means constant tooth system), letter „S“ marks teeth with zero angle of the tooth.


4–6 K – number „4–6“ means 4 till 6 teeth on one inch (that means variable tooth system); letter „K“ marks teeth with positive angle of the teeth.

#### 2.10.3. Saw band running-in












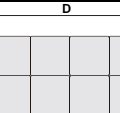
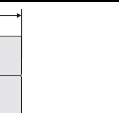
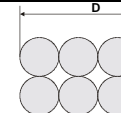
**Running-in:** Cut the material with the frame lowering reduced to 50% only. When vibrations occur increase or decrease the band speed.

**Note:** Run regrinding saw bands too.

When cutting small pieces run the band until approximately 300 cm<sup>2</sup> of material has been cut. When cutting large pieces run the band for 15 minutes approximately. When the band has been run, increase the lowering-speed to normal speed. The running in of the saw band avoids micro-breaks on the cutting edges of new saw band ensuing from first excessive stress. This would decrease service life substantially. The optimal running in of the saw band produces ideal rounded cutting edges and therefore the conditions for an optimal service life.



## 2.10.4. Tables for teeth selection

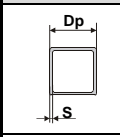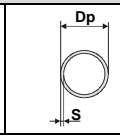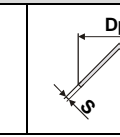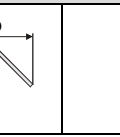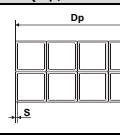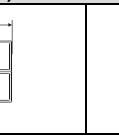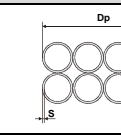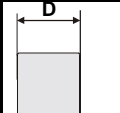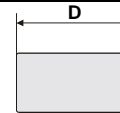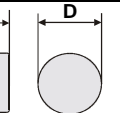
SHAPED MATERIAL ( $D_p, S = \text{mm}$ )						
						
Note: Table shows tooth system selection for cutting one piece of the profile. For cutting of more pieces of the profiles (bundle), you must think of the size of the wall as double size of the wall of one profile (that means, size „S“ equates to 2xS). In table, there are tooth systems constant and variable.						
Size of the wall S [mm]	Tooth system ( $Z_pZ$ ) Outer diameter of the profile $D_p$ [mm]					
	20	40	60	80	100	120
2	32 S	24 S	18 S	18 S	14 S	14 S
3	24 S	18 S	14 S	14 S	10-14 S	10-14 S
4	24 S	14 S	10-14 S	10-14 S	8-12 S	8-12 S
5	18 S	10-14 S	10-14 S	8-12 S	6-10 S	6-10 S
6	18 S	10-14 S	8-12 S	8-12 S	6-10 S	6-10 S
8	14 S	8-12 S	6-10 S	6-10 S	5-8 S	5-8 S
10	-	6-10 S	6-10 S	5-8 S	5-8 S	5-8 S
12	-	6-10 S	5-8 S	5-8 S	4-6 K	4-6 K
15	-	5-8 S	5-8 S	4-6 K	4-6 K	4-6 K
20	-	-	4-6 K	4-6 K	4-6 K	3-4 K
30	-	-	-	3-4 K	3-4 K	3-4 K
50	-	-	-	-	-	3-4 K
Size of the wall S [mm]	Tooth system ( $Z_pZ$ ) Outer diameter of the profile $D_p$ [mm]					
	150	200	300	500	750	1000
2	10-14 S	10-14 S	8-12 S	6-10 S	5-8 S	5-8 S
3	8-12 S	8-12 S	6-10 S	5-8 S	4-6 K	4-6 K
4	6-10 S	6-10 S	5-8 S	4-6 K	4-6 K	4-6 K
5	6-10 S	5-8 S	4-6 K	4-6 K	4-6 K	3-4 K
6	5-8 S	5-8 S	4-6 K	4-6 K	3-4 K	3-4 K
8	5-8 S	4-6 K	4-6 K	3-4 K	3-4 K	3-4 K
10	4-6 K	4-6 K	4-6 K	3-4 K	3-4 K	2-3 K
12	4-6 K	4-6 K	3-4 K	3-4 K	2-3 K	2-3 K
15	4-6 K	3-4 K	3-4 K	2-3 K	2-3 K	2-3 K
20	3-4 K	3-4 K	2-3 K	2-3 K	2-3 K	2-3 K
30	3-4 K	2-3 K	2-3 K	2-3 K	1,4-2 K	1,4-2 K
50	2-3 K	2-3 K	2-3 K	1,4-2 K	1,4-2 K	1,4-2 K
75	-	2-3 K	1,4-2 K	1,4-2 K	1,4-2 K	0,75-1,25 K
100	-	-	1,4-2 K	0,75-1,25 K	0,75-1,25 K	0,75-1,25 K
150	-	-	-	0,75-1,25 K	0,75-1,25 K	0,75-1,25 K
200	-	-	-	0,75-1,25 K	0,75-1,25 K	0,75-1,25 K
SOLID MATERIAL ( $D = \text{mm}$ )						
						
Constant tooth system			Variable tooth system			
length of the cut D	tooth system ( $Z_pZ$ )		length of the cut D	tooth system ( $Z_pZ$ )		
to 3 mm	32		to 30 mm	10-14		
to 6 mm	24		20-50 mm	8-12		
to 10 mm	18		25-60 mm	6-10		
to 15 mm	14		35-80 mm	5-8		
15-30 mm	10		50-100 mm	4-6		
30-50 mm	8		70-120 mm	4-5		
50-80 mm	6		80-150 mm	3-4		
80-120 mm	4		120-350 mm	2-3		
120-200 mm	3		250-600 mm	1,4-2		
200-400 mm	2		500-3000 mm	0,75-1,25		
300-800 mm	1,25					
700-3000 mm	0,75					

## 3. Machine control



### 3.1. Starting the band saw


- »
- Switch on the main switch of the band saw. The main switch is placed on the switchboard side.

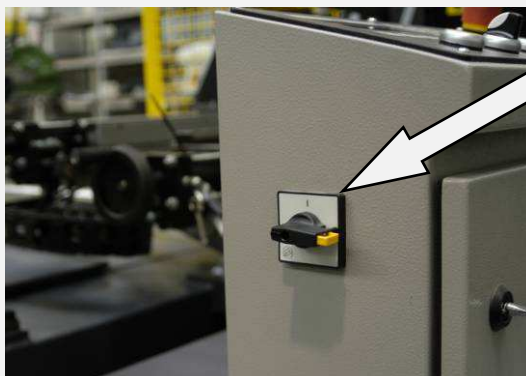


- Refer the machine

### 3.2. Machine referring


Before using the saw, you must refer machine. Referring is necessary for correct positioning of the saw feeders.

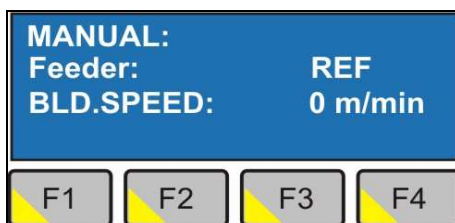


If the machine is not referred, it is not possible to move the feeder and on the LCD instead of a numeric value text REF.

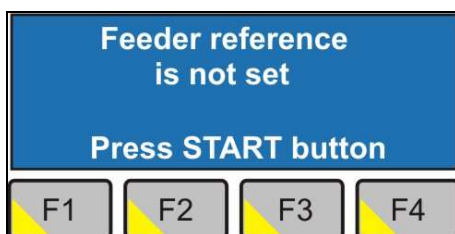



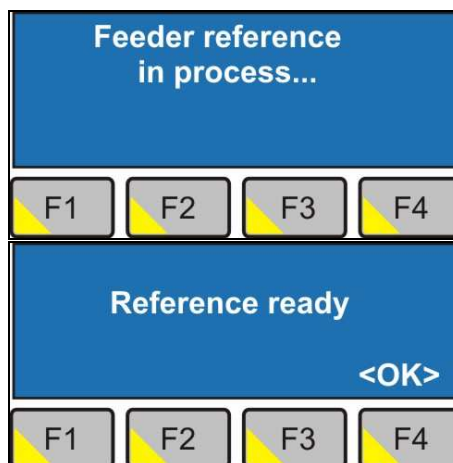



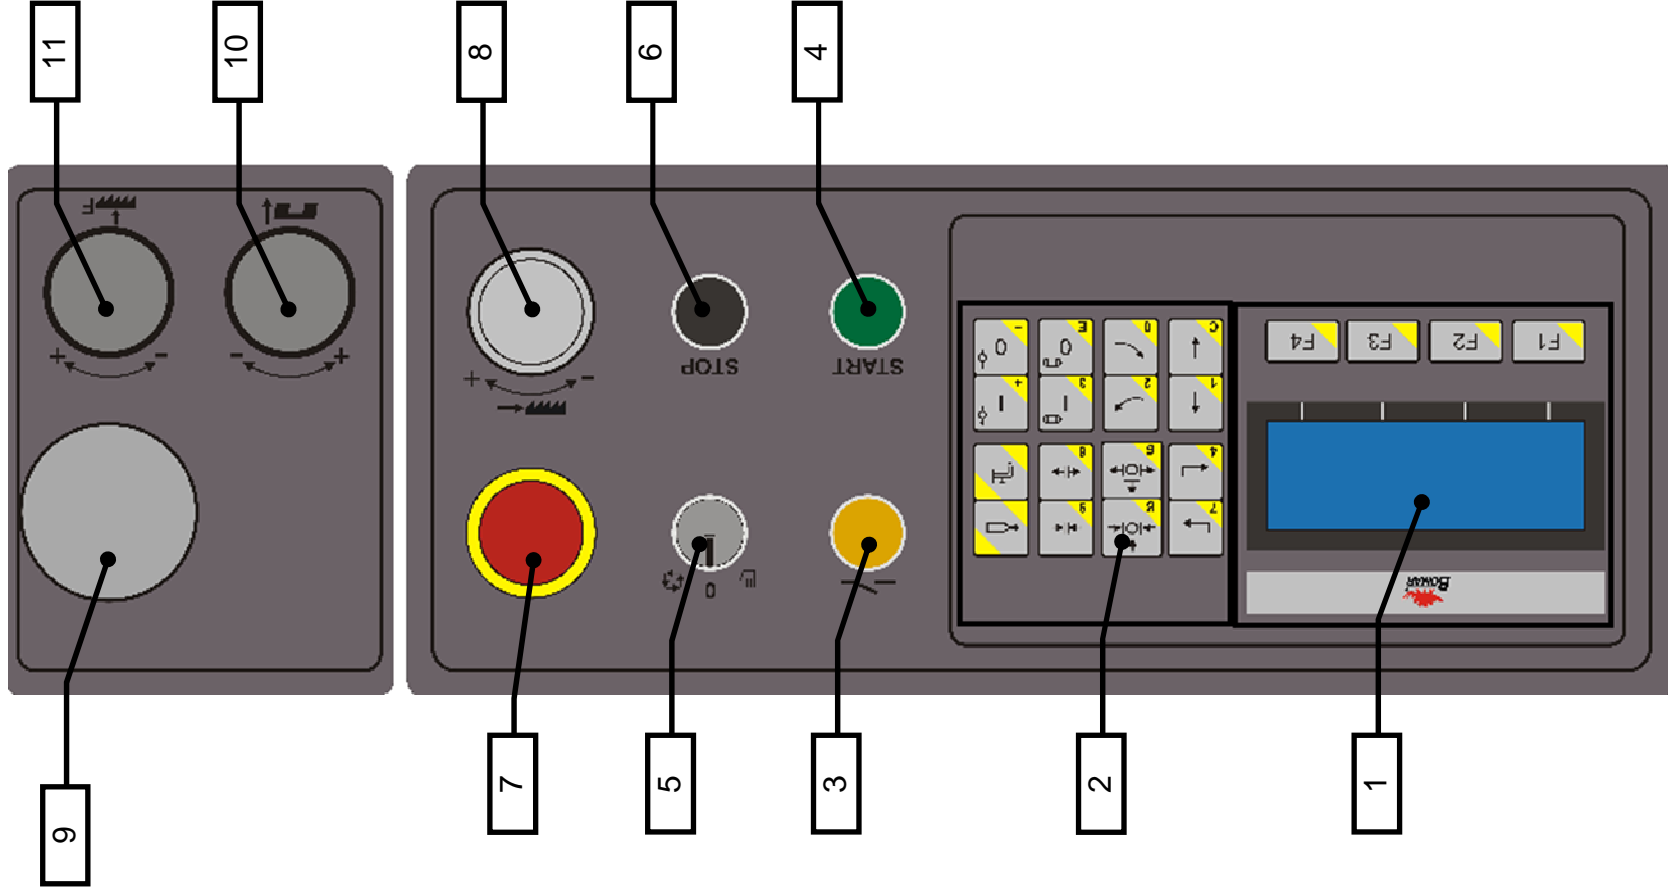


Operator is informed that the machine is not referred after machine start. For machine referring switch into automatic mode. Then START button begin flash. Press START button for begin referring process. After this process press F4 to confirm.


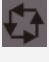


### 3.3. Control panel




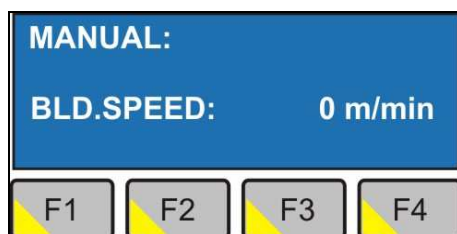
<b>1</b>	<b>LCD</b> LCD displays status information and menu.
<b>2</b>	<b>Control buttons / number keyboard</b>
	<b>Feeder movement</b> Pressing and holding button move with feeder to and from the machine (in manual mode)
	<b>Open/Clamp feeder vice</b> Pressing and holding button open or clamp feeder vice in manual mode.
	<b>Open/Clamp main vice</b> Pressing and holding button open or clamp full stroke vice in manual mode.
	<b>Cooling system selection</b> Top – Cooling with Microniser (optional accessories) Below – Cooling is switched on (even when the drive is not running).
	<b>Move saw frame up/down</b> Pressing and holding buttons rises or drops saw frame. As you move down, you can activate the rapid moving by pressing F1 button simultaneously with  .
	<b>No function</b>
	<b>Turn on / off saw blade</b> Button with symbol „I“ turn on saw blade drive, button with symbol „0“ turn off saw blade.
	<b>Turn on /off hydraulic circuit</b> Button with symbol „I“ turn on hydraulic circuit, button with symbol „0“ turn off hydraulic circuit. The hydraulic circuit is automatically switched on when needed.
<b>3</b>	<b>Safety circuit</b> Switch on the safety circuit by pressing button.
<b>4</b>	<b>START - Switch on the working cycle</b> Button push starts the cutting cycle Button STOP stops cutting cycle.



5	<b>Machine mode</b> 0 for service and setup  for manual mode  for automatic mode
6	<b>STOP - Switch off the working cycle</b> Stop cutting cycle.
7	<b>TOTAL – STOP button</b> In emergency causes the machine must be immediately switched off.
8	<b>Frequency convertor</b> Turn to change the speed of the saw band.
9	<b>Cutting pressure manometer</b>
10	<b>Governing valve</b> Adjust the speed of the arm sinking to the cut by governing valve. <b>ATTENTION!</b> If you keep closing the throttle valve too tightly, the valve seat may wear off which causes its leakage. Therefore, close the valve always gently.
11	<b>Cutting pressure regulation</b> Adjust the arm pressure to the cut.

### 3.4. Machine control in manual mode

- Switch machine into manual mode – key switch on control panel on .



- The LCD displays the following menu, where is information about the selected cutting speed.
- All movements are controlled by an operator using the control panel, see chapter Control panel.
- Manual mode serves primary for material loading into machine

#### Procedure for material loading before automatic cycle:

- Before material insertion, open both vices into maximal to the position what is needed to insert material open.
- Clamp material with both vices.

**Attention!**  
**Feeder vice must be clamped before main vice.**


- Switch the machine in automatic mode and and follow the procedure for the automatic cycle.

### 3.5. Machine control in automatic mode

**Attention!**

*Before the automatic cycle, the material must be clamped with both vices.*

1. Switch machine into automatic mode – key switch on control panel on

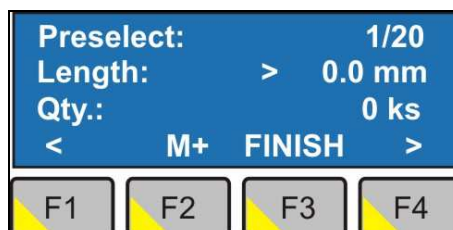

2. The LCD displays the following menu. The Preselect indicates the current program. The system can store up to 20 programs, move between them using the F1 and F4. F2 key (M +) saves all program values in the system. Press button F3 (Finish) on program what will be performed first in automatic mode.



3. After entering the programs values and after F3 (Finish), the operator is asked to perform trim cut. F4 not perform trim cut.



4. If the operator chose the trim cut on LCD is info about the progress. After the completion of trim cut, confirm by button F4.



5. Now begins the automatic cycle. It begins by pressing the START button. The work cycle begins on the program, where was editing completed by button F3 (END) and ends on the last non-zero program. *Example: I edited program no. 2 last time (F3 was pushed on program no.2), program no. 3 and 4 has correct values, programs no. 5, and more are empty. Control system loads program no. 2 then program no. 3 and last performed program is no. 4.*





6. The operator is informed about the automatic cycle on the LCD.



7. After completing automatic cycle, operator may enter new values for the next cycle (F4).



8. If the automatic cycle has finished and there is no material available for another cut, information on the material missing appears on the LCD.
9. To load the material, it is necessary to turn the mode switch (key) on the control panel to the manual mode position  and load the material in the manual mode by the above described procedure.
10. To proceed to the automatic mode after manual load-in, it is necessary to turn the mode switch (key) on the control panel back to the automatic mode position. 



11. The LCD shows information that the automatic cycle has been interrupted.

On this screen, you can choose

- F1 to enter another new automatic cycle
- or F4 to proceed with the automatic cycle entered.



12. If F4 is selected – the automatic cycle entered continues – a screen appears with the menu of how to start the cutting cycle:

- by pushing the “**Start**” button on the control panel, you choose beginning of the cutting cycle **with material cut-in**;
- **F4** is a choice of starting the cutting cycle **without material cut-in**.



13. If the operator has chosen material cut-in, the LCD shows information on its course; subsequently, after the cut-in has been completed, the operator is asked to confirm it by pushing the F4 button.

Further steps are identical with the above described steps No. 5, 6, 7.

### 3.5.1. Final cutting of material of short lengths at automatic cycle

If material with very short lengths is cut the end of the material is located behind the laser barrier at the feeder. The laser barrier can't detect the end of the material.


The machine reports "No material" and it is impossible to run the machine.

Thus it is necessary to cover the laser barrier by the shutter installed at the machine.

Then machine control can go in a standard way.



It is necessary to lift the shutter after final cut.

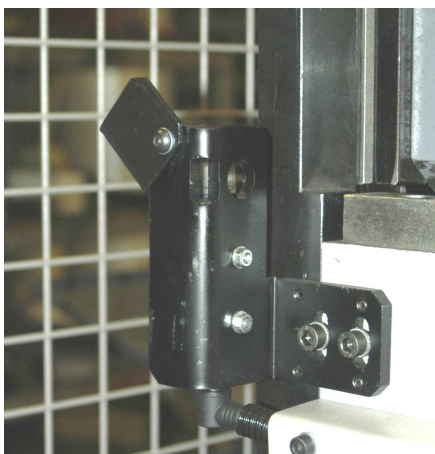


### 3.5.2. Cycle breaking

- »
- **STOP button**  
 Semi-automatic cycle is interrupted by pressing button **5 – STOP** of the cycle  
  
 The arm stops fall into cut and saw blade is stopped.  
  
 By pressing button **4 – START of the working cycle**, you can start the cycle.
  - **TOTAL STOP button**  
 In case of the risk, press button **TOTAL STOP**.  
  
 After pressing **TOTAL STOP** button, saw band drive is immediately broken and the arm sinking is stopped.
  - **Reactivation**
    4. Turn button **TOTAL STOP** according to the arrows (on the button).
    5. Lift saw arm above cut material and push **START** button.

### 3.6. Machine setup



Setup mode is activated by switching mode selection switch to position 0. After the switch is in position 0 on LCD is displayed:

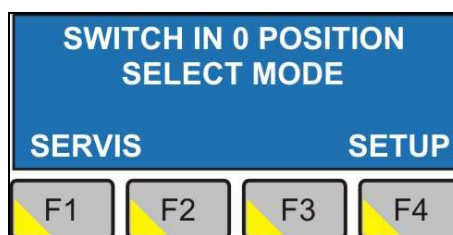

Parameters in the menu SERVICE are password protected. The parameters in the SETUP menu are common and are not password protected.

**Password: 947**

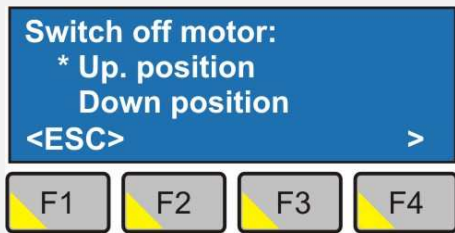




#### 3.6.1. SETUP

on LCD	Description
	<p><b>Turn off saw blade drive after cut:</b></p> <ul style="list-style-type: none"> <li>• Up. position – saw blade lifts after cut and saw blade drive is turned off above material.</li> <li>• Down position – saw blade drive is turned off immediately after cut.</li> <li>• <b>F1</b> back, <b>F4</b> next option</li> </ul>
	<p><b>Cooling</b></p> <ul style="list-style-type: none"> <li>• Do not use – cooling is off, suitable for cutting special materials such as cast iron</li> <li>• With saw blade engine – when the blade is running, also cooling pump is running.</li> <li>• <b>F1</b> back, <b>F4</b> next option</li> </ul>

on LCD	Description
<div style="background-color: #0056b3; color: white; padding: 5px; text-align: center;"> <b>Swarf conveyer:</b>            * Not use            With bandsaw motor            &lt; Complete cycle &gt;         </div> <div style="display: flex; justify-content: space-around; margin-top: 5px;"> <div style="background-color: #cccccc; padding: 2px 5px;">F1</div> <div style="background-color: #cccccc; padding: 2px 5px;">F2</div> <div style="background-color: #cccccc; padding: 2px 5px;">F3</div> <div style="background-color: #cccccc; padding: 2px 5px;">F4</div> </div>	<b>Swarf conveyer</b> (optional accessories) <ul style="list-style-type: none"> <li>Do not use swarf conveyer</li> <li>With band saw motor – when the blade is running, also swarf conveyer is running.</li> <li><b>F1</b> back, <b>F4</b> next option</li> </ul>
<div style="background-color: #0056b3; color: white; padding: 5px; text-align: center;"> <b>Switch off hydraulic:</b>            * 5 min            30 min            &lt; don't switch off &gt;         </div> <div style="display: flex; justify-content: space-around; margin-top: 5px;"> <div style="background-color: #cccccc; padding: 2px 5px;">F1</div> <div style="background-color: #cccccc; padding: 2px 5px;">F2</div> <div style="background-color: #cccccc; padding: 2px 5px;">F3</div> <div style="background-color: #cccccc; padding: 2px 5px;">F4</div> </div>	<b>Switch of time for hydraulic unit:</b> <ul style="list-style-type: none"> <li>5 min. – 30 min. – do not turn off</li> <li><b>F1</b> back, <b>F4</b> next option</li> </ul>
<div style="background-color: #0056b3; color: white; padding: 5px; text-align: center;"> <b>Piece cut of correction:</b>            1.5 mm            &lt; &lt;OK&gt; &gt;         </div> <div style="display: flex; justify-content: space-around; margin-top: 5px;"> <div style="background-color: #cccccc; padding: 2px 5px;">F1</div> <div style="background-color: #cccccc; padding: 2px 5px;">F2</div> <div style="background-color: #cccccc; padding: 2px 5px;">F3</div> <div style="background-color: #cccccc; padding: 2px 5px;">F4</div> </div>	<b>Piece cut off</b> <ul style="list-style-type: none"> <li>The settings for the proper cut lengths in automatic mode</li> <li>Saw blade thickness</li> <li><b>F1</b> back, <b>F4</b> next option</li> </ul>
<div style="background-color: #0056b3; color: white; padding: 5px; text-align: center;"> <b>Language HMI:</b>            Cesky            * English            &lt; Deutsch &gt;         </div> <div style="display: flex; justify-content: space-around; margin-top: 5px;"> <div style="background-color: #cccccc; padding: 2px 5px;">F1</div> <div style="background-color: #cccccc; padding: 2px 5px;">F2</div> <div style="background-color: #cccccc; padding: 2px 5px;">F3</div> <div style="background-color: #cccccc; padding: 2px 5px;">F4</div> </div>	<b>Language:</b> <ul style="list-style-type: none"> <li>Choose control menu language</li> <li><b>F1</b> back, <b>F4</b> next option</li> </ul>
<div style="background-color: #0056b3; color: white; padding: 5px; text-align: center;"> <b>SPEED DISPLAYING:</b>            * m/min            ft/min            &lt; &gt;         </div> <div style="display: flex; justify-content: space-around; margin-top: 5px;"> <div style="background-color: #cccccc; padding: 2px 5px;">F1</div> <div style="background-color: #cccccc; padding: 2px 5px;">F2</div> <div style="background-color: #cccccc; padding: 2px 5px;">F3</div> <div style="background-color: #cccccc; padding: 2px 5px;">F4</div> </div>	<b>Units for saw blade speed</b> <ul style="list-style-type: none"> <li>m/min or ft/min</li> <li>restart machine to apply change</li> <li><b>F1</b> back, <b>F4</b> next option</li> </ul>
<div style="background-color: #0056b3; color: white; padding: 5px; text-align: center;"> <b>LENGTH DISPLAYING:</b>            * mm            inch            &lt; &gt;         </div> <div style="display: flex; justify-content: space-around; margin-top: 5px;"> <div style="background-color: #cccccc; padding: 2px 5px;">F1</div> <div style="background-color: #cccccc; padding: 2px 5px;">F2</div> <div style="background-color: #cccccc; padding: 2px 5px;">F3</div> <div style="background-color: #cccccc; padding: 2px 5px;">F4</div> </div>	<b>Units for lengths</b> <ul style="list-style-type: none"> <li>mm or inches</li> <li>restart machine to apply change</li> <li><b>F1</b> back, <b>F4</b> next option</li> </ul>

### 3.6.2. SERVIS (password)

on LCD	Description
<div style="background-color: #0056b3; color: white; padding: 5px; text-align: center;"> <b>SERVIS:</b>  <b>FEEDER LENGTH:</b>            602 mm            &lt;ESC&gt; &lt;OK&gt; &gt;         </div> <div style="display: flex; justify-content: space-around; margin-top: 5px;"> <div style="background-color: #cccccc; padding: 2px 5px;">F1</div> <div style="background-color: #cccccc; padding: 2px 5px;">F2</div> <div style="background-color: #cccccc; padding: 2px 5px;">F3</div> <div style="background-color: #cccccc; padding: 2px 5px;">F4</div> </div>	<ul style="list-style-type: none"> <li><b>Feed length</b> – Specifies the length of the feeder. Do not change parameter – is set from the factory.</li> <li><b>F1</b> back, <b>F4</b> next option, <b>F2</b> save current option</li> </ul>

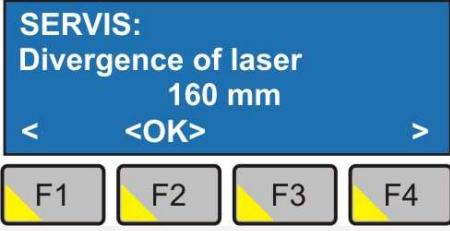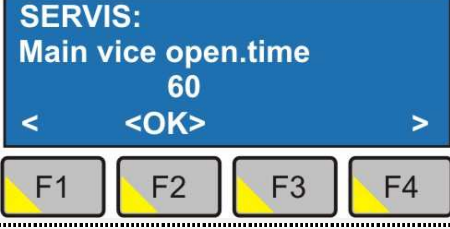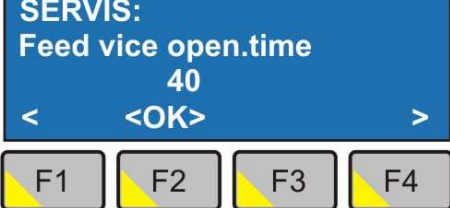on LCD	Description
	<ul style="list-style-type: none"> <li>• <b>Speed correction</b> – could be set in range 0–250, displayed constant is for the calculation belt speed from the analog input.</li> <li>• <b>F1</b> back, <b>F4</b> next option, <b>F2</b> save current option</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>ELGO</b> – feeder position admeasurement. <b>Do not change!</b></li> <li>• For service purposes. Displays a variable number of linear pulse measurements</li> <li>• <b>F1</b> back, <b>F4</b> next option, <b>F2</b> save current option</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Laser deviation</b></li> <li>• The laser is placed behind the feeder vise jaws</li> <li>• The value affects multiple feeding. <b>Do not change!</b></li> <li>• <b>F1</b> back, <b>F4</b> next option, <b>F2</b> save current option</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Opening time for main vice.</b></li> <li>• Opening time is in milliseconds.</li> <li>• <b>F1</b> back, <b>F4</b> next option, <b>F2</b> save current option</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Opening time for feeding vice</b></li> <li>• Opening time is in milliseconds.</li> <li>• <b>F1</b> back, <b>F4</b> next option, <b>F2</b> save current option</li> </ul>

If you choose to change the keyboard units from "inch" to "mm", there is no automatic conversion of constants in machine setup „Servis“ and „Setup“.

It is necessary to calculate by the formula: 1 inch=25,4 mm a 3,28 ft/min=1m/min.

It is necessary to calculate these values:

Machine setup „Servis“:

- Piece cut of correction (when calculating the unit "inch" rounded to 1 decimal place = 0.0 inch)




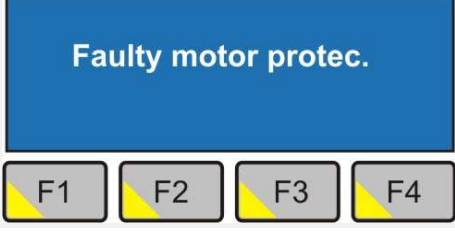
Machine setup „Setup“:

- Feeder length (when calculating the unit "inch" it has to be rounded to 1 decimal place = 0.0 inch)
- Speed correction (when calculating the unit "inch" it has to be rounded to 1 decimal place = 0.0 inch)
- Divergence of laser (when calculating the unit "inch" it has to be rounded to 3 decimal places = 0.000 inch)



- Feeding correction (when calculating the unit "inch" it has to be rounded to 3 decimal places = 0.000 inch )

### 3.7. Error messages

Error	Description
	<p>The safety circuit is not turned on (pos. 2 on control panel). Push safety circuit button (on pos. no. 2 on control panel) to remove error message.</p>
	<p>Total Stop button is active – pushed. Turn TOTAL STOP button by the arrows, and disable it. Press F4 to confirm the disorder.</p>
	<p>Saw belt not is properly tensioned. Remove the fault and press F4 to confirm.</p>
	<p>Motor overload, thermal protection is activated. Do not overload blade engine! Remove the fault and press F4 to confirm.</p>

### 3.8. Band saw adjusting

#### 3.8.1. Adjusting band guides

If you want to achieve a smooth and precise cut, it is helpful to position the guide cube as close as possible to the material.




14. Release the stopping lever of the listel. Move the left part of the guide so that the left edge of the guide blocks is as close as possible cutted material.

15. Lower the frame to the lower position and check the position of the guide cube towards vice loading area. The guide cube must be a distance of at least 10 mm from the vice loading area.
16. Tighten the lever of the gib and check the guide cube setting once more for possible collision with binding table or vice jaw.

### 3.8.2. Cutting speed adjusting

Blade speed is possible adjusted continuously from 20 to 120 m / min.

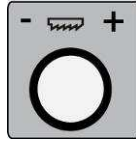

Use the frequency converter on control panel (pos. 6) to adjust requested speed of the saw band.

### 3.8.3. Adjustment of pressure to the cut

The band saw **Proline 520.450 ANC** is equipped with cutting pressure regulation on the one guiding cube

**Notice!**

*The guide cubes are equipped with valves, which must be open during operation*

Pressure adjusting is performed with regulating screw on guiding cube.

- **Lower pressure to the cut** – turn the screw clockwise.
- **Higher pressure to the cut** – turn the screw contra-clockwise.

### 3.8.4. Speed adjustment of the arm lowering

Speed of the arm lowering is adjusted by regulation valve on control panel


- Set the **lower speed** of the arm lowering to the cut by turning the switch **clockwise**.
- Set the **higher speed** of the arm lowering to the cut by turning the switch **anti-clockwise**.

**Notice:**

*If you keep closing the throttle valve too tightly, the valve seat may wear off which causes its leakage. Therefore, close the valve always gently.*

### 3.8.5. Brush adjustment

The brush for chip removal from the saw band influences cutting durability saw band lifetime and wheels lifetime, hard metal guides and finally the cut accuracy. Brush adjustment must be checked every shift.

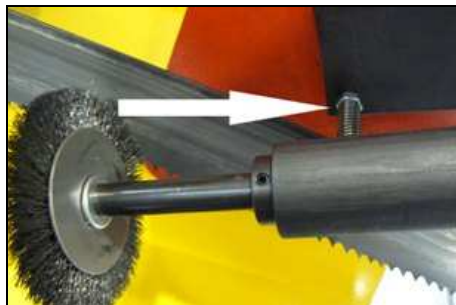

17. Release the fixative screw of the brush. It is possible to move with the brush.
18. Set the brush to the saw band according to the picture.

**Attention!**

The brush **must not** touch the bottom of the saw teeth!

19. Tighten the fixative screw.
20. In case, that the brush is not turned right (driving wheel slips on the driving wheels of the saw band), push by means of the screw (see arrow) driving wheel of the brush to the driving wheel of the saw band.

**Attention!**

The screw **must not** be tightened with heavy force, because driving wheel of the brush can be damaged or the lifetime of the bearings of the driving wheel of the band can be lowered!


### 3.9. Material insertion

- Never walk under a suspended load!
- Never climb onto the gravity-roller conveyor!
- Do not hold the material for clamping material to the vice! The vice can cause injury!

#### 3.9.1. Handling agent selection

- Use the strong handling agents to lift and transfer the material!
- Handle with the material only with the lift truck or use the suspension strands and the crane!
- Do not use the lift truck or crane in case that you do not have the license to handle with it!

#### 3.9.2. Insertion

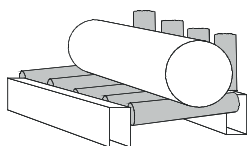

Insert material to the vice and ensure that the material cannot move in the vice or fall from the vice after the clamping. If you cut long pieces of the material (for example rod, tube), you must use the roller conveyors for material shifting to the band saw. Contact Bomar for more information about roller conveyors

Make sure the conveyor is long enough and the material cannot tip off the conveyor.

Be especially careful with round materials that it always stays on two vertical rollers and that it cannot fall off the conveyor!


### 3.9.3. Bundle material cutting

**Attention:**

*Manual bundle clamping device is not standard equipment. Without this device is a not possible cut bundle.*


**Attention!**

*If machine has bundle device then material maximal height is half.*



If you want to cut the material in the bundle, there are suggestions for the positioning of bundles

*Round material bundle:* Take care especially with round material that the bars are put according to the picture. If the bars are put differently, you may have problems with movement.



Always weld the material at the rear end of the bundle to secure it from moving.

Before welding always, switch the machine off at the main switch! The magnetic fields, which often occur during welding, may damage the controls!

**Attention:**


*Not all material shapes are suitable for bundle cuts. Keep the recommendation of your supplier of the saw bands for material insertion to the bundle.*

### 3.9.4. Supporting roller

When short pieces are going to be cut, the supporting roller has to be mounted to avoid falling down of material from the track.

Feeding length is then limited to 550 mm (one stroke for short piece).

The roller has to be mounted to position on the track so that the tightening lever will be on the fixed side of feeder's jaw (from the rear view).

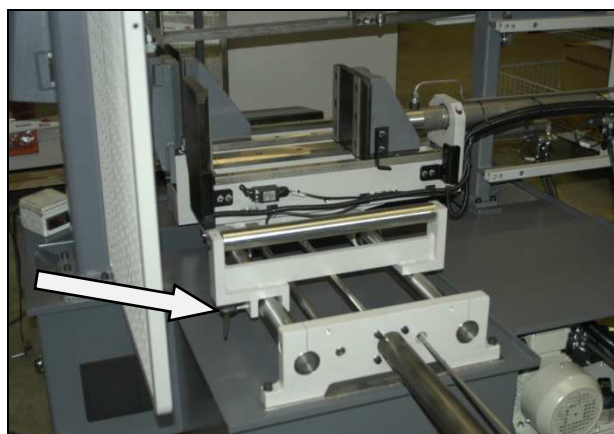



## 4. Machine service





## 4.1. Saw band dismantling

During the dismantling, take care that you do not damage the limit switch if the saw band stretching.

1. Lift the saw frame to the top position. Stop the saw frame in top position by control valve.



2. Dismantle yellow protective cover of the saw band. The cover is clamped with two screws.



3. Open the cover of the arm.
4. Turn by stretching star to the left side, release saw band stretching and pull saw band from blade wheels.



5. Pull up the saw band from the guiding cubes

## 4.2. Saw band instalation

During the installation, take care that you do not damage the limit switch if the saw band stretching!

1. Prior to installation, clean all track wheels, guide cubes and inner side of the arm thoroughly of all traces of chips and dirt. **Keep in mind the teeth direction when installing the saw band.**



2. Insert new saw band in the guide cubes. Make sure the saw band runs between both guide rollers and it is pushed all the way to the top.



3. Put the saw band on both guide wheels. Make sure that the saw band ridge fits tightly to the wheel rim. Then push the saw band as far back as possible.
4. By turning the stretching star to the right, you will stretch the saw band slightly. Remove the plastic cover of the saw band teeth.
5. Close the cover of the arm.



6. Install the yellow protective cover of the band. The arrow on the cover must match the direction of the arrow on the band. If it does not, you must turn the band round.

### 4.3. Saw band stretching and inspection

Right saw band stretching is one of the most important criteria's, which influents accuracy and saw band service life. Stretch the saw bands according to the selected saw band and the band saw. Keep the recommendation of your manufacturer.

#### 4.3.1. Saw band stretching

1. The saw band must not fall from the wheels after setting.
2. Install the Tenzomat on the saw band and secure it with screws.



3. Stretch the saw band until it is stretched to the recommended value


### 4.4. Saw band run adjustment on stretching wheel

Saw band run on the stretching wheel must be regularly inspected. The inspection has to follow every saw band replacement.

#### 4.4.1. Saw band run inspection

If the run is not correct, the following problems may occur:

- **The saw band falls from the wheels** – The saw band and protective cover can be damaged.
  - **The saw band runs on the wheel rim** – The saw band and wheel rim can be damaged
1. Start and stop saw band drive.
  2. Stop the main switch!
  3. Open rear cover of the saw frame.

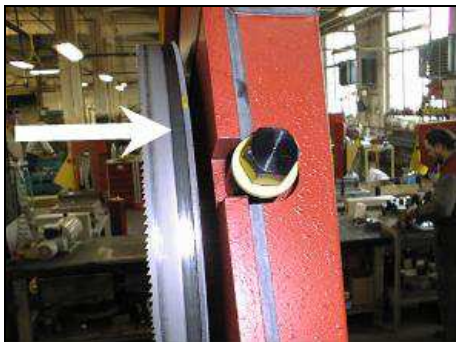

4. Check saw band placing on the wheels.
  - If the distance of the rear part of the saw band from wheel rim is 1 – 3 mm, setting is right.
  - If the distance is bigger than 3 mm, or the saw band runs on the wheel rim, saw band run must be set.

#### 4.4.2. Saw band setting



The saw band run is set with screw in the stretching cube on the saw frame. Optimal distance has been determined at **1 – 3 mm**.

- Turn by screw to the right, the saw band approximates to the stretching wheel rim.
- Turn by screw to the left, the saw band departs from the stretching wheel rim.

Check saw band run again after setting.

#### 4.5. Saw frame lower stop position adjustment

The lower stop limits the lowest position of the saw frame. This stop point has to be checked at least once a month. If the lower stop point is incorrectly adjusted, the cutting table can be damaged or the material will not be cut completely

1. Lift the saw frame to the top position.
2. Release the nut of the screw and set it to the desired value.
3. Secure the screw with nut.

4. Set the limit switch of the saw frame lower position.

#### 4.6. Limit switch of the saw frame lower position adjustment

If the lower stop of the saw frame was set, the limit switch must be set again.

##### 4.6.1. Check setting

Lower the saw frame to the bottom position. If the saw frame is on the lower stop and the limit switch was responded, the limit switch adjustment is right. If the limit switch is not right, it must be set.

##### 4.6.2. Limit switch setting

1. Release the nut of the stop screw of the switch and screw on the screw.
2. Lower the saw frame to the lower stop. Start the saw band drive.
3. Screw off the stop screw of the switch, until the saw band drive is not stopped.
4. Secure the screw with the nut and check limit switch adjustment again.

#### 4.7. Cooling agents and chips disposal

The quality of the cooling agent will deteriorate due to:	If the solution is too weak:	If the solution is too strong:
<ul style="list-style-type: none"> <li>• use of contaminated water</li> <li>• impurity</li> <li>• outside oil contamination (hydraulics, gears)</li> <li>• high operating temperatures</li> <li>• lack of air circulation</li> <li>• wrong concentration</li> </ul>	<ul style="list-style-type: none"> <li>• corrosion protection is diminished</li> <li>• lubrication decreases</li> <li>• microbial attack is more likely</li> </ul>	<ul style="list-style-type: none"> <li>• the cooling ability is decreased</li> <li>• foam behavior increases</li> <li>• emulsions stability deteriorates</li> <li>• sticky residue develops</li> </ul>

##### 4.7.1. Coolant device inspection

The state of the cooling agent has significant influence on the cutting quality and on the operational life of the machine. Lifetime of the cooling liquid is 1 year, after this time we recommend change the cooling liquid. This time is dependent on the degree of pollution cooling liquid (especially with oils) and on the other factors.

**Check level of the cooling liquid and function of the pump periodically!**

**Note:**

*If the state of the cooling liquid is not satisfactory, the cooling liquid must be changed.*

Check the state of the cooling agent according to the following table:

Testing	Interval	Method	Condition	Precaution
Liquid level	daily	visually	too low	after concentration check, refill with water or emulsion
Concentration	daily	refractometer densimeter	too high too low	refill water refill base emulsion
Smell	daily	by sense of smell	unpleasant smell	good ventilation, add biocides or renew coolant
Contamination	daily	by sense of smell	visible oil leaks, sludge fungi	surface cleaning, fix leaks, add biocides or fungicides, or coolant renewal after added system cleanser*

<b>Corrosion-protection</b>	when necessary	visually chip test Herbert-test	insufficient corrosion protection	test stability, if necessary – increase concentration or pH value
<b>Stability</b>	when necessary	refractometer	oiling	add concentrate, enquiries to supplier
<b>Foam reaction</b>	when necessary	shaking test	too much foam, foam disperses too slowly	avoid aeration, increase water hardness, ix with defoamer

\* According to manufacturers' instructions

#### 4.7.2. Chips disposal

Chips resulting from cutting operations must be disposed of in accordance with the relevant regulations.

- Let the chips drip excess fluid!
- Fill a watertight container with the chips! Be careful that the container does not leak, because even after a long dripping time, they still contain coolant residue.
- *Place the container into the care of a disposal company equipped for the disposal of chips contaminated with cooling liquid.* In case the machine is equipped with micro-spray installation, the chips must also be handed over to a disposal company.

### 4.8. Hydraulic, Greases and oils

#### 4.8.1. Gearbox oils

In gearboxes, oil is used for the whole lifetime of the gearbox. We recommend replacing of the filling oil in case of repair.

Use oils with specification DIN 51517 in the gearboxes. Select the viscosity grade ISO VG according to the original oil fill.

**Attention:**

*When replacing, use oils recommended by BOMAR or oils, which has comparable parameters from the other manufacturers.*

*Do not forget, that mineral and synthetic oils must not be mixed!*

#### Recommended oils and quantity according to the type of the band saw

Band saw	Gearbox oil	Capacity
Proline 520.450 ANC	Shell Tivela S 320	1,0 l
Swarf conveyor	Shell Tivela S 320	0,075 l

#### Comparative table of the gearbox oils

Manufacturer	Viscosity grade		
	ISO VG 100	ISO VG 220	ISO VG 320
BP	Energol GR-XP 100	Energol GR-XP 220	Energol GR-XP 320
Castrol	Alpha SP 100 Alpha MW 100	Alpha SP 220 Alpha MW 220	
Elf	Reductelf SP 100	Reductelf SP 220 Reductelf Synthese 220	Reductelf SP 320
Esso	Spartan EP 100	Spartan EP 220	Spartan EP 320
Mobil	Mobilgear 627	Mobilgear SHC 220 Mobilgear 630	Mobilgear 632

Manufacturer	Viscosity grade		
	ISO VG 100	ISO VG 220	ISO VG 320
ÖMV		PG 220	
Paramo	PP 7	Paramo CLP 220	Paramo CLP 320
Shell	Shell Omala 100	Shell Omala 220 Shell Tivela S 220	Shell Omala 320 Shell Tivela S 320
Total	Carter EP 100	Carter EP 220	Carter EP 320

#### 4.8.2. Lubricant greases


We recommend using lithium based saponified grease, class NGLI-2 for lubrication. Different greases are mixable, if their oil bases and consistence type are identical.


#### Comparative table of the lubricant greases:

Manufacturer	Type of the lubricant grease
BP	Energrease LS - EP
DEA	Paragon EP1
Esso	FETT EGL 3144
	Beacon EP 1 Beacon EP 2
FINA	FINA LICAL M12
Klüber	Microlube GB0
	Staburags NBU8EP
	Isoflex Spezial
Optimol	Optimol Longtime PD 0, PD1, PD2
Shell Aseol AG	ASEOL Litea EP 806-077
Texaco	Multifak EP1

#### 4.8.3. Lubrication

There are several placing on the machine, which are necessary to grease periodically. It secures the right function of the machine.

Lubrication place	Lubrication
	<p>The guiding cubes leading – grease with oil from both sides once a week.</p>

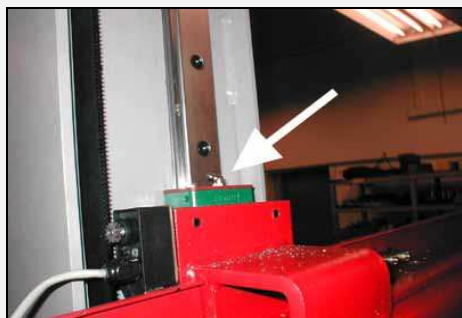

The linear guiding of the saw arm – lubricate with grease once a three months (see chapter Lubricant Greases). Use 3-5g grease on the every carriage of the linear guiding. Use the grease gun to the lubrication. Drive 3-5 times whole line of the linear guiding during lubrication.

#### 4.8.4. Hydraulic oils

Replace the hydraulic oil once in 2 years, because the oil can deteriorate its properties and cause problems the hydraulic equipment. If the hydraulic system is equipped with filter (2SF 56/48-0,063), replace the filter too.

**Note:**

*When replacing, use oils recommended by BOMAR or oils, which has comparable parameters from the other manufacturers. Do not forget, that mineral and synthetic oils may not be mixed!*

Use oils with specification DIN 51524-HLP, ISO 6743-4 and viscosity grade ISO VG 32 in hydraulic aggregates. Hydraulic oils quantity – see chapter **Hydraulic oil level check**.

**Comparative table of the hydraulic oils**

Manufacturer	Type	Manufacturer	Type
Agip	Oso 32	Ina	Hidraol 32 HD
Aral	Vitam GF 32	Klüber	Lamora HLP 32
Avia	Avilub RSL 32	Hungary	Hidrokomol P 32
Benzina	OH-HM 32	Mobil	Mobil DTE 25
BP	Energol HLP 32	ÖMV	HLP 32
Bulgaria	MX-M/32	Poland	Hydrol 30
Castrol	Hyspin AWS 32	Rumania	H 32 EP
Čepro	Mogul HM 32	Russia	IGP 30
DEA	Astron HLP 4hy6	Shell	Tellus Oil 32
Elf	Elfolna 32	Sun	Sunvis 832 WR
Esso	Nuto H 32	Texaco	Rando HD B 32
Fam	HD 5040	Valvoline	Ultramax AW 32
Fina	Hydran 32		

#### 4.8.5. Hydraulic unit service

After 50 hours working time, or the latest 3 months after the first run, the first service should be carried out. This includes:

- checking off all screws and connections, fixing points, tubes and hoses for leakage
- Check hydraulic oil level
- During time of duty the oil temperature shouldn't exceed 60-70°C

- check function of signaling components (thermometer, level gauge, dirty filter indicator)
- Check the adjustment of working pressure



To realize a high reliability of the power pack, the manufacturer lays down following inspection intervals

Interval	daily	weekly	monthly	three monthly	six monthly	annually
<b>Hydraulic fluid</b>						
Level	-	•	-	-	-	-
Temperature	-	•	-	-	-	-
Condition	-	-	•	-	-	-
Change interval	-	-	-	-	-	•
<b>Filter</b>						
Change interval	-	-	-	-	-	-
<b>Other checks</b>						
External Leakages	•	-	-	-	-	-
Contamination	•	-	-	-	-	-
Damages	•	•	-	-	-	-
Noise-(level)	•	-	-	-	-	-
Gauges	-	-	•	-	-	-

#### 4.9. Machine cleaning

Clean the machine from the cooling liquid and impurities after every shift stopping. Conserve the guiding surfaces, mainly.

- Clamping jaws guiding of the vice.
- The guiding of the feeder.
- Loading surface of the vice.


#### 4.10. Worn pieces replacement

##### 4.10.1. Hard metal guides replacement

If the hard metal guides cannot be adjusted, they have to be replaced.

1. Dismantle the saw band. Remove the hosepipe leading the cooling agent. Dismantle guide cube of the saw band.




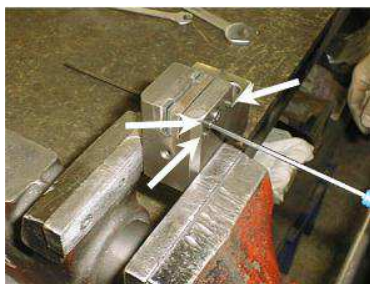

2. Loosen the adjusting screws of the metal guide.




3. Loosen the binding screw of first metal guide. Remove adjustable hard metal guide.

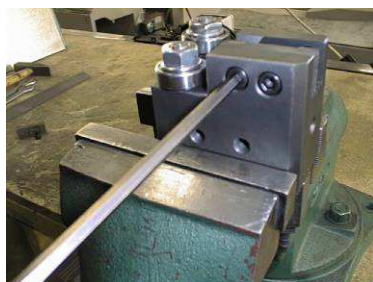

4. Loosen the binding screw of second metal guide. Remove the hard metal guide
5. Insert new hard metal guides and fasten them tightly.
6. Mount the saw band. Adjust the hard metal guides.

#### 4.10.2. Round brush replacement

If the chip removing brush is so worn, that it does not fulfill its function, the brush must be replaced.

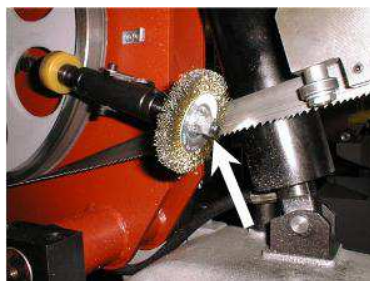

1. Release the nut of the brush, exchange old brush to new brush and screw on the nut of the brush.
2. Set the brush to the saw band.

#### 4.10.3. Saw band guiding rollers replacement

If the saw band is not sufficiently guided by guiding pulleys or if the pulleys are obviously worn, the pulleys should be replaced.

#### **ATTENTION!**

*Guiding pulleys must be replaced together on both guiding cubes!!*

1. Dismantle the saw band.
2. Disconnect the hose from the cooling agent, screw off the pressure regulation. Let the pressure regulation connected to the hydraulic system. Dismantle the guiding cube of the saw band..



3. Tighten the guiding cube to the vice and dismantle both eccentrics with bearings following way.

**ATTENTION!**

*Mark both eccentrics placing and components on the eccentric! Eccentrics must not be replaced with each other!!*

4. Screw off nuts from eccentrics..



5. Remove eccentrics from bearings by means of the swager




6. Change all bearings and other worn parts.



7. Install eccentrics to the cubes. Install components on both eccentrics in given order. Put bearings by means of the preparation on eccentrics.

**ATTENTION!**

*Do not replace the eccentrics placing in the cube*

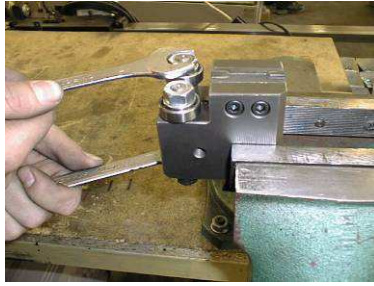

8. Screw on nuts on both eccentrics and tighten them.



9. Insert the saw band to the guiding cube (ca. 15 – 20 cm). Set the eccentrics by means of the wrenches, the saw band must run in the centre. Guide pulleys must not press too much on the band, but must spin freely during the band run.
10. Tighten nuts on both eccentrics.
11. Remove the testing piece of saw band from the cube lead. Install the guiding cube on the machine and connect the pressure regulation to the cut and cooling. Install the saw band.

#### 4.10.4. Stretching wheel replacement


1. Dismantle the saw band.




2. Screw off the screw and take down the washer.



3. Pull off the wheel from the shaft by means of the three-armed puller. If bearing stayed on the shaft, pull off it too
4. Check score of the bearings of the stretching wheel and replace them for new.

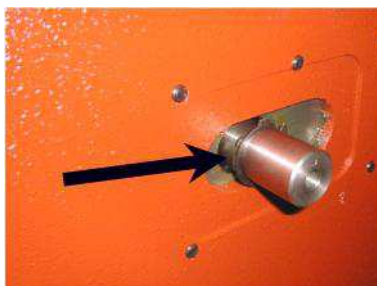

5. Clean the shaft and grease it with oil. Insert retaining ring to the groove.

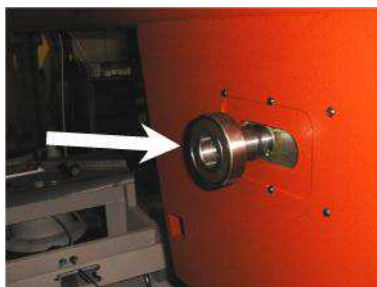

6. Install bearing on the shaft and move it to the retaining ring. Insert the distance ring on the shaft and move it to the bearing.




7. Insert the retaining ring to the hole in the wheel.



8. Insert the bearing to the hole in the wheel and press it to the retaining ring.



9. Put the wheel on the shaft and screw on the preparation to the wheel stretching to the hole in the shaft.

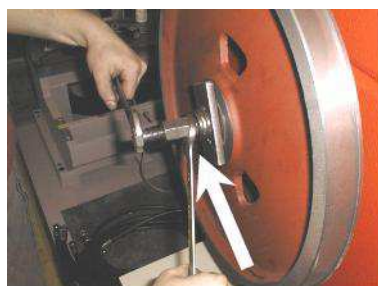

10. Pull on the wheel on the shaft.




11. Screw on washer and screw back..
12. Install the saw band. Wheel replacement is ready.

#### 4.10.5. Driving wheel replacement


1. Dismantle the saw band




2. Screw off the screw and remove the washer.

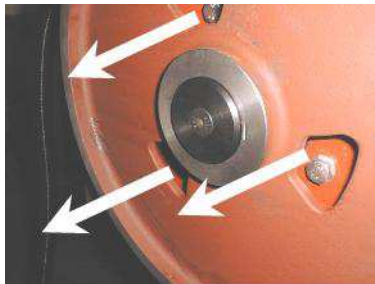

3. Pull off the wheel from the shaft by means of the three-armed puller.

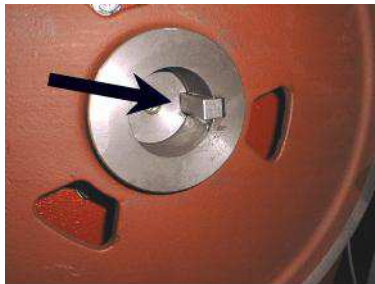

4. Install the wheel on the shaft. Insert the feather to the groove.

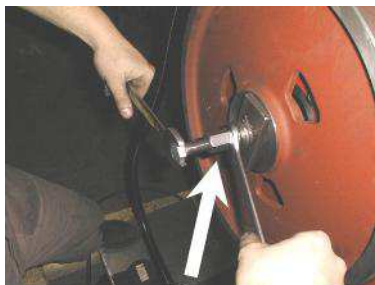

5. Screw on the preparation to the wheel stretching to the hole in the shaft. Pull on the wheel on the shaft.



6. Screw on washer and screw back.
7. Install the saw band. Wheel replacement is ready.

#### 4.10.6. Cooling pump replacement

**Only a qualified worker can carry out the connection!**

**High-voltage shock may have fatal results**


1. Pull the tank with the liquid from the pedestal..
2. Remove the hosepipe leading to the cooling agent from the plug on the pump. Screw off four screws from the cooling pump flange and pull out the pump from the sheet metal holder.



3. Remove the cover of the pump terminal switchboard. Disconnect 4 terminal connectors of the input cables. Cables are identified according to the red clamps..



4. Loosen the bushing and pull the cable out from the pump.

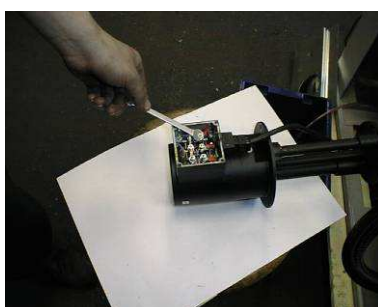

5. Dismantle new pump switchboard cover. Push the cable through the bushing and fasten it.



6. Screw on the cable bushing and cover of the terminal block. Do not forget the rubber gasket! Tighten the cooling liquid hose with non-stick tape and screw it again. Install cooling liquid hose, place the pump on the sheet metal holder and screw it





## 5. Závady / Troubleshooting



## 5.1. Mechanical problems

Problem	Possible causes	Repair
1. Slanting cut	- Wrongly adjusted hard metal guides.	Set according to the chapter „Servicing and adjustment“
	- Worn hard metal guides.	Replace to the chapter „Worn pieces replacement“
	- Wrongly adjusted cubes of the saw band guiding.	Set according to the chapter „Servicing and adjustment“
	- Worn bearings of the saw band guiding.	Replace according to the chapter „Worn pieces replacement“
	- Wrongly adjusted swarf brush.	Set according to the chapter „Servicing and adjustment“
	- Worn swarf brush.	Replace according to the chapter „Worn pieces replacement“
	- Insufficient saw band stretching.	Rise the saw band stretching and set the limit switch.
	- Wrongly chosen tooth system of the saw band.	Replace the saw band and keep the instructions of manufacturer on new saw band choice.
	- Worn saw band.	Replace the saw band.
	- Wrongly balanced roller conveyor.	Set the roller conveyor.
	- Dirty feeding board.	Cleanse the feeding board from debris, chip and residue material.
	- Guiding arm and guiding cube are loosened.	Clamp the guiding arm.
	- Guiding arm and cube are too far from the material.	Set the guiding cube to the material.
	- Too fast cutting rate.	Lower the material feeding speed.
- Unexpected oscillation in material quality.	Set the cut and feeding speed to the relevant material.	
2. The cut is not cut upon desired angle	- Securing lever is loosened.	Check the securing lever efficiency and carry out its adjustment according to chapter „Servicing and adjustment“.
	- Set angle does not match the cut angle.	Check the angle adjustment with a protractor and possibly set it according to chapter „Servicing and adjustment“.
	- Insufficient saw band stretching.	Stretch the saw band and set the limit switch according to chapter „Servicing and adjustment“.
	- Guiding arm and guiding cube are loosened.	Fasten the guiding arm and the cube.
	- Dirt between material and clamping jaw.	Cleanse the material and mating jaw.
3. Short lifetime of the saw band	- Insufficient saw band stretching.	Raise the tightening of the saw band set the scanner of saw band tightening according to chapter „Servicing and adjustment“.
	- Worn swarf brush.	Check the swarf brush condition and replace it in case of excessive use as described in chapter „Worn pieces replacement“
	- Wrongly adjusted swarf brush.	Check swarf brush adjustment, set it according to chapter „Servicing and adjustment“
	- Over stretched saw band	Lower stretching of the saw band and set the limit switch of the saw band stretching according to chapter „Servicing and adjustment“
	- Wrongly adjusted hard metal guides.	Check the adjustment of the hard metal guides and carry out adjustment as

Problem	Possible causes	Repair
		described in chapter „Servicing and adjustment“
	- Worn hard metal guides of the saw band.	Check the condition of the hard metal guide and if it is too worn, replace hard metal guides according to chapter „Worn pieces replacement“
	- Worn saw band guide bearings.	Check guiding bearings and if you notice some sort of excessive damage, replace them according to chapter „Worn pieces replacement“
	- Wrongly adjusted guiding cubes of the saw band.	Set guiding cube according to chapter „Servicing and adjustment“
	- Wrongly adjusted down feed and saw band speed.	Adjust the feeding and speed of a saw band according to values published by saw band manufacturer.
	- Different material quality.	Adjust feeding and speed of a saw band according to desired material (try cut-test).
	- Low-class saw band	Replace the saw band (contact your local accessory supplier for more information)
	- Wrongly chosen saw band tooth system.	Replace the saw band and keep instructions of the manufacturer on the choice.
	- Wrongly adjusted tracking.	Check the space between top of a saw band and driving wheel. Perhaps adjust the tracking as described in chapter „Servicing and adjustment“
4. Insufficient cut output.	- Worn saw band.	Replace the saw band and keep instructions of the manufacturer on the choice.
	- Wrong saw band tooth system.	Replace the saw band and keep instructions of the manufacturer on the choice.
	- Wrongly set down feed and speed of a saw band.	Set feed and speed of a saw band according to values published by saw band manufacturer.
5. The cut is not finished.	- Wrongly adjusted lower stop point of the saw frame.	Check lower limit switch and screw.
	- Stop point surface is messed-up.	Cleanse stop point surface of the limit switch from debris and residue material.
6. By choke is not possible turn	- Metal clamps between valve and panel.	Clamps must be removed and put on the shaft O-Ring about 10x2 mm.
	- Metal clams are in body of valve.	Valve must be cleared or changed.
7. Saw band drive cannot be started.	- Pressure switch is adjusted wrong.	Set the pressure switch according to chapter „Servicing and adjustment“
	- Pressure switch is defective.	Replace defective parts of the pressure switch.
8. The saw bands are cracked.	- In stretching wheel is wrong adjusting geometry.	Adjust distance band from recess wheel c.2 mm according to operating instructions.
	- Hard metal plates of circuit saw band are not adjusting.	Hard metal plates of circuit saw band must be adjusting according to operating instructions.
	- Guiding cubes are not adjusting (bearings + hard metal circuit)	Guiding cubes must be adjusting (bearings + hard metal circuit) according to operating instructions.
	- Bearings of guiding cubes are used (rolling elements are damaged or outside ring of bearing has conical form).	Bearings of guiding cubes must be replaced. Bearings must be adjusting according to operating instructions.
9. Damage tooth system of the saw band	- In gripping the lifting cylinder is backlash.	
	- Squeezed pin upper or downer holder of the lifting cylinder.	Exchange complete upper or downer holder of lifting cylinder.

Problem	Possible causes	Repair
10. The saw is cut downing.	- Geometry of hardmetal guiding cubes is wrong adjusted.	Hardmetal guiding cubes must be adjusted.
	- Bearings of guiding cubes are used.	Bearings of guiding cubes must be replaced.
11. Cleansing of the saw band is not functional.	- Elastic wheel of the brush drive is worn-down.	Elastic wheel of the brush must be changed.
	- Knurling of the driving wheel is worn-down.	Driving wheel must be changed.
	- The shaft of the brush drive is rusted.	The shaft of the brush must be cleaned and oiled.
	- The brush position and the brush cover is adjusted wrong – with the brush cannot be turned.	The brush cover must be posed, in order to the brush can be turned.
12. The saw arm periodically rise and fall during the cut; this cause short lifetime of the saw band.	- Backlash in driving wheel lodgement on the shaft.	Change the driving shaft for a long one, new bearings, distance ring, new driving wheel, spring, two covers on the forehead of the shaft + screws.
	- Worn channel for spring.	

## 5.2. Electric and hydraulic problems

Problem	Possible causes	Repair
1. Machine is not possible start.	- In socket is not voltage	Line voltage must be checked.
	- Transfer relay is closed (thermal protector)	Each FA relay must be checked.
	- Limit switch of saw band stretching, cover of frame or cover of saw band is not started.	Check of saw band stretching and covers closing.
2. When cut is finished, the frame is not raising.	- Bottom limit switch is adjusted wrong.	Bottom limit switch must be adjusted according to chapter ADJUSTING.
	- In hydraulic (pneumatic) ring is error. HYTOS (BOSCH) is not acting to frame uplift.	Function of magnetic valve must be checked, valve must be closed, voltage of clamps and inductor must be checked.
3. Electric motor and pump are without voltage. Between contactor and thermal protector is not voltage.	- Wrong contactor.	Replace contactor of engine.
4. The indicator of speed saw band is not functional.	- Sensor of speed is not adjusted.	Sensor of speed must be adjusted.
	- Defective display	The display must be changed.
	- Wrong sensor – diode of indicator speed is not light.	Sensor must be changed and adjusted.
5. Protector is switched off from engine hydraulic aggregate MA3 sometimes.	- Into hydraulic system is high working pressure.	Service engineer must reduce the pressure in hydraulic system.
6. The hydraulic aggregate cannot be started	Auxiliary contact on thermo-relay FA1 is defective.	Replace the defective contact on motor starter FA1.
7. Hydraulic	- Wrong connection of electrical	The phases must be switched. Only service

Problem	Possible causes	Repair
aggregate is switched on but the saw arm or the main vice is not functional	supply. The electrical phases are connected conversely.	engineer can do this.
8. Cooling is not active	Lack of cooling agent.	Fill the tank with cooling agent.
	- Thermal relay is defective	Change the thermal relay
	- Input hosepipe is broken or obstructed.	Check the cooling circuit and perhaps cleanse cooling system.
	- Cooling pump protection is defective	Check the protection of cooling pump if need change it.
	- Cooling pump is defective.	Replace the cooling pump.

### 5.3. Hydraulic problems

Problem	Possible causes	Repair
9. Hydrogenerator not supplying oil	• reverse rotation	Check the connections of each phase. Reconnect properly connection of the electrical phases.
	• shortage of oil in the tank	Add hydraulic oil
	• Oil viscosity does not correspond prescribed viscosity value	Change hydraulic oil.
	• Hydrogenerator malfunction	Call service
	• Wrong power supply connection.	Check the connections of each phase. Reconnect properly connection of the electrical phases.
10. Hydraulic oil contains bubbles	• Hydraulic circuit is not adequately deaerated	Make deaeration of hydraulic circuit.
	• Low oil level	Add hydraulic oil
	• the pump shaft seals damaged	Call service
11. Increased mechanical noise	• damaged joint drive	Call service
	• damaged or destroyed motor bearings	Call service
	• air intake	Check for leaks.
12. Low pressure, pump supplies oil	• problem in the safety valve	Wrong settings. Check the settings and adjust the safety valve.
	• pump wear	Call service
	• external or internal leakage	Call service
13. Hydrogenerator is	• damage by solid particles in oil	Make oil filtration, or call the

seized		service.
	• non-prescribed oil	Change hydraulic oil.
	• wrong type of oil	Change hydraulic oil.
14. Overheating oil	• exceeding the life of the pump	Call service
	• cooler malfunction	Check the cooler function or call service.
15. Hydraulic valve can not be readjusted	• wear the pump, the energy is converted into heat	Call service
	• electromagnet has no signal (voltage) - interrupted supply lines	Check again.
	• Electromagnet coil burnt	Replace coil – Call service.
	• spool valve sticking	Replace valve – Call service



## 6. Schémata / Schemas / Schematics





6.1. Elektrické schéma /  
 Elektroschema /  
 Electric scheme – 3x400 V, PE+N, 50 Hz

0	1	2	3	4	5	6	7	8	9	
 <p style="text-align: center;"><b>Proline 520.450 ANC</b></p> <p style="text-align: center;">Bomar, spol. s r.o.        Těžební 1236/1        627 00 Brno        Czech republic</p>										
 BOMAR, s.r.o. Těžební 1236/1 CZ 627 00, Brno			Stroj/Machine/Maschine: <b>Proline 520.450 ANC</b>				Název stránky/Name page/Name seiten: Úvodní strana/Start page/Startseite		Číslo odk./Doc. No./Anzahl der Dokumente.: ESR-4000-201-V6.3 Napájení/Power supply/Einspeisung: 3x400V-H+PE, 50Hz Zpracováno/Processed. Art./verarbeitet: Pavlik, Datum/Date/Datum: 14.1.2014	
							List/Page/ Seite: 00		List/Page/ Seite: 19	

0	1	2	3	4	5	6	7	8	9
<b>Obsah/ Table of contents/ Inhaltsverzeichnis</b>									
Stránka/Page/Seite	Název stránky/Name page/Name Seite	Datum/Date/Datum							
00	Úvodní strana/Start page/Startseite	14.1.2014							
01	Obsah/ Table of contents/ Inhaltsverzeichnis	14.1.2014							
02	Rozmístění prvků v rozvaděči RS1/ Placement of elements in enclosure RS1/ Platzierung der Elemente im Schaltschrank RS1	14.1.2014							
03	Ovládací panel na rozvaděči/Control panel/Bedienpult	14.1.2014							
04	Kusovník artiklů/ Parts list/ Artikelstückliste	14.1.2014							
04.a	Kusovník artiklů/ Parts list/ Artikelstückliste	14.1.2014							
04.b	Kusovník artiklů/ Parts list/ Artikelstückliste	14.1.2014							
05	Silová část M1-M3 / Power part M1-M3 / Feld partie M1-M3	14.1.2014							
05.a	Frekvenční měnič M4 / Speed controller M4 / Frequenzumrichter M4	14.1.2014							
06	Deska zdroje/Power board/Netzgerat-Platte	14.1.2014							
07	Stykače motorů, M5/Motor contactor, M5/Motor-Schutzschalter, M5	14.1.2014							
08	Hydraulické ventily/Hydraulic valve/Hydroventil	14.1.2014							
08.a	Hydraulické ventily/Hydraulic valve/Hydroventil	14.1.2014							
09	Vstupy/Inputs/Eingänge	14.1.2014							
10	Tlačítka ovládací panel/Button control panel/Taste Bedienpult	14.1.2014							
11	Bezpečnostní okruhy/Safety circle/Sicherheitsbereich	14.1.2014							
12	Řídicí systém/Control system/Steuersystem	14.1.2014							
13	Odměňování/Remuneration/Abmessung	14.1.2014							
14	Příslušenství/Accessories/Zubehör	14.1.2014							

 BOMAR, s.r.o. Těšební 1236/1 CZ 627 00, Brno	Stroj/Machine/Maschine: <b>Proline 520.450 ANC</b>	Název stránky/Name page/Name seiten: <b>Obsah/ Table of contents/ Inhaltsverzeichnis</b>	Číslo dok./Doc.No./Anzahl der Dokumente.: ES4-400-201-V5.3 Název/Power supply/Einspeisung: 3x400V/4HHE, 50Hz Použití/Processed part/verarbeitet: 14.1.2014	List/Page/ Seite: 01 List/Page/ Seiten: 19
---	---	---	---	---

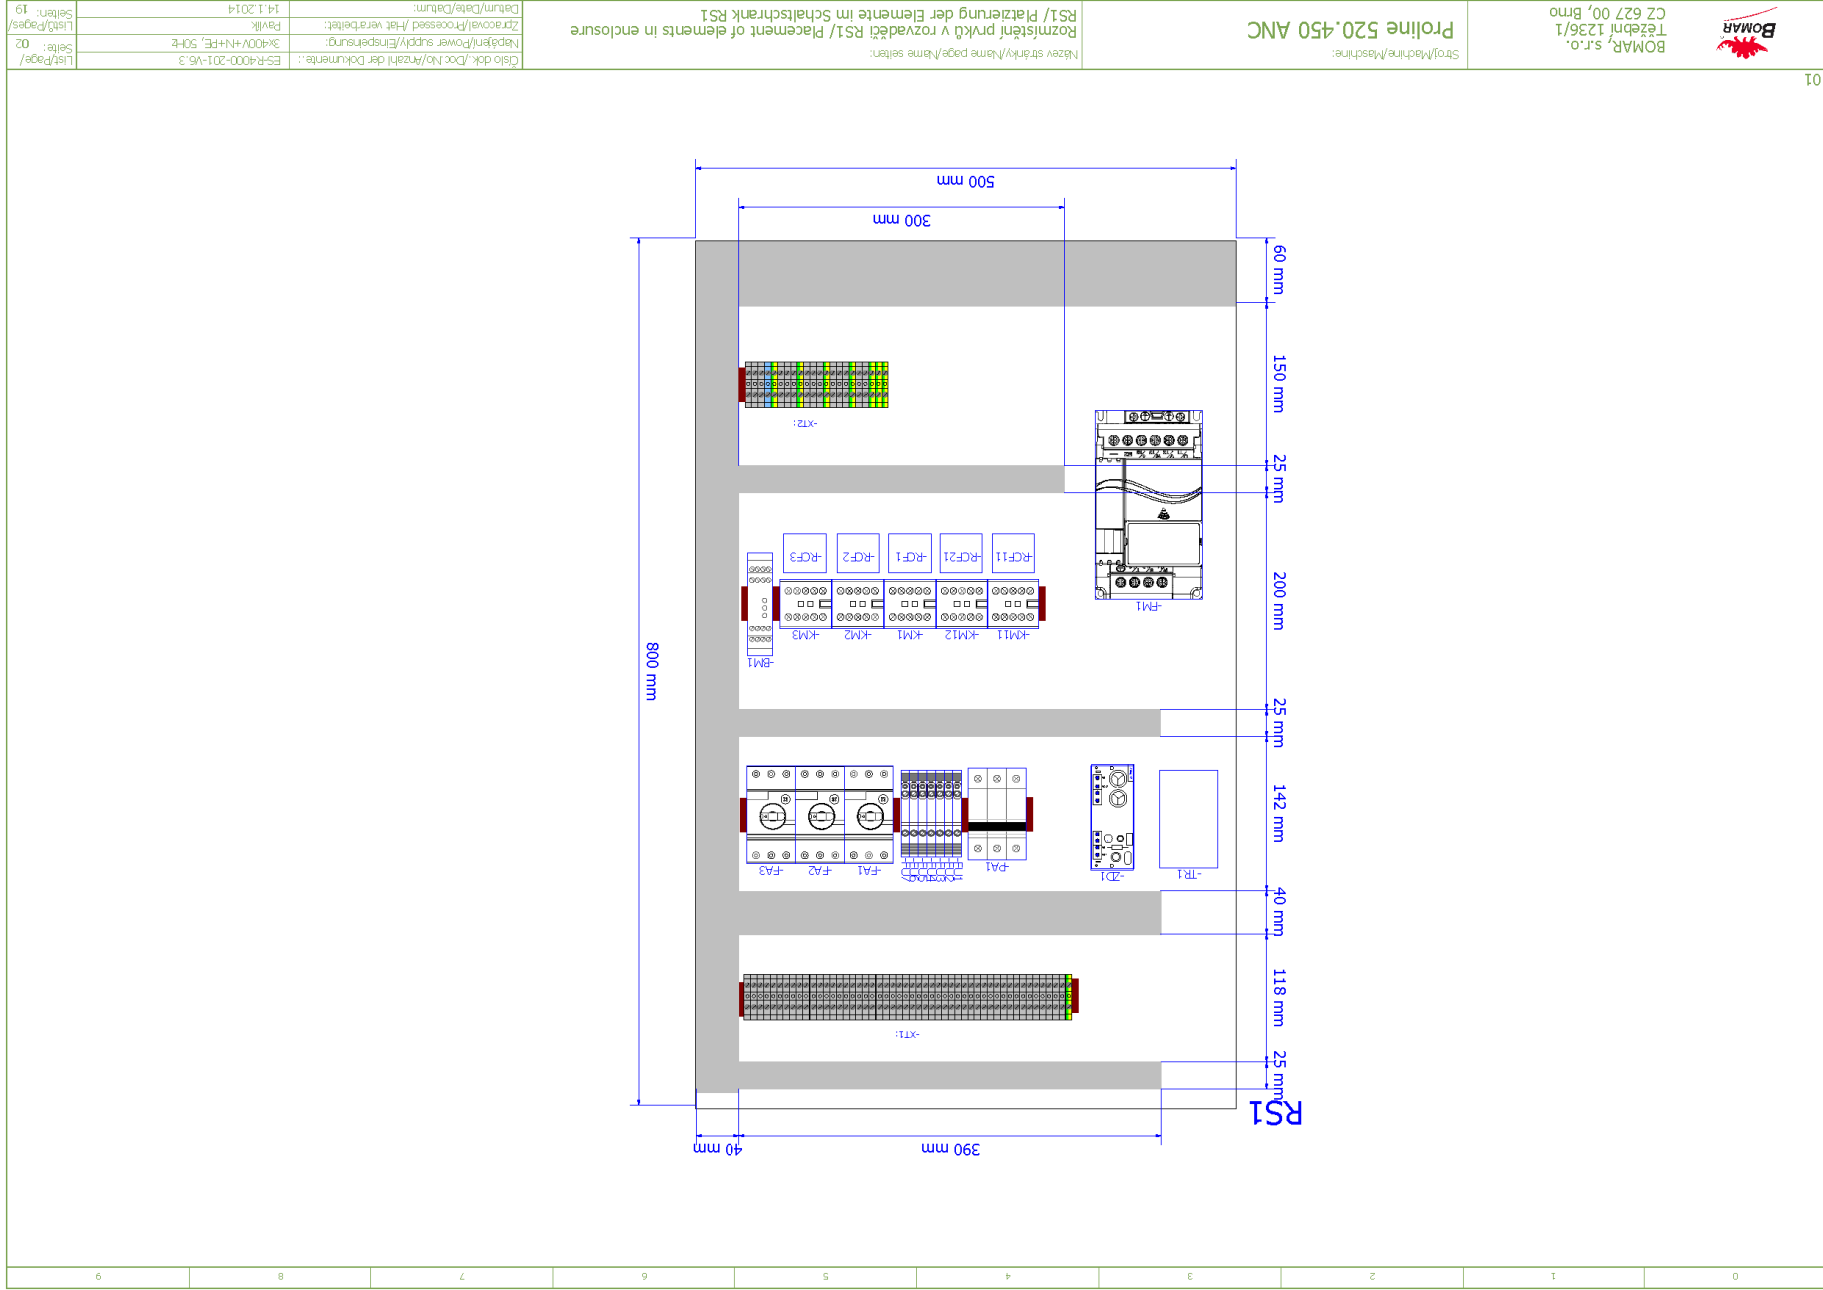

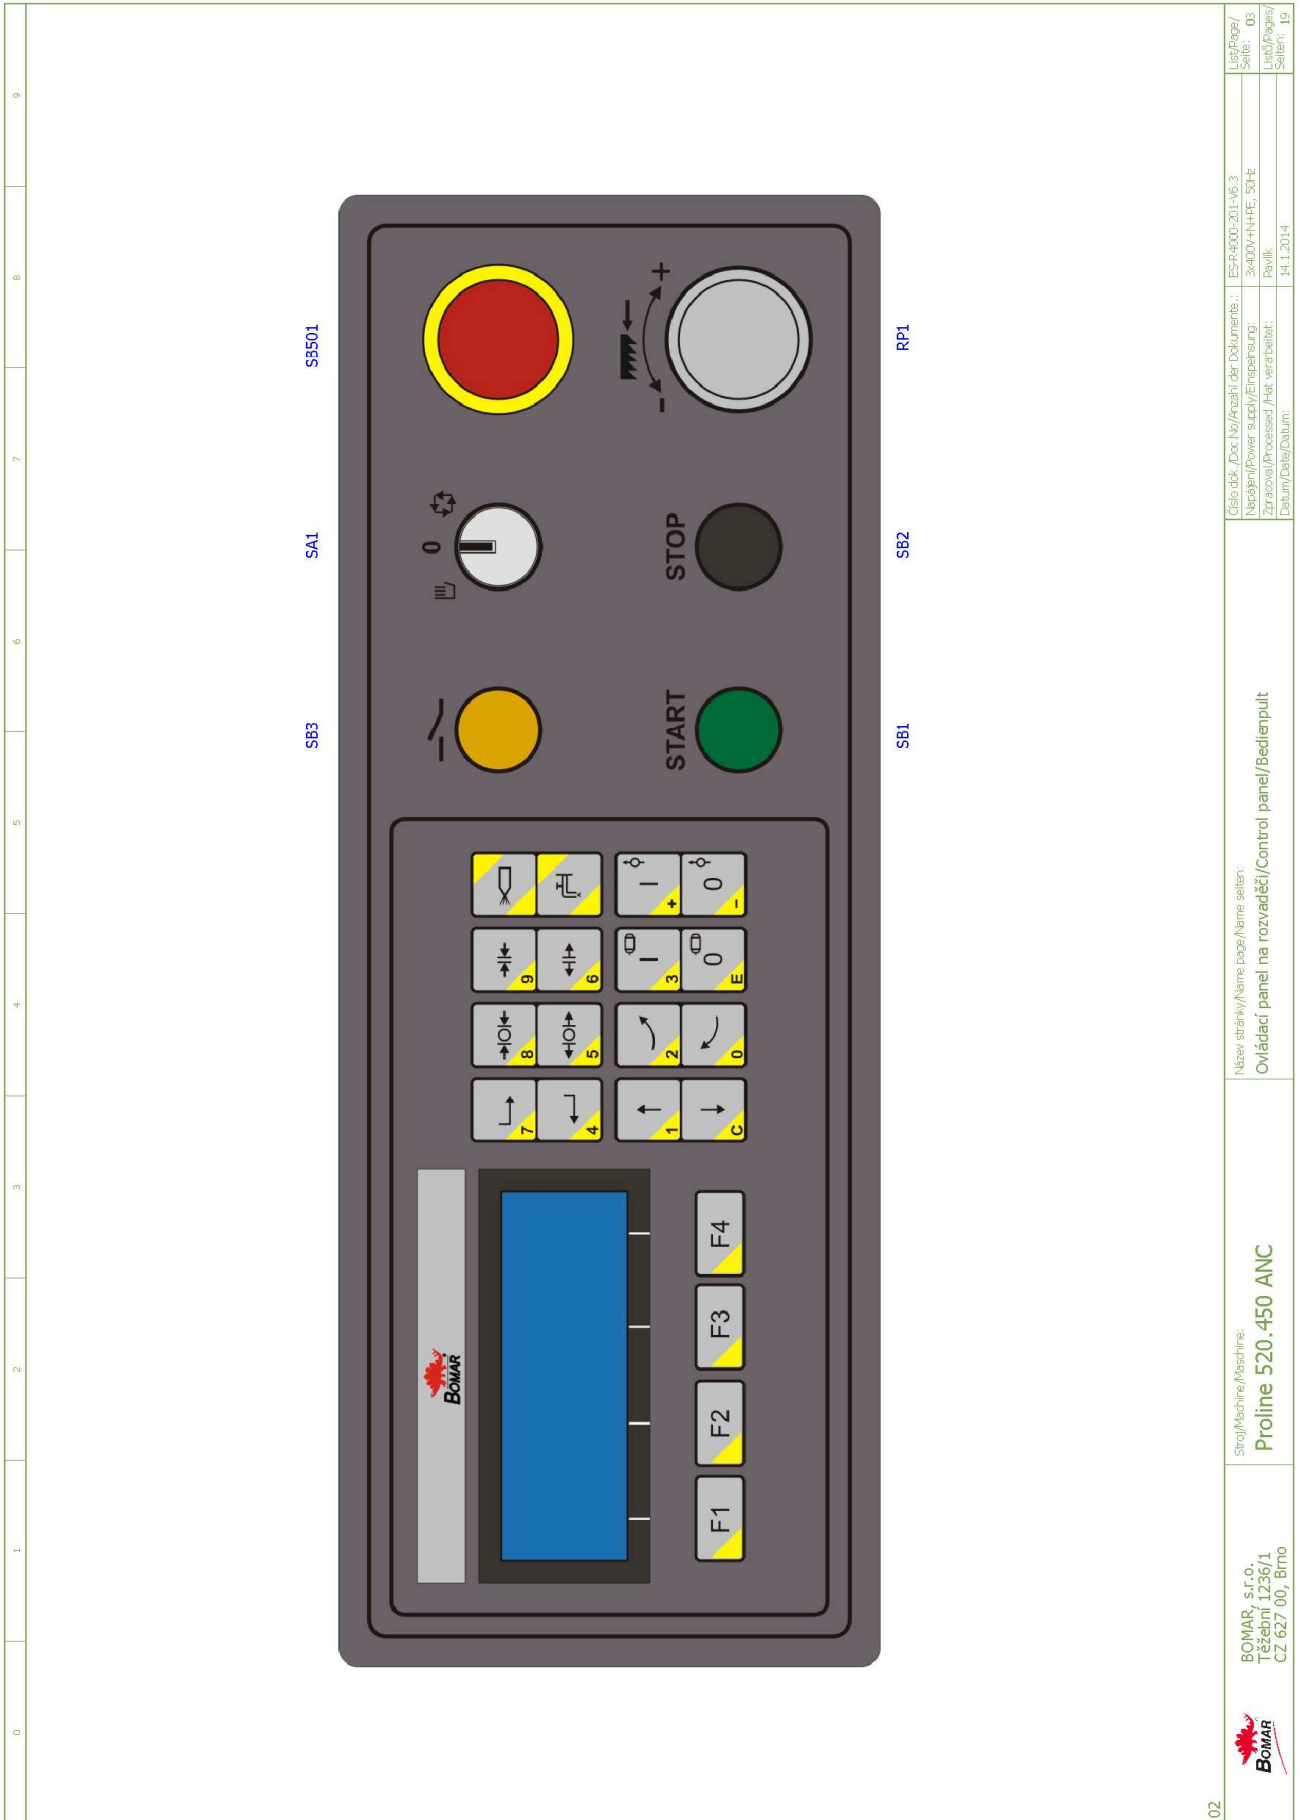

<p>BOMAR, s.r.o. Těšební 1236/1 CZ 627 00, Brno</p>	<p>Stroj/Machine/Maschine: <b>Proline 520.450 ANC</b></p>	<p>Název stránky/Name page/Name seiten: <b>Ovládací panel na rozvaděči/Control panel/Bedienpult</b></p>	<p>Celo odk./Doc.No./Anzahl der Dokumente: : E52400-201-V5.3 Napětí/Power supply/Einspeisung: : 3x400V/4HFE, 50Hz Zpracoval/Processed./Hlt. verarbeitet: : Paul Datum/Date/Datum: : 14.1.2014</p>	<p>List/Page/ Seite: : 03 List/Page/ Seite: : 19</p>
---	---	---	---	--

0	1	2	3	4	5	6	7	8	9
Device identification	Device description	Type number	Manufacturer	Part number	Quantity	Location (page,column)			
-ZD1	Power supply unit - 15VAC/24VDC; 20VAC/28VDC	ZDR-03	Bomar	265.915	1	/06.2			
-CU1	Touch-sensitive keyboard	31.R230-207	AKI ELECTRONIC, spol.s.r.o.	31.R230-207	1	/12.0			
-FA1	Auxiliary Contact Block - 1XNO+1XNC	HKF1-11	ABB	91.046.002	1	/05.3			
-FA2	Auxiliary Contact Block - 1XNO+1XNC	HKF1-11	ABB	91.046.002	1	/05.5			
-FA3	Auxiliary Contact Block - 1XNO+1XNC	HKF1-11	ABB	91.046.002	1	/05.7			
-HL1	Green light for Eaton adapter	M22-LED-G	EATON	91.061.023	1	/08.a.5			
-HL2	White light for Eaton adapter	M22-LED-W	EATON	91.061.034	1	/11.7			
-SA1	Head of 3 positional switch	M22-WRK3	EATON	91.060.051	1	/10.5			
-SB1	Green translucent switch head	M22-DL-G	EATON	91.060.031	1	/10.2			
-SB3	Yellow translucent switch head	M22-DL-Y	EATON	91.060.053	1	/11.3			
-SN1	Lineare incrementa encoder - 10-30VDC/5V TTL line driver	LMIX2-026-08.0-1-01	ELGO	91.270.006	1	/13.4			
-FU1	Tube fuse - 2A/250V, slow, 5x20	T2A/250V	ESKA	91.230.001	1	/06.1			
-FU2	Tube fuse - 2A/250V, slow, 5x20	T2A/250V	ESKA	91.230.001	1	/06.1			
-FU3	Tube fuse - 500mA/250V, slow, 5x20	T500mA/250V	ESKA	91.230.011	1	/06.5			
-FU6	Tube fuse - 6,3A/250V, slow, 5x20	T6,3A/250V	ESKA	91.230.002	1	/06.5			
-RP1	Potenciometr 4k7	TP195 4k7/N20A	GES-ELECTRONICS, a.s.	91.283.015	1	/05.a.6			
-RP1	Potenciometer knob - 24mm	S8877 BLK	GES-ELECTRONICS, a.s.	91.060.063	1	/05.a.6			
-RCF1	RCF filter	FBOPR1624	Ing. Miroslav Vítek	91.041.015	1	/05.2			
-RCF2	RCF filter	FBOPR1624	Ing. Miroslav Vítek	91.041.015	1	/05.4			
-RCF3	RCF filter	FBOPR1624	Ing. Miroslav Vítek	91.041.015	1	/05.6			
-RCF11	RCF filter	FBOPR1624	Ing. Miroslav Vítek	91.041.015	1	/05.a.1			
-RCF21	RCF filter	FBOPR1624	Ing. Miroslav Vítek	91.041.015	1	/05.a.1			
-BM1	Safety relay - 3xNO	CS AR-02M024	PIZZATO	91.051.034	1	/11.5			
-FA1	Manual motor starter - 0.4A	MS16-0.4	ABB	91.045.017	1	/05.3			
-FA2	Manual motor starter - 1A	MS16-1.00	ABB	91.045.019	1	/05.5			
-FA3	Manual motor starter - 4A	MS16-4.0	ABB	91.045.022	1	/05.7			
-FU1	Fuse terminal	WK4/THS15U	WIELAND	91.251.102	1	/06.1			
-FU2	Fuse terminal	WK4/THS15U	WIELAND	91.251.102	1	/06.1			

The manufacturer reserves right to use an equivalent replacement device.

03



BOMAR, s.r.o.  
Těžební 1236/1  
CZ 627 00, Brno


Proline 520.450 ANC


Kusovník artiklů/ Parts list/ Artiklístückliste

Úroveň/Level/Name page/Name sheet:	ES-R4000-201-V6.3
Název/Power supply/Bezeichnung:	3x400V-H+FE, SCHZ
Zpracovatel/Processed /Hitt verarbeitete:	Pavik
Datum/Date/Datum:	14.1.2014
Seiten/	19
Úroveň/Level/Name page/Name sheet:	04
Seiten/	04


0	1	2	3	4	5	6	7	8	9
<b>Parts list</b>									
Device identification	Device description	Type number	Manufacturer	Part number	Quantity	Location (page.column)			
-FU3	Fuse terminal	WK4/T/HSIU	WIELAND	91.251.102	1	/06.5			
-FU4	Fuse terminal	WK4/T/HSIU	WIELAND	91.251.102	1	/06.5			
-FU4	Tube fuse - 800mA/250V, slow, 5x20	T800mA/250V	ESKA	91.230.010	1	/06.5			
-FU5	Fuse terminal	WK4/T/HSIU	WIELAND	91.251.102	1	/06.5			
-FU5	Tube fuse - 1A/250V, slow, 5x20	T1A/250V	ESKA	91.230.031	1	/06.5			
-FU6	Fuse terminal	WK4/T/HSIU	WIELAND	91.251.102	1	/06.5			
-FU7	Tube fuse - 200mA/250V, slow, 5x20	T200mA/250V	ESKA	91.230.037	1	/14.1			
-FU7	Fuse terminal	WK4/T/HSIU	WIELAND	91.251.102	1	/14.1			
-KM1	Minicontactor - 4kW/400V, 3P	B6S-30-01-1.7-71	ABB	91.040.049	1	/07.2			
-KM2	Minicontactor - 4kW/400V, 3P	B6S-30-01-1.7-71	ABB	91.040.049	1	/07.4			
-KM3	Minicontactor - 4kW/400V, 3P	B6S-30-01-1.7-71	ABB	91.040.049	1	/07.5			
-KM11	Minicontactor - 4kW/400V, 3P	B6S-30-01-1.7-71	ABB	91.040.049	1	/11.7			
-KM12	Minicontactor - 4kW/400V, 3P	B6S-30-01-1.7-71	ABB	91.040.049	1	/11.8			
-PA1	Fuse switch disconnecter E-90 - 3P	E 93/32	ABB	91.241.014	1	/05.a.2			
-Q51	Handle switch - black	OH52RJ	ABB	91.180.015	1	/05.0			
-RP1	Fastconnect clamp	WAGO 224-112	WIELAND	91.250.009	3	/05.a.6			
-SA1	Attaching adapter + 1NO	M22-AK10	EATON	91.061.021	1	/10.5			
-SA1	NO contact for Eaton adapter	M22-K10	EATON	91.061.022	1	/10.5			
-SB1	Attaching adapter + 1NO	M22-AK10	EATON	91.061.021	1	/10.2			
-SB2	Attaching adapter + 1NO	M22-AK10	EATON	91.061.021	1	/10.3			
-SB2	Switch head - black	M22-D-S	EATON	91.060.035	1	/10.3			
-SB3	Attaching adapter + 1NO	M22-AK10	EATON	91.061.021	1	/11.3			
-SB501	Emergency-stop mushroom push - button + 3xNC	YW1B-V4E02R	IDEC	91.060.084	1	/11.1			
-TR1	Toroidal transformer - 0-230-400V/20V/15V, 0.65-0.38A/6A/2A, 150VA	1502304002015	KARBAN s.r.o.	91.080.026	1	/06.1			
-SQ8	Safety limit switch - 2xNC	QK58	KEDU	91.173.012	1	/11.1			
-PA1	Cylindric fuse - 12A, 10x38 fast, gG characteristic	PV10 12A gG	OEZ	91.231.007	3	/05.a.2			
-SQ3	Limit switch - 1NC+1NO, M20, slow	D4N-4A32	OMRON	91.173.010	1	/09.2			
-SQ4	Limit switch - 1NO + 1NC, roller, M2, snap action	FR 605-M2	PIZZATO	91.173.009	1	/09.3			
<b>The manufacturer reserves right to use an equivalent replacement device.</b>									
 BOMAR, s.r.o. Těšební 1236/1 CZ 627 00, Brno		Stroj/Machine/Maschine: <b>Proline 520.450 ANC</b>		Název stránky/Name page/Name seiten: <b>Kusovník artiklů/ Parts list/ Artikelstückliste</b>		Celo dok./Doc.No./Anzahl der Dokumente.: ES2-400-201-V5.3 Název/Power supply/Einspeisung: 3x400V/4H/HE, 50Hz Zpracoval/Processed./Hlt. verarbeitet: PAH		List/Page/ Seite: 04/4 List/Page/ Seiten: 19	





0	1	2	3	4	5	6	7	8	9	
<b>Parts list</b>										
Device identification	Device description	Type number	Manufacturer	Part number	Quantity	Location (page,column)				
-SQ5	Limit switch - 1NO + 1NC, roller, M2, snap action	FR 605-M2	PIZZATO	91.173.009	1	/09.4				
-SQ6	Limit switch - 1NO + 1NC	FR 615-M2	PIZZATO	91.173.044	1	/09.5				
-SQ7	Limit switcher - 1NO + 1NC, large adjustable roller, M2, snap action	FR 655-M2	PIZZATO	91.173.045	1	/09.6				
-LQ1.A	Sensor cable	MOD.14/4 M12 SL LC10	SICK	91.142.001	1	/09.7				
-LQ1.B	Sensor cable	MOD.15/4 M12 SL LC10	SICK	91.142.002	1	/09.8				
-Q51	Disconnecter - 3P, 32A	OT25FT3	ABB	91.170.016	1	/05.0				
-CU1	Control circuit	PRO-5.X	Bomar	265.917	1	/12.0				
-FM1	AC motor drive - 3.7kW, 3x400VAC	VFD037E43A	DELTA ELECTRONICS, INC.	91.012.094	1	/05.a.2				
-M5	Fan 24VDC, 154CFM	RDH1238 B2	Xinnilian Electronic Co.	91.015.126	1	/07.7				
-Q51	Terminal shroud	OTS40T3	ABB	91.170.017	1	/05.0				
<p>The manufacturer reserves right to use an equivalent replacement device.</p>										
04.a										
 BOMAR, s.r.o. Těšební 1236/1 CZ 627 00, Brno		Strojí/Machine/Maschine: <b>Proline 520.450 ANC</b>		Kusovník artiklů/ Parts list/ Artikelstückliste		Datum/Date/Datum: 14.1.2014		List/Page/ Seite: 04 B		
		Název stránky/Name page/Name seiten: Název/Power supply/Einspeisung: 3x400V-HH+FE, SCH-E		Dle dok./Doc No./Anzahl der Dokumente: ES-R4000-201-V5.3		Zpracoval/Processed /Helt verärbelt: PaviK		List/Pages/ Seiten: 19		

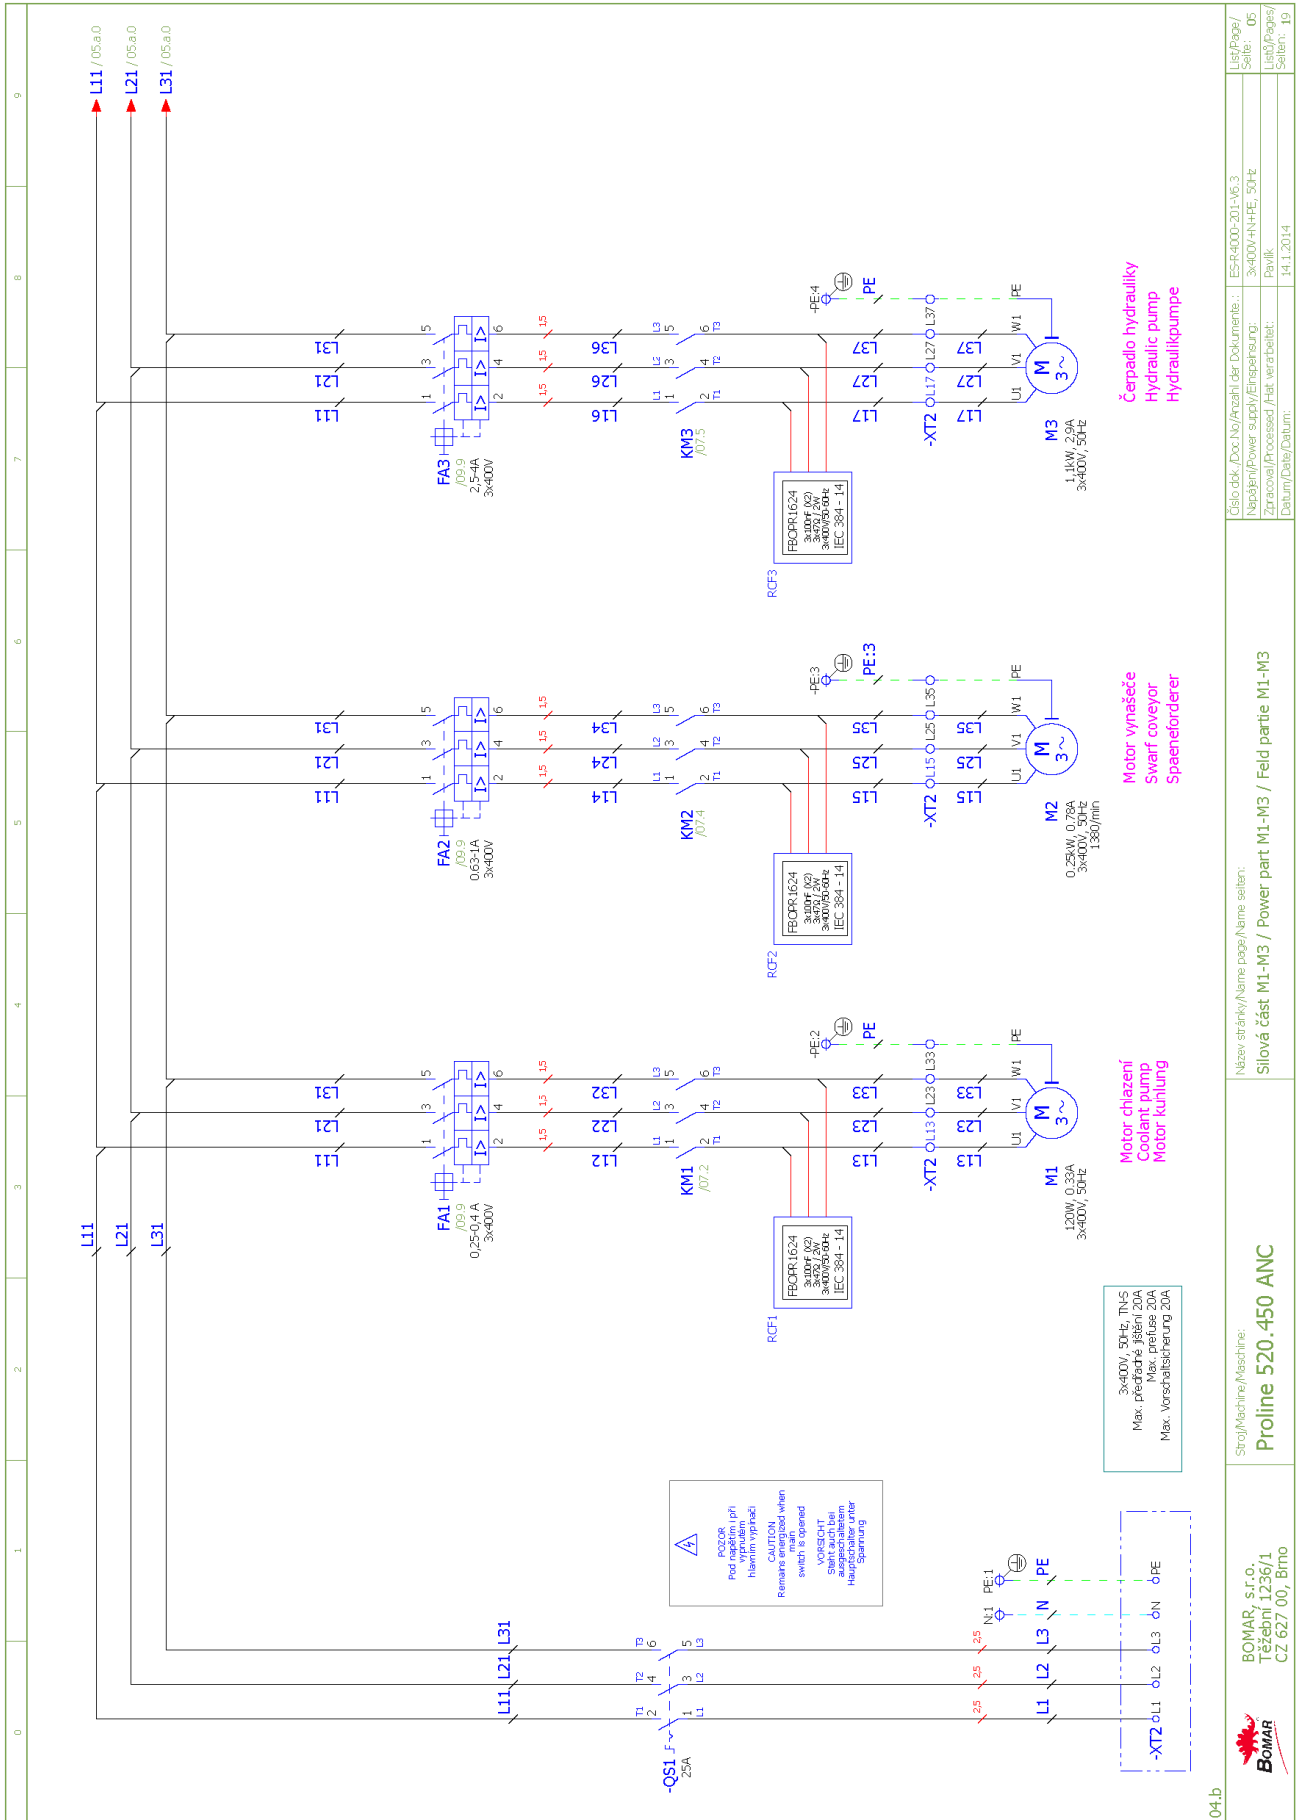


<p>BOMAR, s.r.o. Těšební 1236/1 CZ 627 00, Brno</p>	Stroj/Machine/Maschine: <b>Proline 520.450 ANC</b>	Název stránky/Name page/Name seiten: <b>Silová část M1-M3 / Power part M1-M3 / Feld partie M1-M3</b>	Číslo dok./Doc.No./Anzahl der Dokumente: <b>ES4-400-201-V6.3</b>	List/Page/ Seite: <b>05</b>
			Název/Power supply/Einspeisung: <b>3x400V/4NPE, 50Hz</b>	List/Page/ Seite: <b>05</b>
			Zpracoval/Processed/Abt. verarbeitet: <b>Pařík</b>	List/Page/ Seite: <b>19</b>
			Datum/Date/Datum: <b>14.1.2014</b>	

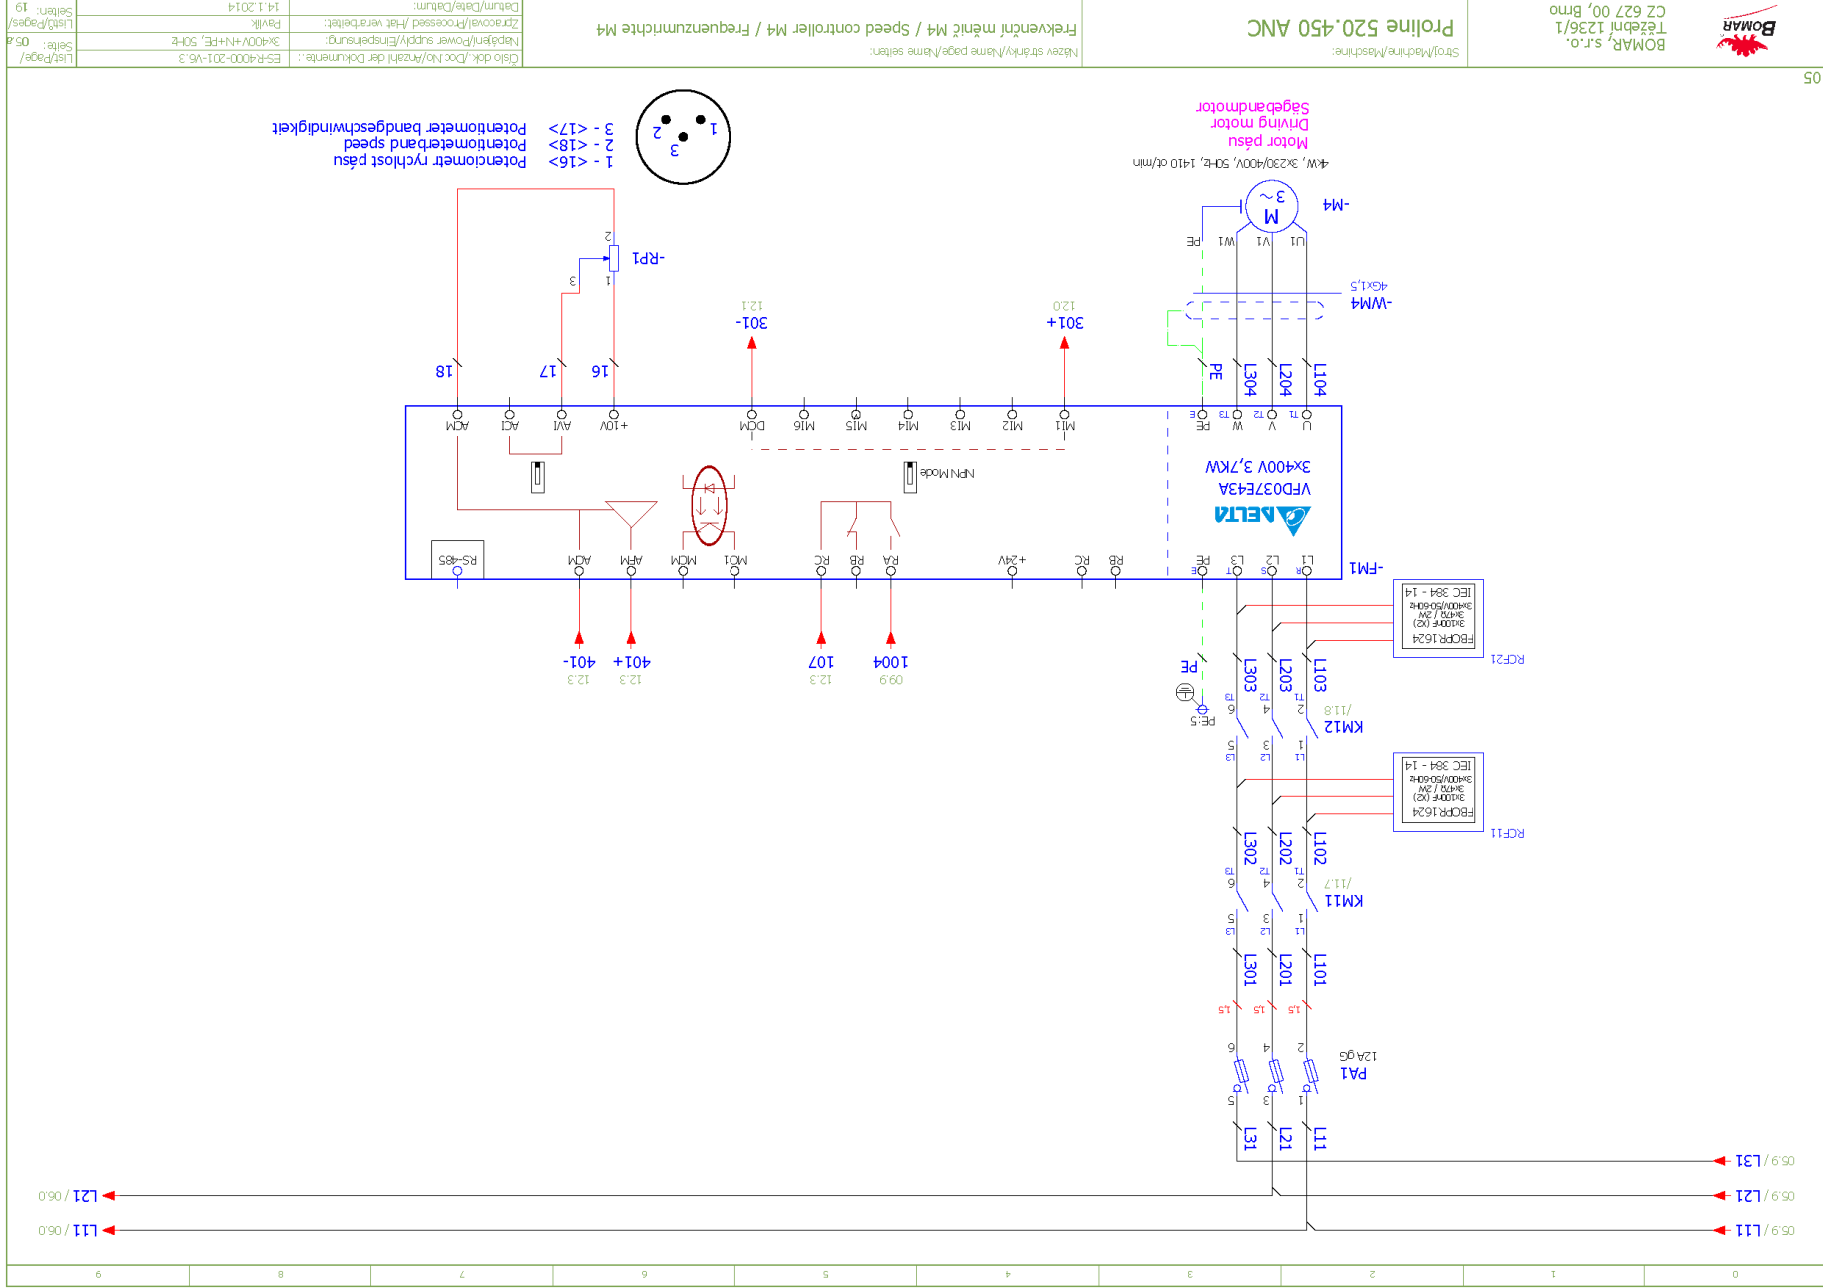


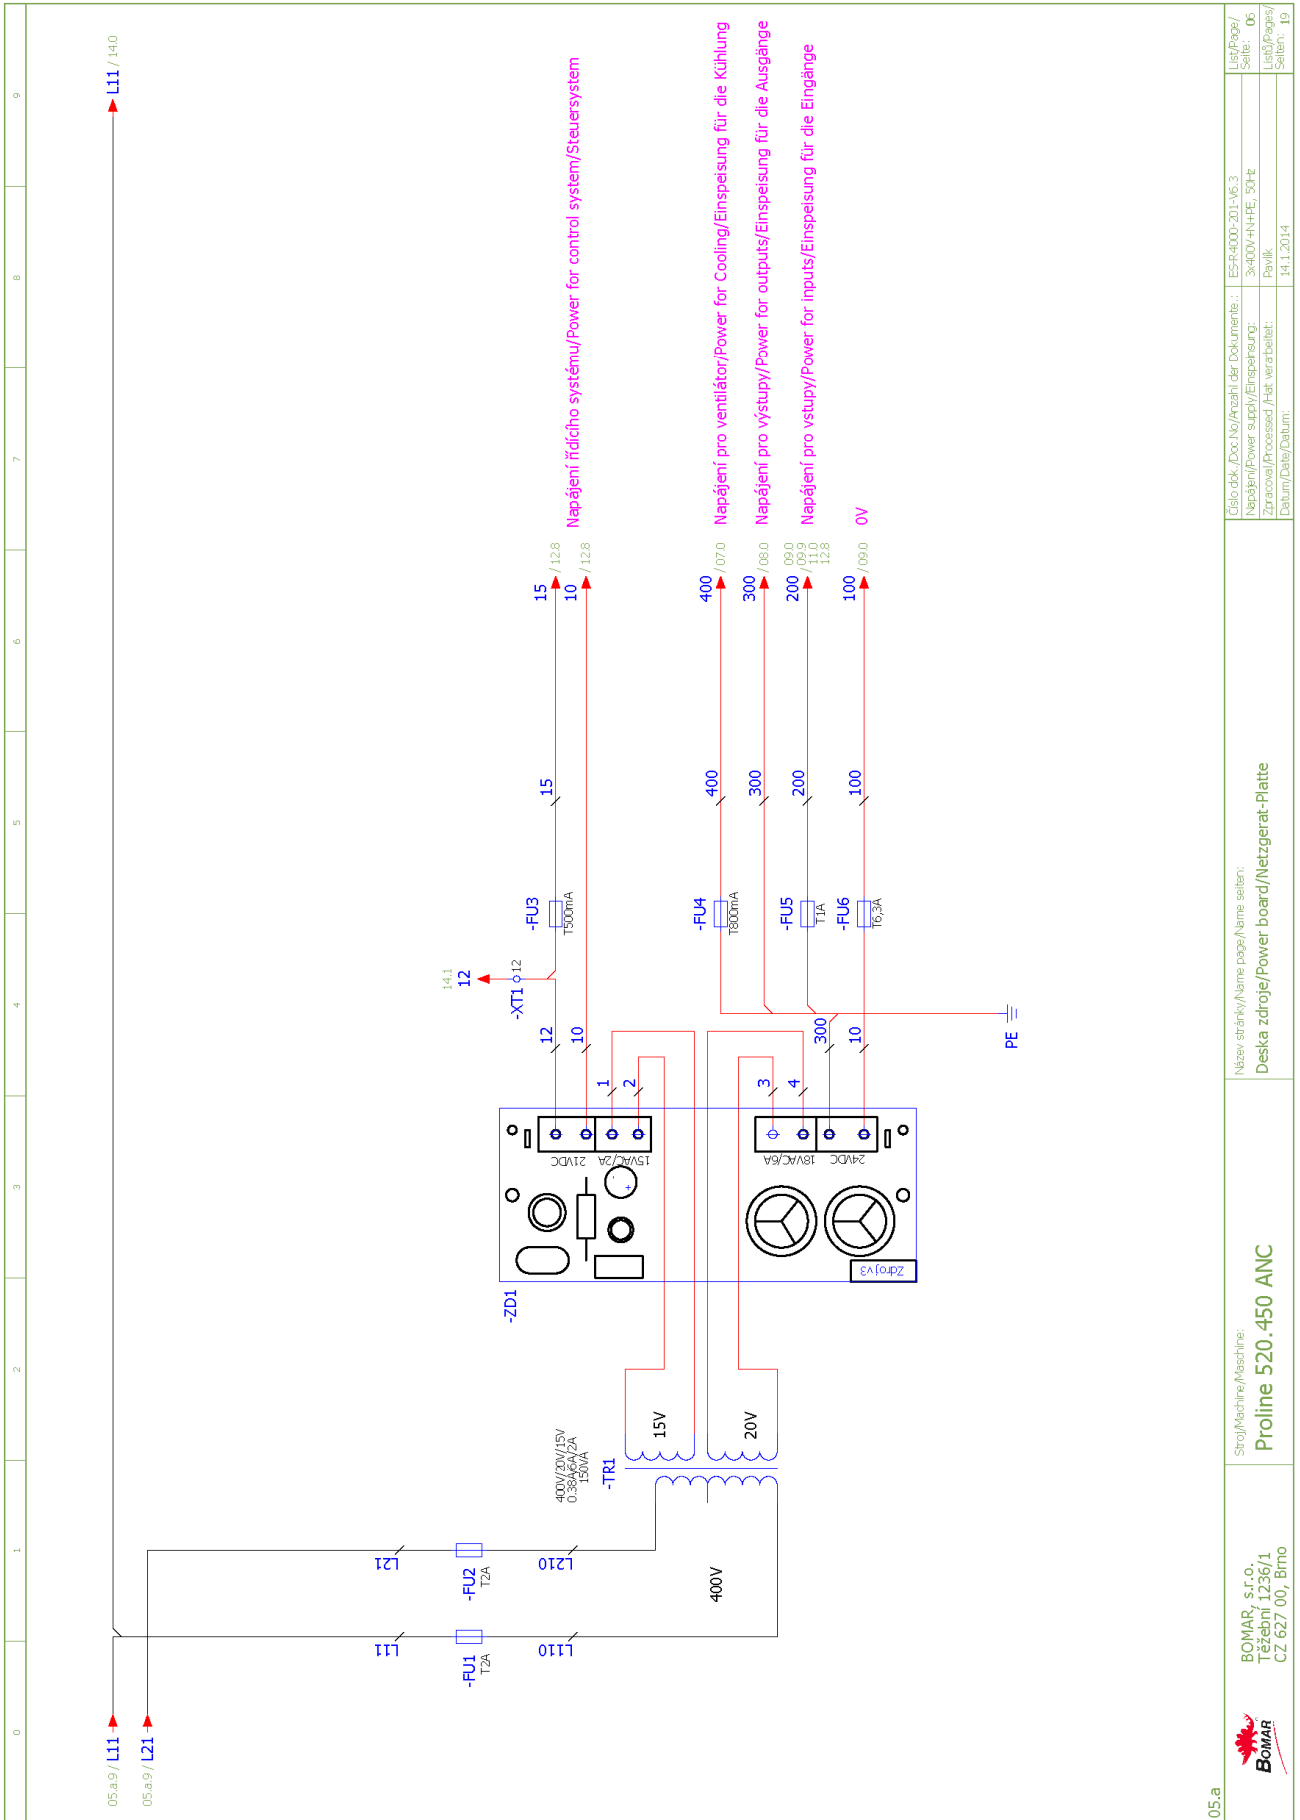


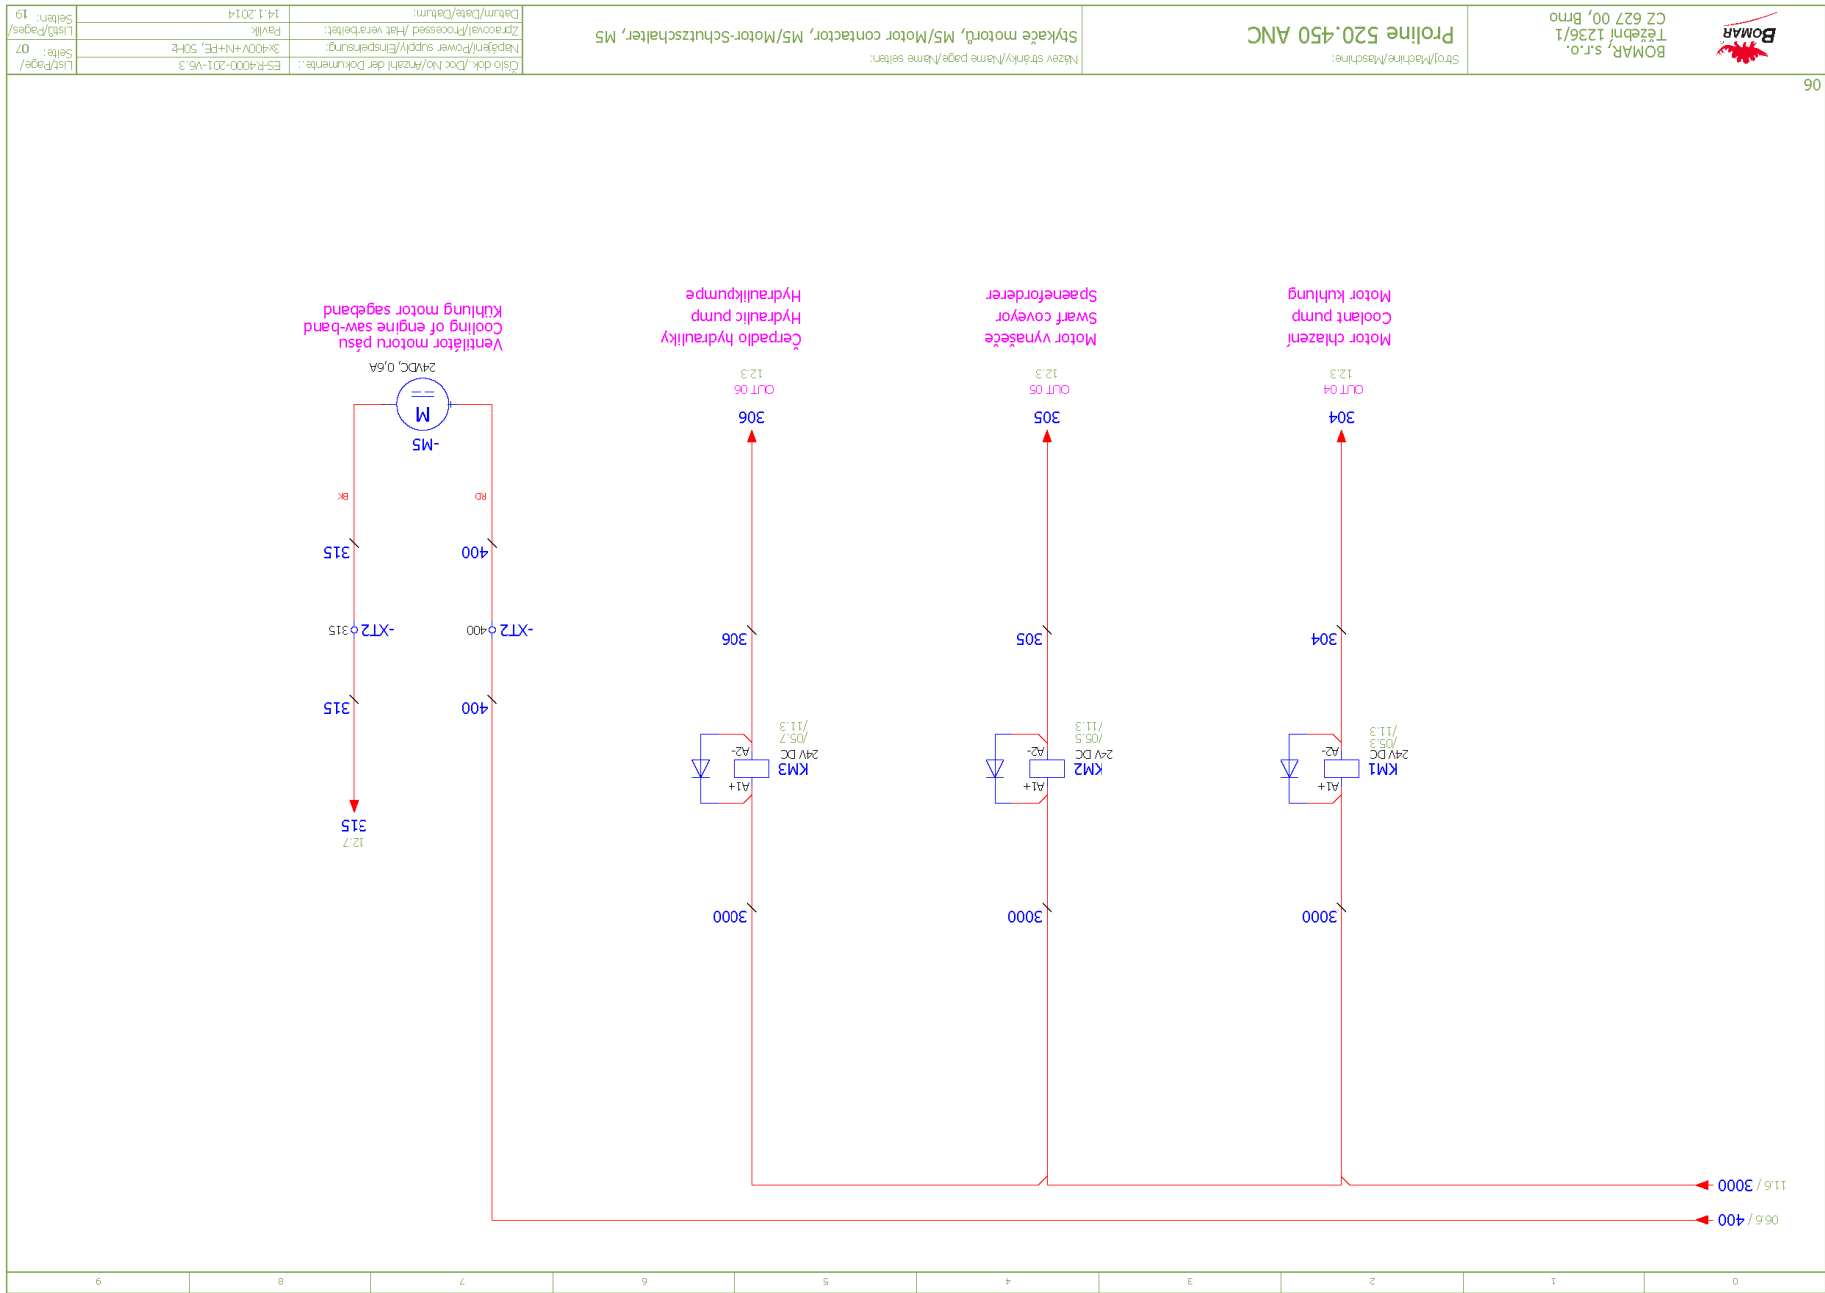

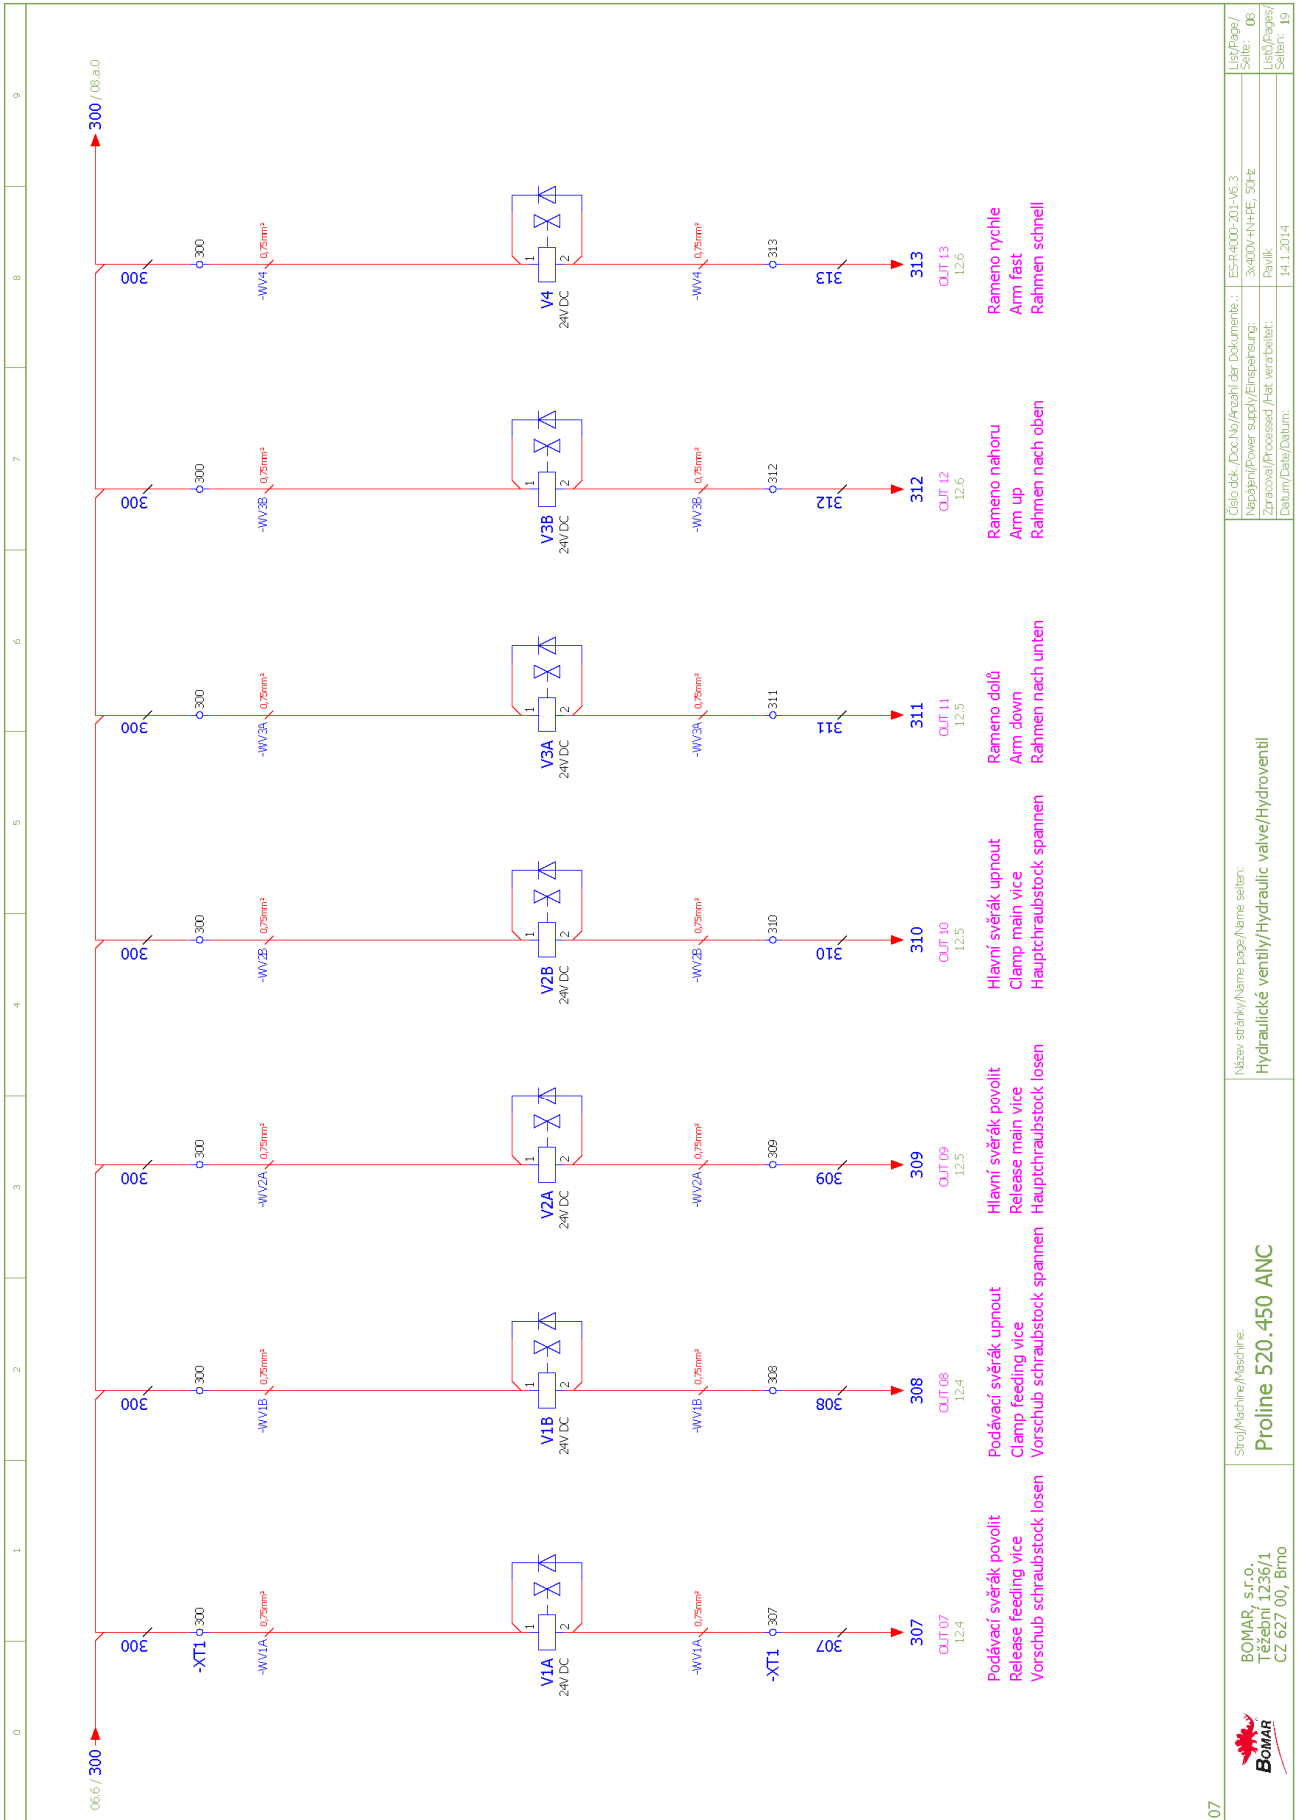

<p>BOMAR, s.r.o. Těšební 1236/1 CZ 627 00, Brno</p>	<p>Stroj/Machine/Maschine: <b>Proline 520.450 ANC</b></p>	<p>Název stránky/Name page/Name seiten: <b>Hydraulické ventily/Hydraulic valve/Hydroventil</b></p>	<p>Cílo odk./Doc.No./Anzahl der Dokumente.: ES4-400-201-V5.3</p>	<p>List/Page/ Seite: 08</p>
			<p>Nápojn/Power supply/Einspeisung: 3x400V/3HFE, 50Hz</p>	<p>List/Page/ Seite: 19</p>
			<p>Zpracoval/Processed/Beh. verarbeitet: Pavla</p>	<p>List/Page/ Seite: 19</p>
			<p>Datum/Date/Datum: 14.1.2014</p>	

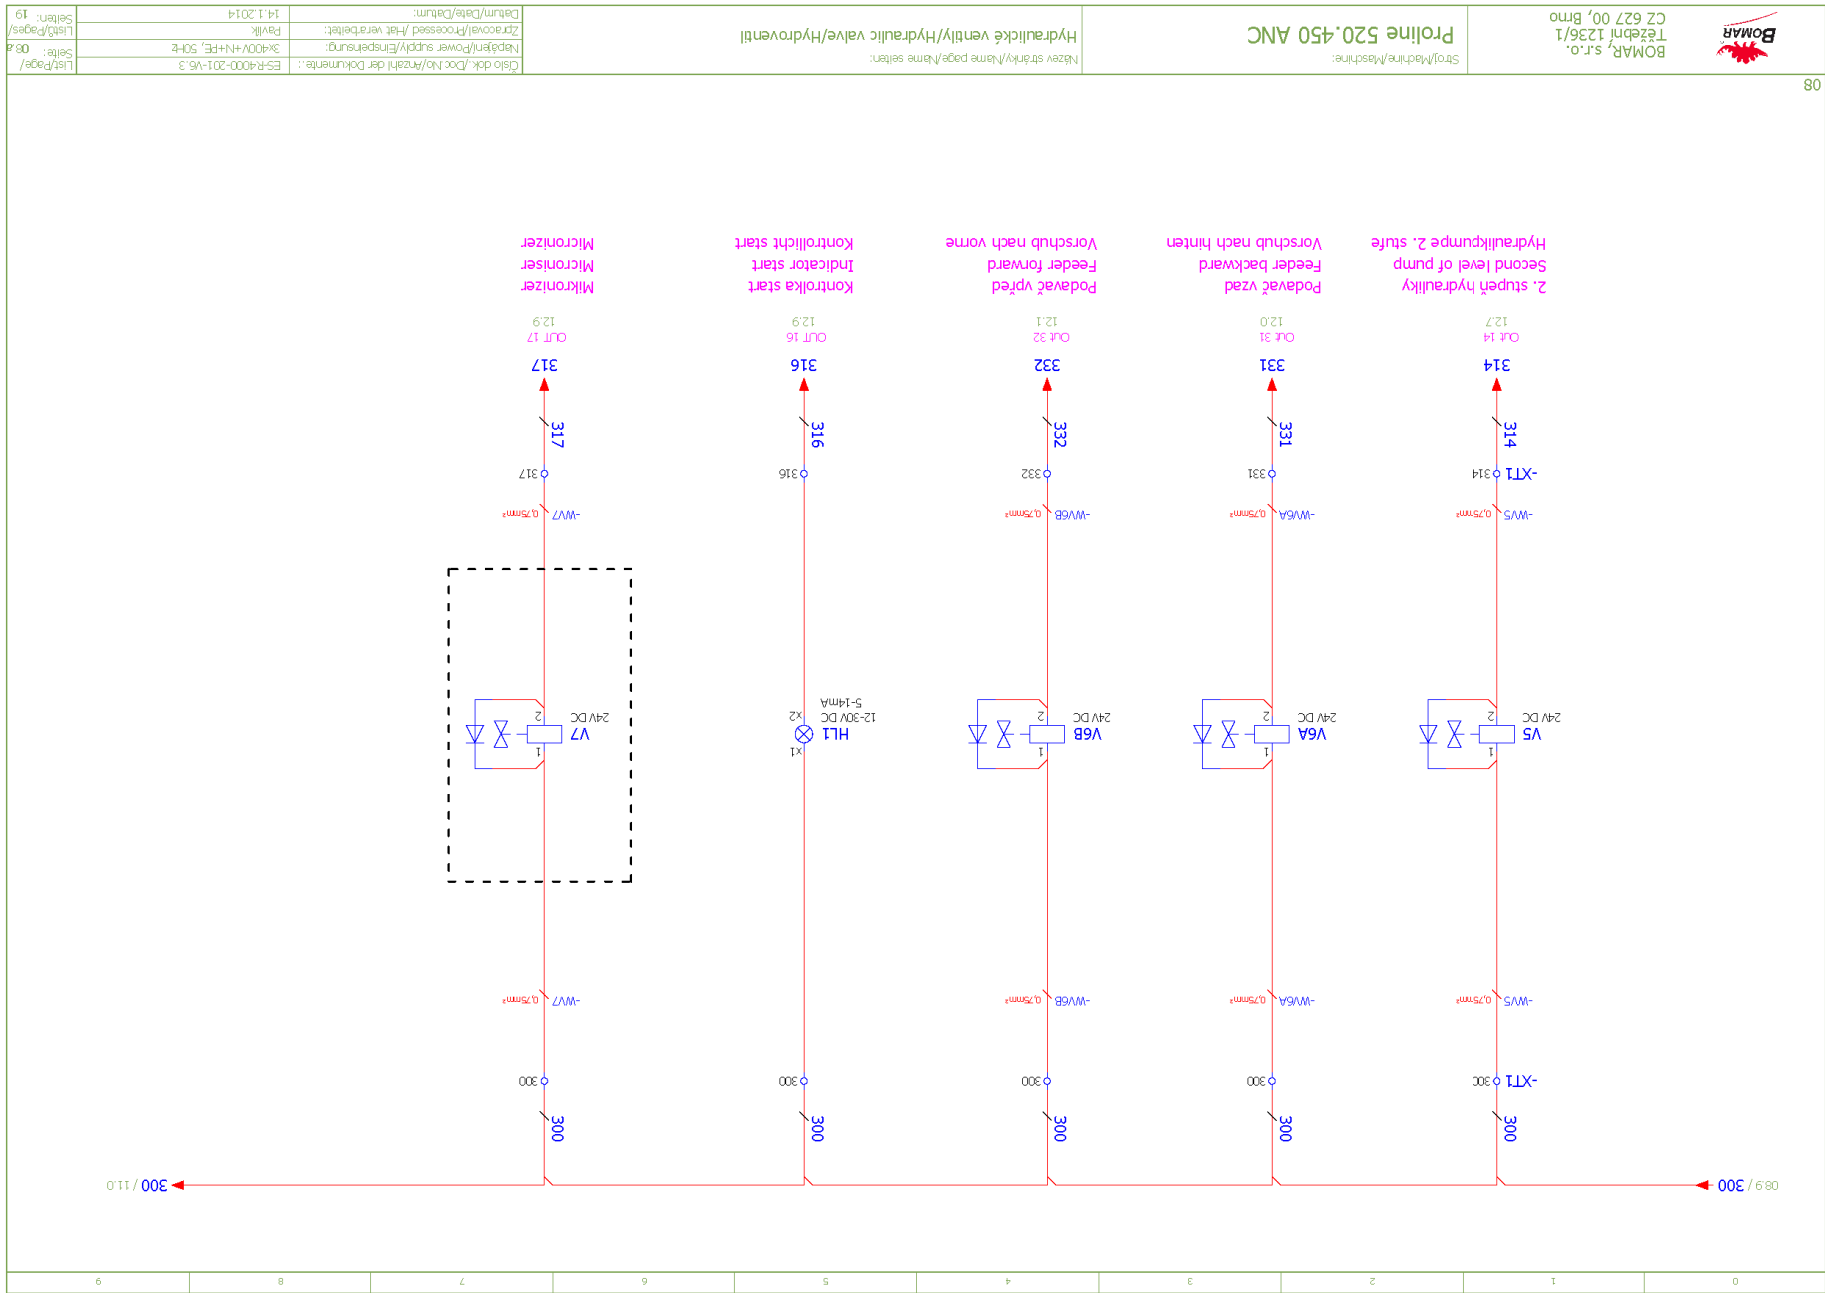


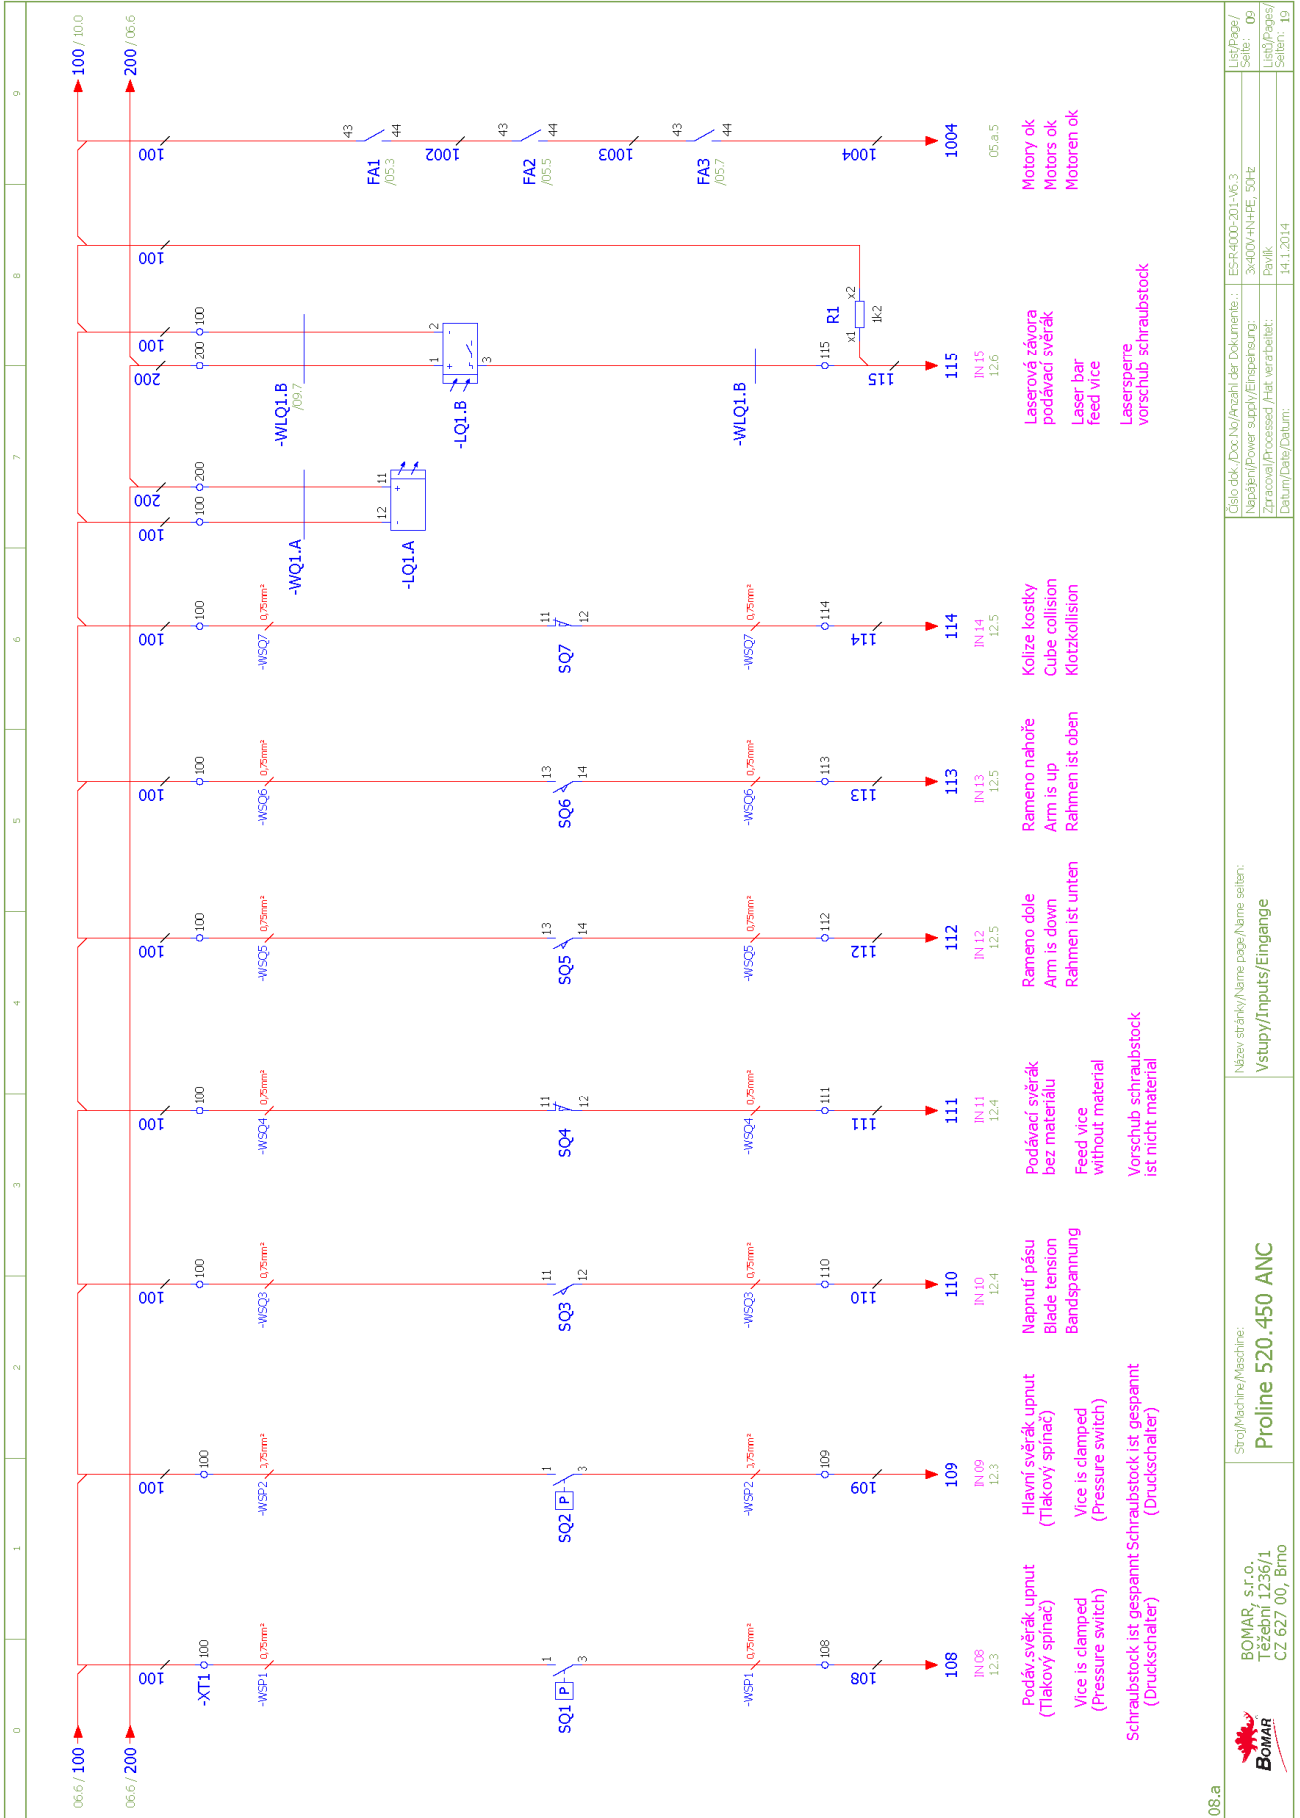


08.a


BOMAR, s.r.o. Těšební 1236/1 CZ 627 00, Brno	Stroj/Machine/Maschine: <b>Proline 520.450 ANC</b>	Název stránky/Name page/Name seiten: <b>Vstup/Inputs/Eingänge</b>		Cílová dok./Doc.No./Anzahl der Dokumente.: E54-400-201-V5.3	List/Page/ Seite: 00
		Datum/Date/Datum: 14.1.2014		Zpracoval/Processed/Abt. verarbeit.: Pavla	List/Page/ Seite: 19



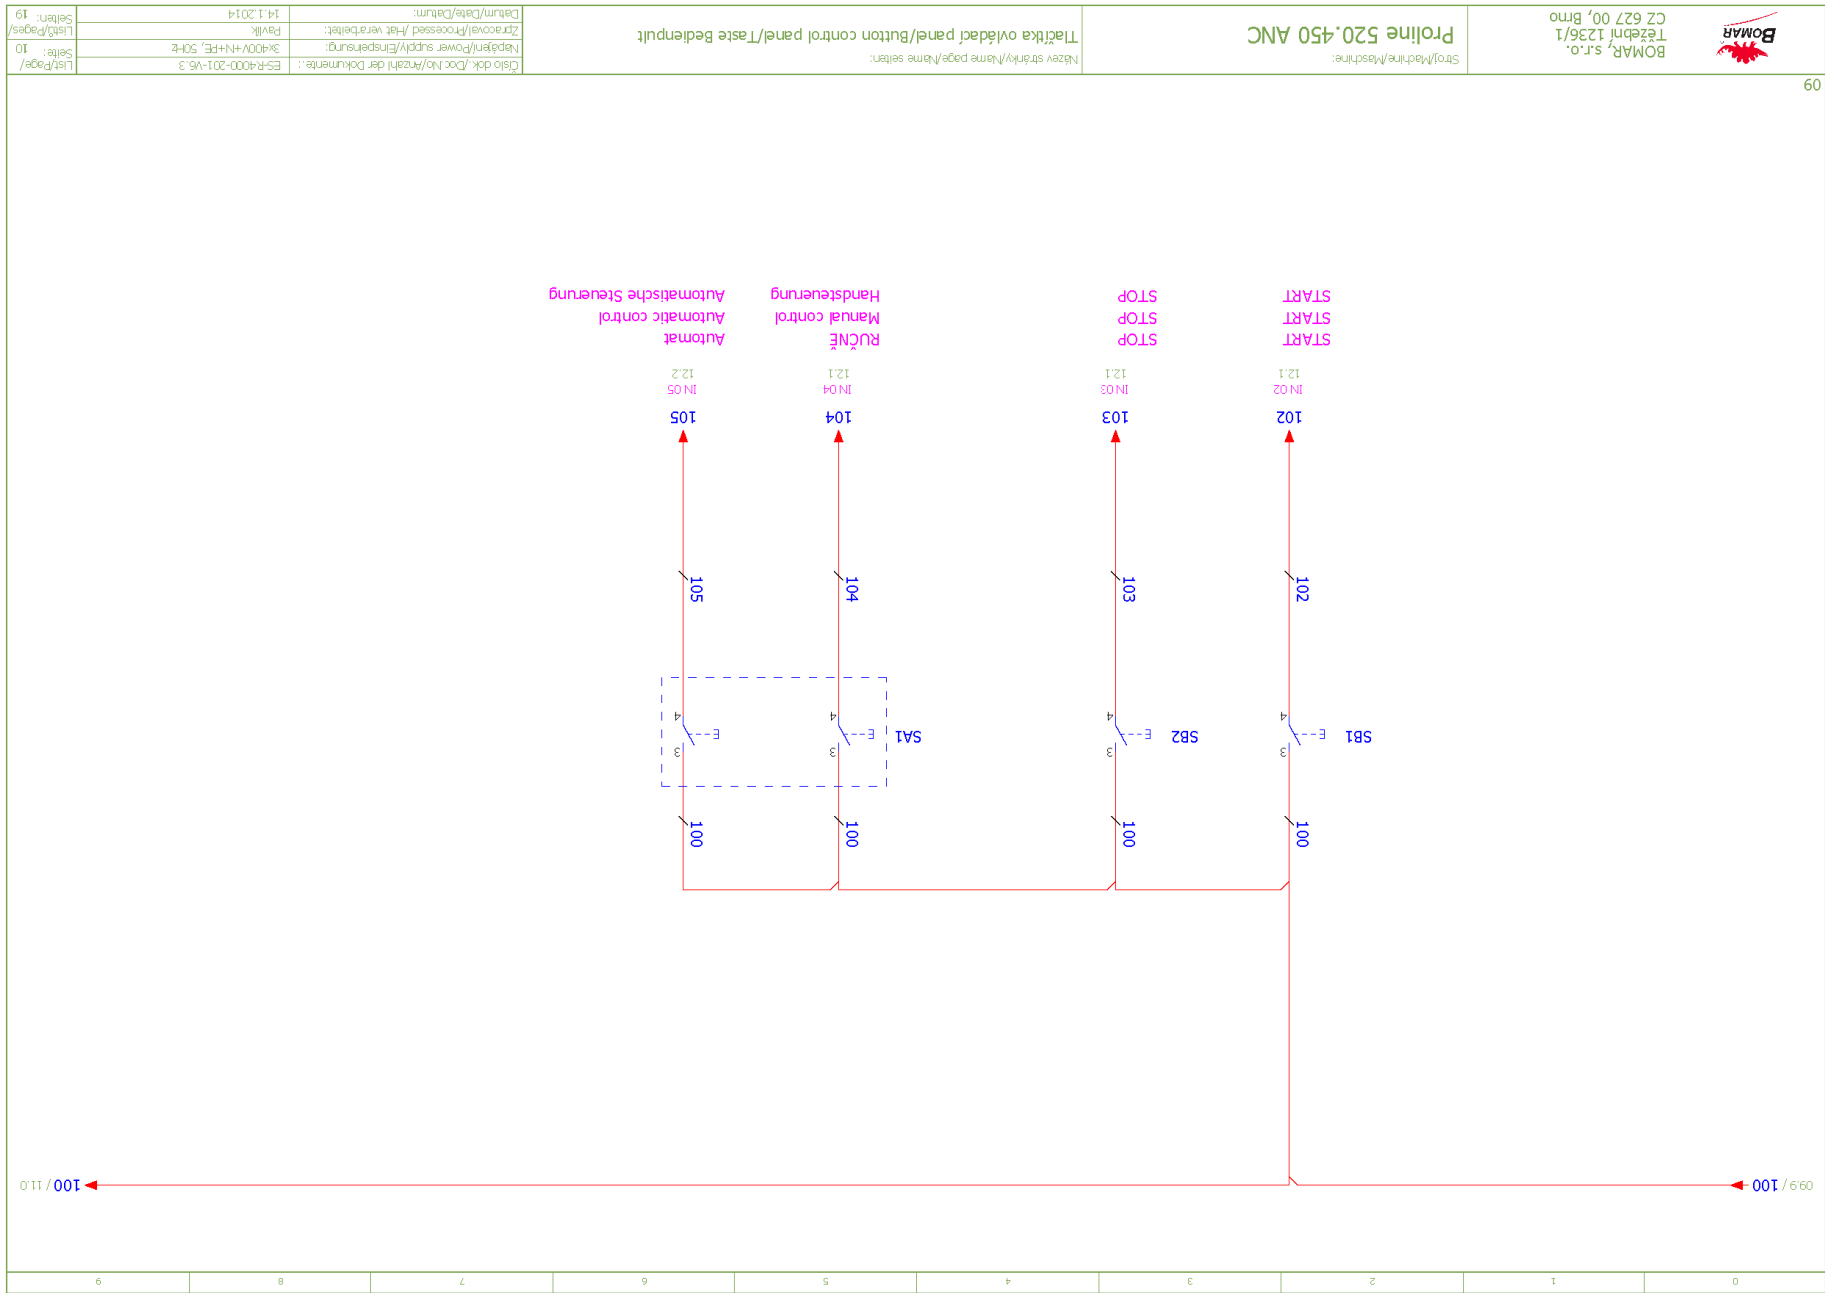

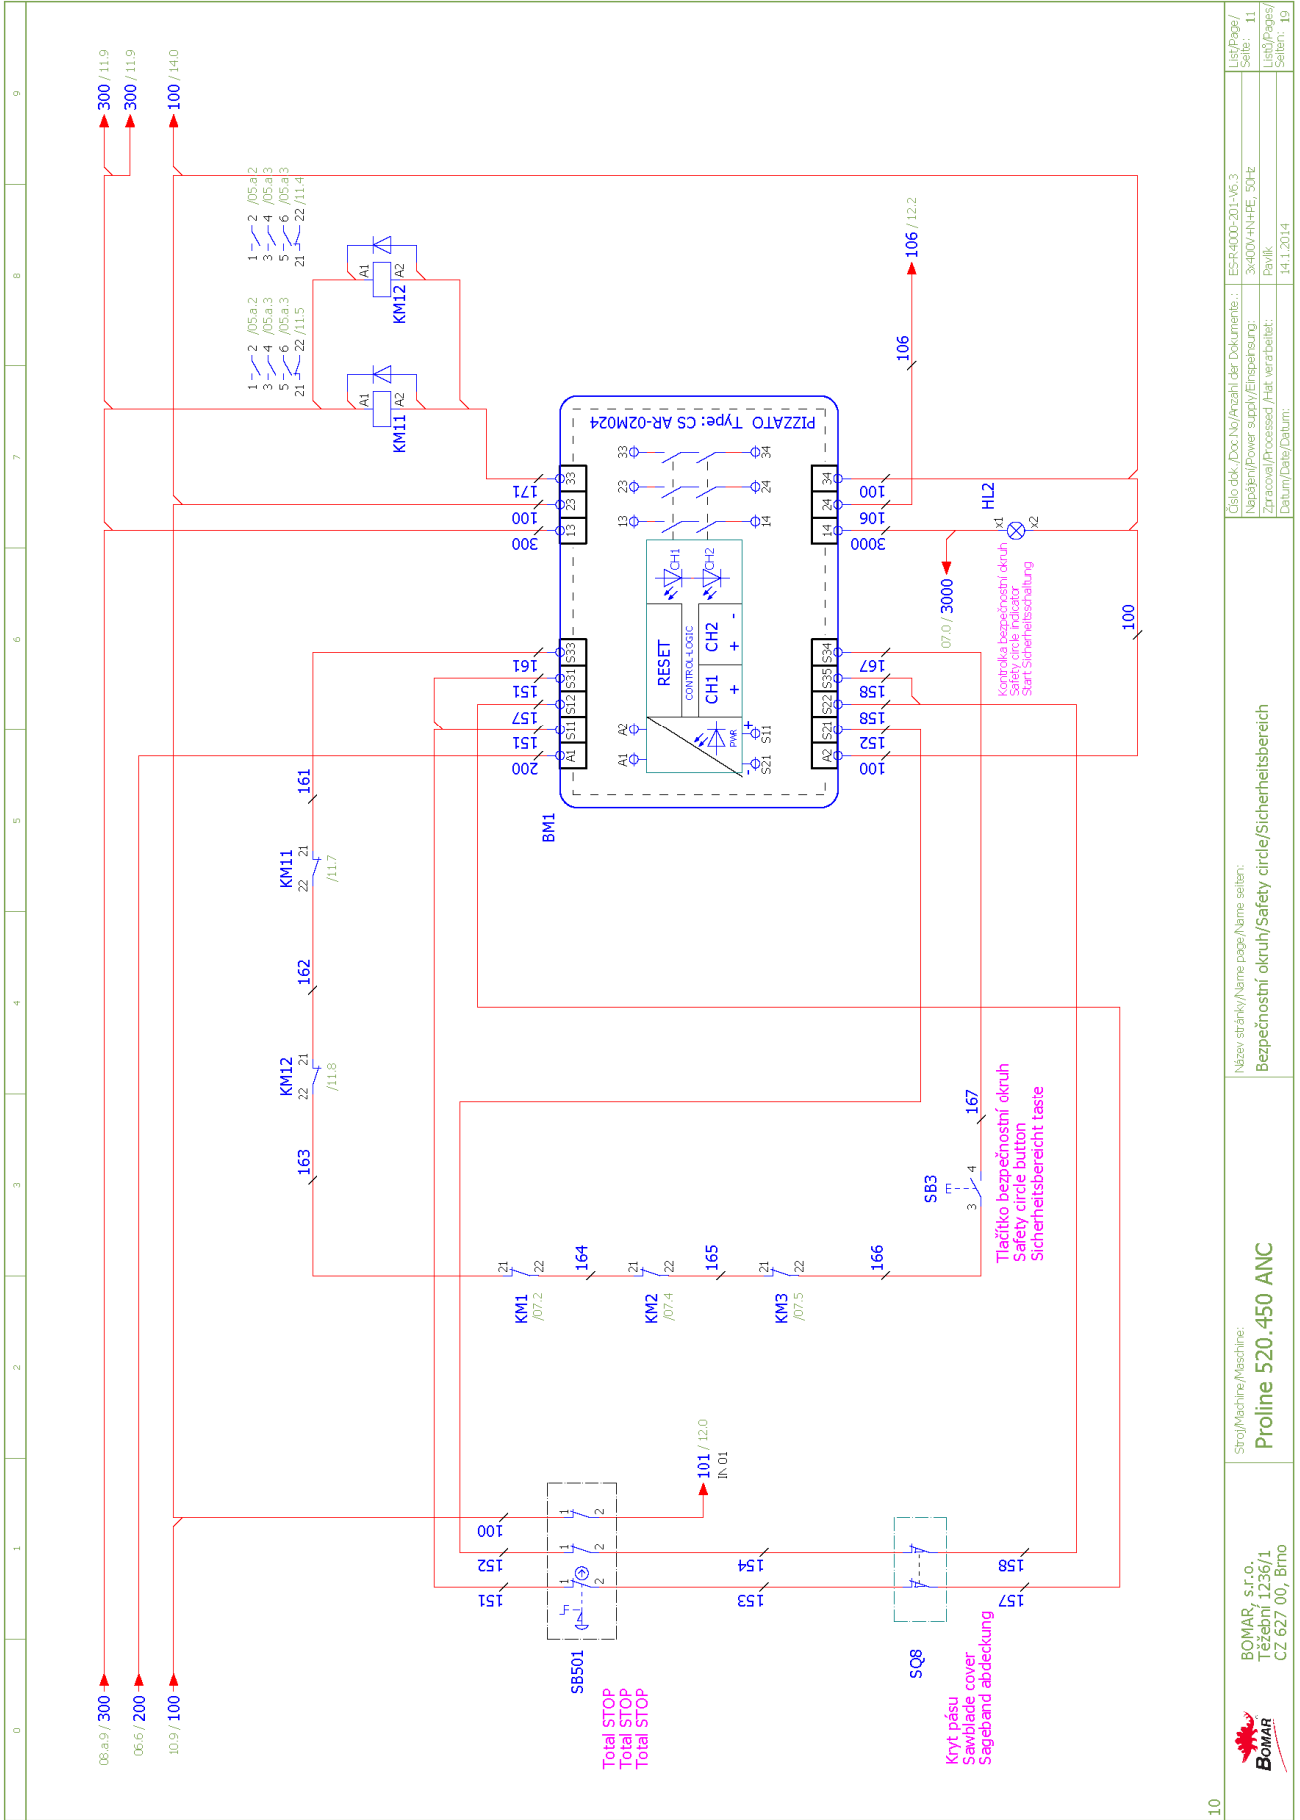

	BOMAR, s.r.o. Těšební 1236/1 CZ 627 00, Brno	Stroj/Machine/Maschine: <b>Proline 520.450 ANC</b>	Název stránky/Name page/Name seiten: <b>Bezpečnostní okruh/Safety circle/Sicherheitsbereich</b>	Číslo dok./Doc.No./Anzahl der Dokumente.: ES4-400-201-V5.3 Napájení/Power supply/Einspeisung: 3x400V/3N/PE, 50Hz Použití/Processed Part: verarbeit. Datum/Date/Datum: 14.1.2014	List/Page/ Seite: 11 List/Page/ Seite: 19
--	--	---	--	---	--

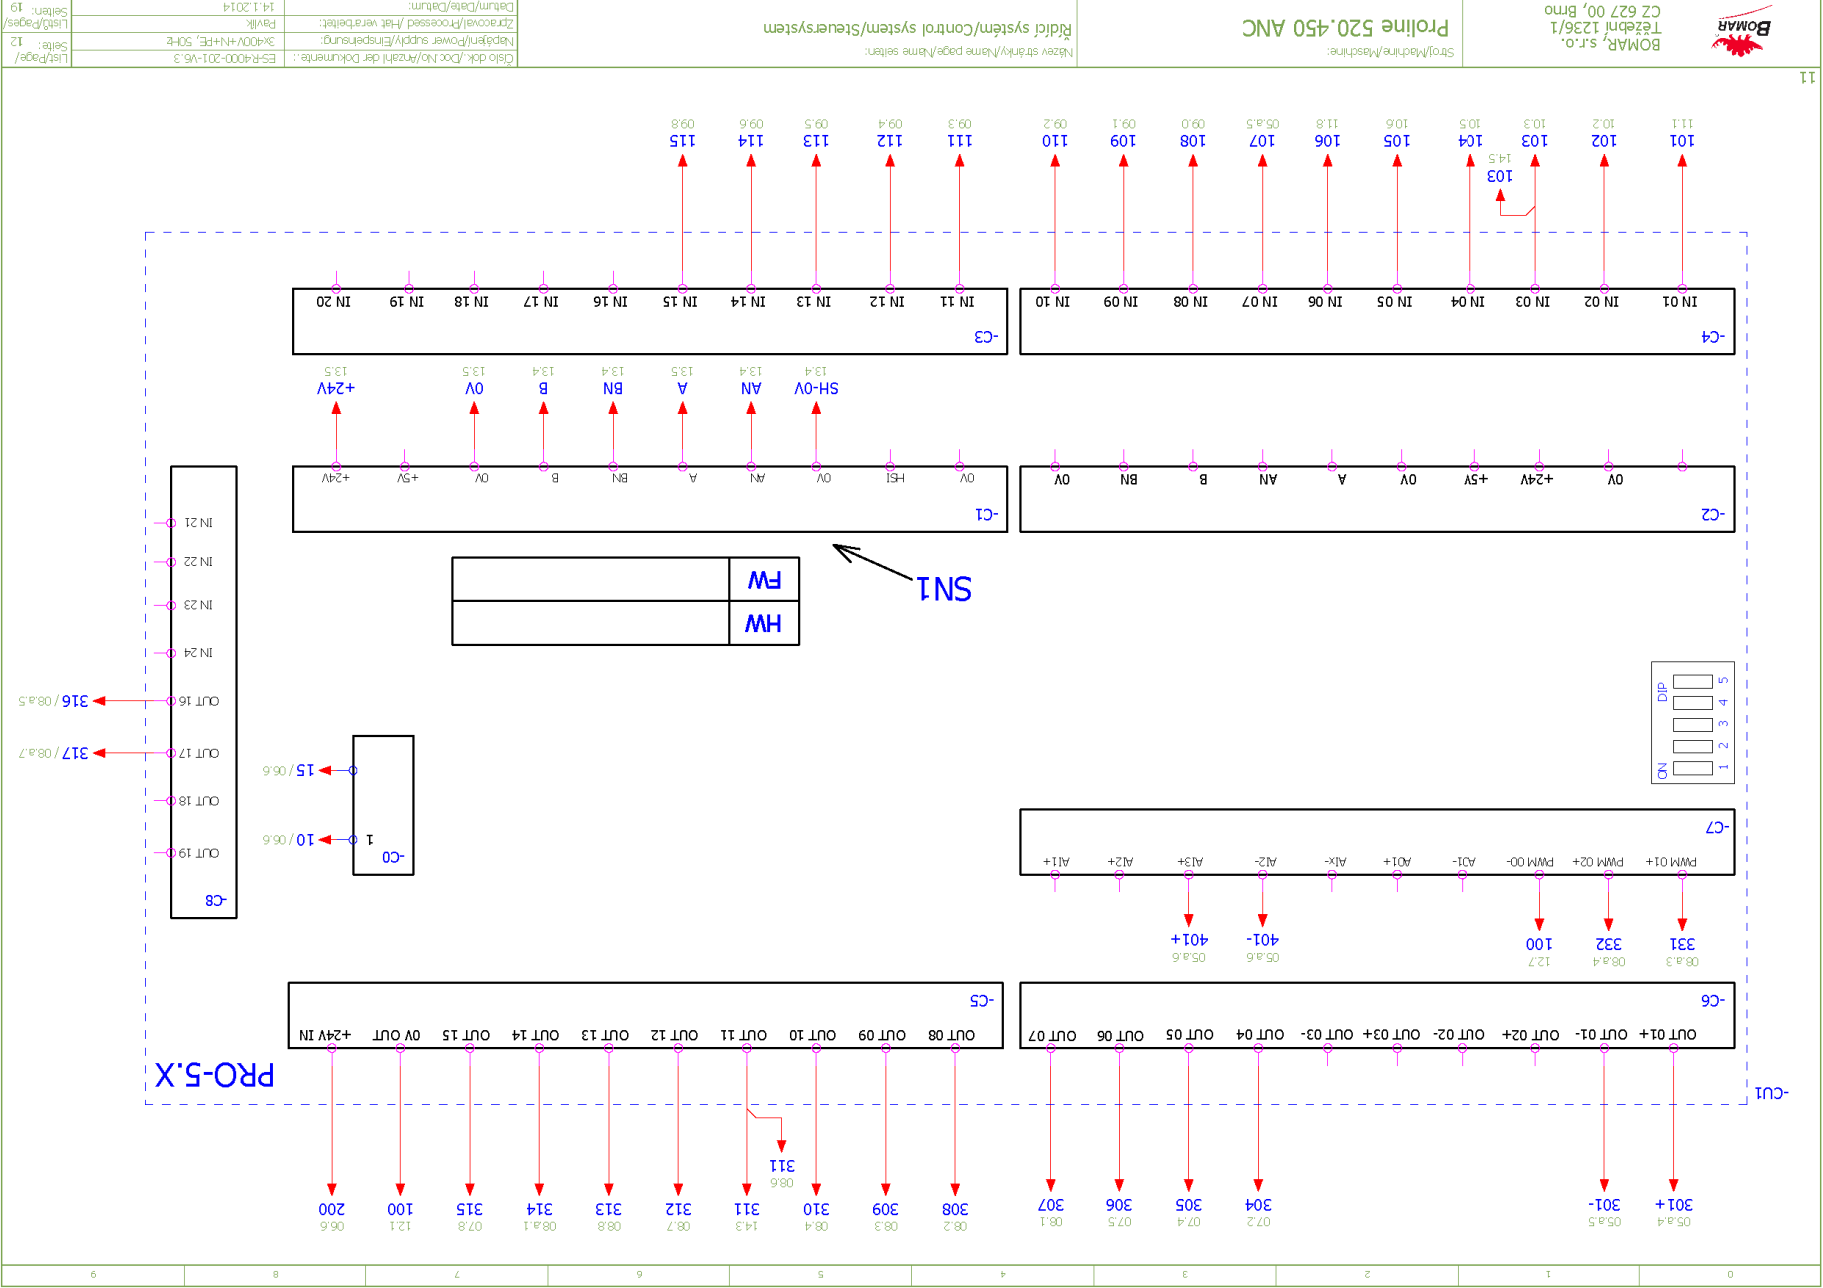

0	1	2	3	4	5	6	7	8	9
<b>SN1</b>		<b>Kabel HELU-Flexi 7x0.14</b>							
<b>+</b>	HNĚDÁ BROWN BRAUN	HNĚDÁ+MODRÁ BROWN+BLUE BRAU+BLAU							
<b>-</b>	BÍLÁ WHITE WEISS	HNĚDÁ/BÍLÁ+MODRÁ/BÍLÁ BROWN/WHITE+BLUE/WHITE BRAUN/WEISS+BLAU/WEISS							
<b>A</b>	ZELENÁ GREEN GRÜN	ZELENÁ GREEN GRÜN							
<b>AN</b>	FIALOVÁ VIOLET VIOLET	ZELENÁ/BÍLÁ GREEN/WHITE GRÜN/WEISS							
<b>B</b>	ŽLUTÁ YELLOW GELB	ORANŽOVÁ ORANGE ORANGE							
<b>BN</b>	ORANŽOVÁ ORANGE ORANGE	ORANŽOVÁ/BÍLÁ ORANGE/WHITE ORANGE/WEISS							
	ČERNÁ BLACK SCHWARZ	STÍTNĚNÍ SHIELD LEITUNGSSCHIRM							

SH-0V 12,5

BN 12,6 12,7


B 12,5 12,6

AN 12,5 12,6

A 12,6 12,7

- 12,7 12,8

+ 12,8

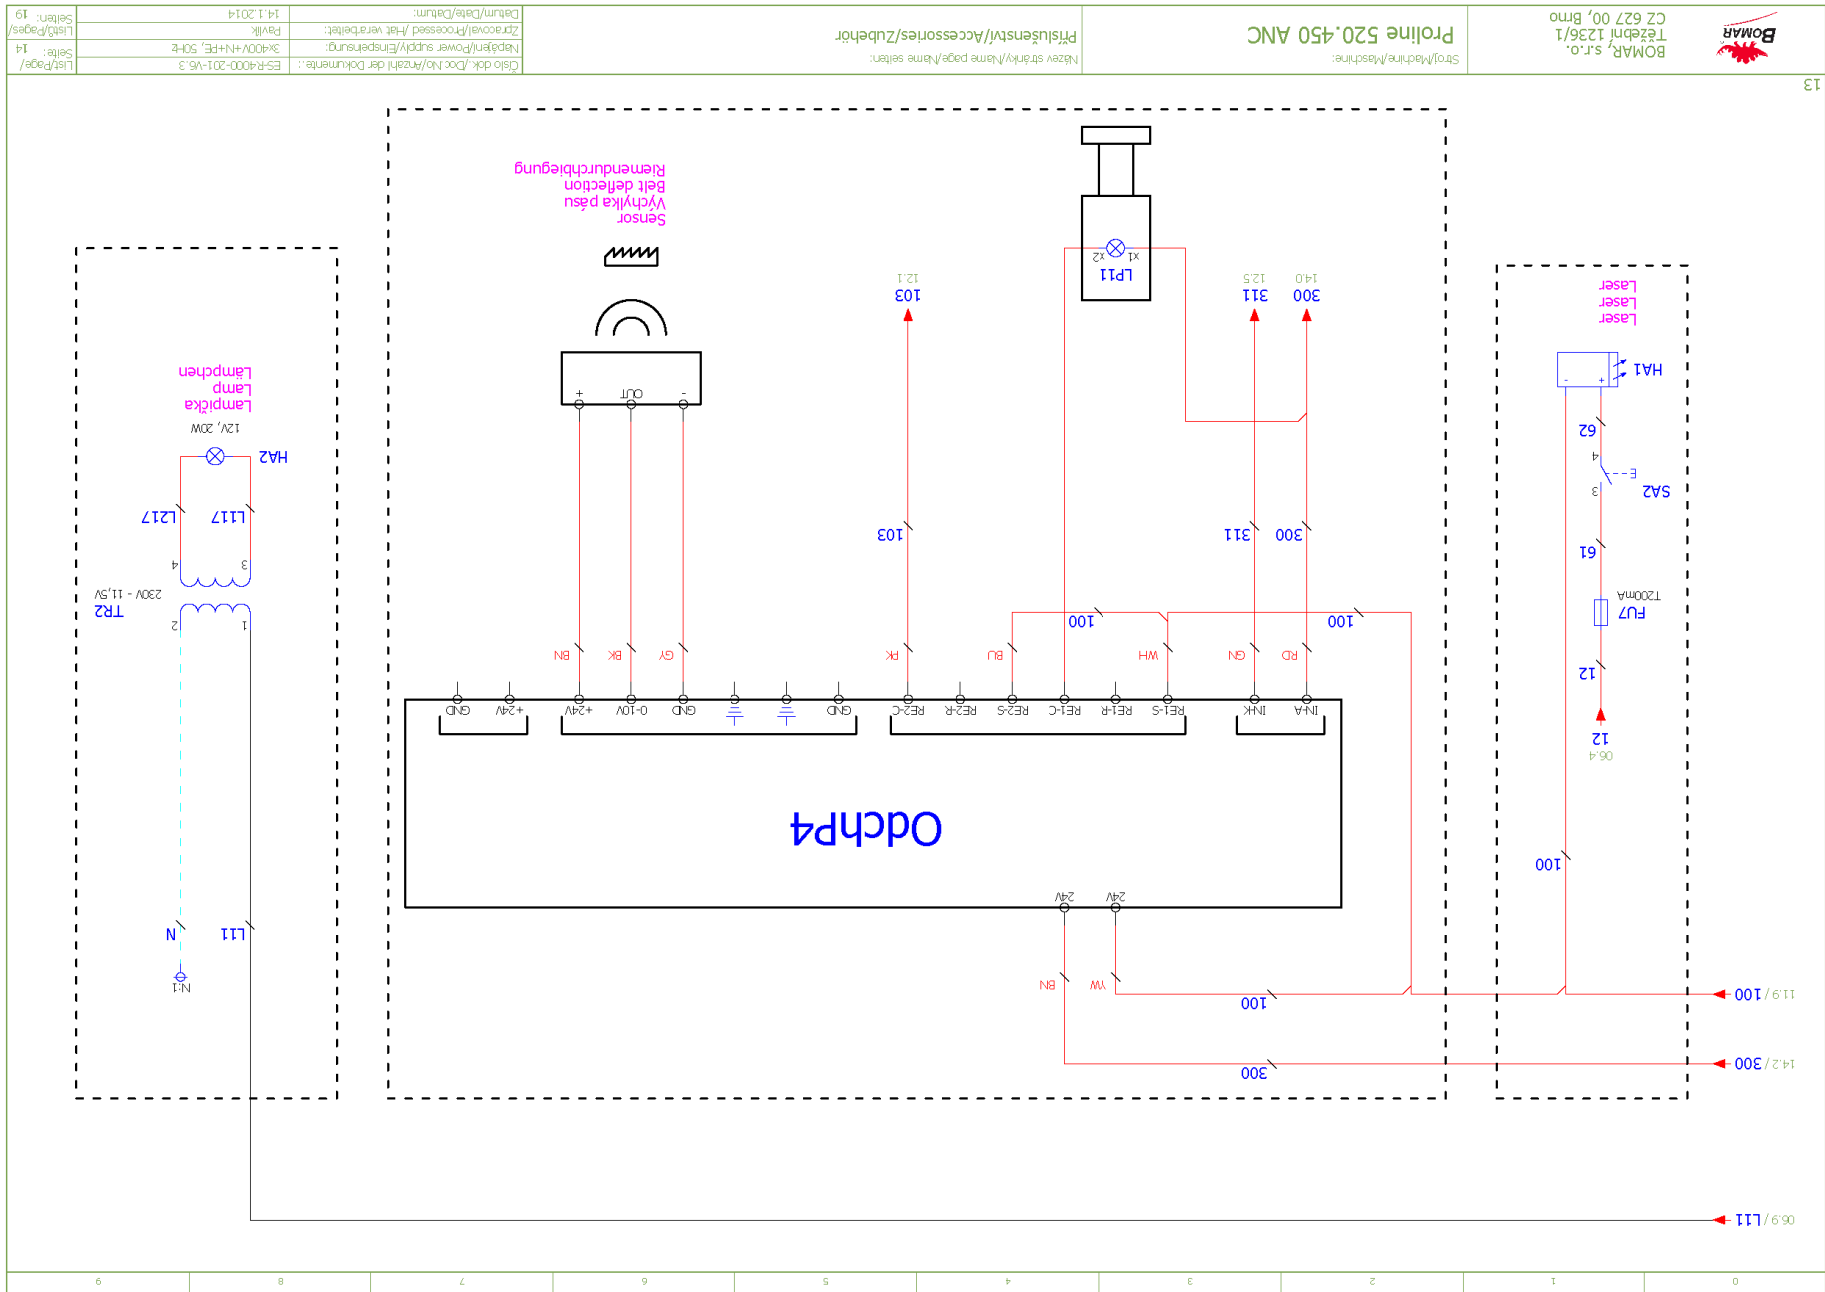
06/9/L11
14/2/300
11/9/100

6.2. Elektrické schéma /  
 Elektroschema /  
 Electric scheme – 3x400 V, PE, 50 Hz

0	1	2	3	4	5	6	7	8	9	
 <p><b>BOMAR, spol. s r.o.</b>  <b>Těžební 1236/1</b>  <b>627 00 Brno</b>  <b>Czech republic</b></p> <p style="font-size: 2em; font-weight: bold; text-align: center;">Proline 520.450 ANC</p>										
 <p><b>BOMAR, s.r.o.</b>  <b>Těžební 1236/1</b>  <b>CZ 627 00, Brno</b></p>			<p>Stroj/Machine/Maschine:  <b>Proline 520.450 ANC</b></p>				<p>Název stránky/Name page/Name seiten:  <b>Úvodní strana/Start page/Startseite</b></p>		<p>Číslo dok./Doc.No./Anzahl der Dokumente.: ESR400-202V6.3        Název/Power supply/Energieversorgung: 3x400V/PE, 50Hz        Zpracováno/Processed /Hat verarbeitet: Pavlik        Datum/Date/Datum: 14.1.2014</p>	
			<p>Stroj/Machine/Maschine:  <b>Proline 520.450 ANC</b></p>				<p>Název stránky/Name page/Name seiten:  <b>Úvodní strana/Start page/Startseite</b></p>		<p>Číslo dok./Doc.No./Anzahl der Dokumente.: ESR400-202V6.3        Název/Power supply/Energieversorgung: 3x400V/PE, 50Hz        Zpracováno/Processed /Hat verarbeitet: Pavlik        Datum/Date/Datum: 14.1.2014</p>	
			<p>Stroj/Machine/Maschine:  <b>Proline 520.450 ANC</b></p>				<p>Název stránky/Name page/Name seiten:  <b>Úvodní strana/Start page/Startseite</b></p>		<p>Číslo dok./Doc.No./Anzahl der Dokumente.: ESR400-202V6.3        Název/Power supply/Energieversorgung: 3x400V/PE, 50Hz        Zpracováno/Processed /Hat verarbeitet: Pavlik        Datum/Date/Datum: 14.1.2014</p>	

Stránka/Page/Seite	Název stránky/Name page/Seite	Datum/Date/Datum
00	Úvodní strana/Start page/Startseite	14.1.2014
01	Obsah/ Table of contents/ Inhaltsverzeichnis	14.1.2014
02	Rozmístění prvků v rozvaděči RS1/ Placement of elements in enclosure RS1/ Platzierung der Elemente im Schaltschrank RS1	14.1.2014
03	Ovládací panel na rozvaděči/Control panel/Bedienpult	14.1.2014
04	Kusovník artiklů/Parts list/ Artikelstückliste	14.1.2014
04.a	Kusovník artiklů/Parts list/ Artikelstückliste	14.1.2014
04.b	Kusovník artiklů/Parts list/ Artikelstückliste	14.1.2014
05	Silová část M1-M3 / Power part M1-M3 / Feld partie M1-M3	14.1.2014
05.a	Frekvenční měnič M4 / Speed controller M4 / Frequenzumrichter M4	14.1.2014
06	Deska zdroje/Power board/Netzgerat-Platte	14.1.2014
07	Stykače motorů, M5/Motor-Schutzschalter, M5	14.1.2014
08	Hydraulické ventily/Hydraulic valve/Hydroventil	14.1.2014
08.a	Hydraulické ventily/Hydraulic valve/Hydroventil	14.1.2014
09	Vstupy/Inputs/Eingänge	14.1.2014
10	Tlačítka ovládací panel/Buton control panel/Taste Bedienpult	14.1.2014
11	Bezpečnostní okruh/Safety circle/Sicherheitserbereich	14.1.2014
12	Rídící systém/Control system/Steuerersystem	14.1.2014
13	Odměrování/Remuneration/Abmessung	14.1.2014
14	Příslušenství/Accessories/Zubehör	14.1.2014

Obsah/ Table of contents/ Inhaltsverzeichnis

00	Úvodní strana/Start page/Startseite	14.1.2014
01	Obsah/ Table of contents/ Inhaltsverzeichnis	14.1.2014
02	Rozmístění prvků v rozvaděči RS1/ Placement of elements in enclosure RS1/ Platzierung der Elemente im Schaltschrank RS1	14.1.2014
03	Ovládací panel na rozvaděči/Control panel/Bedienpult	14.1.2014
04	Kusovník artiklů/Parts list/ Artikelstückliste	14.1.2014
04.a	Kusovník artiklů/Parts list/ Artikelstückliste	14.1.2014
04.b	Kusovník artiklů/Parts list/ Artikelstückliste	14.1.2014
05	Silová část M1-M3 / Power part M1-M3 / Feld partie M1-M3	14.1.2014
05.a	Frekvenční měnič M4 / Speed controller M4 / Frequenzumrichter M4	14.1.2014
06	Deska zdroje/Power board/Netzgerat-Platte	14.1.2014
07	Stykače motorů, M5/Motor-Schutzschalter, M5	14.1.2014
08	Hydraulické ventily/Hydraulic valve/Hydroventil	14.1.2014
08.a	Hydraulické ventily/Hydraulic valve/Hydroventil	14.1.2014
09	Vstupy/Inputs/Eingänge	14.1.2014
10	Tlačítka ovládací panel/Buton control panel/Taste Bedienpult	14.1.2014
11	Bezpečnostní okruh/Safety circle/Sicherheitserbereich	14.1.2014
12	Rídící systém/Control system/Steuerersystem	14.1.2014
13	Odměrování/Remuneration/Abmessung	14.1.2014
14	Příslušenství/Accessories/Zubehör	14.1.2014




BOMAR, s.r.o.  
Těžební 1236/1  
CZ 627 00, Brno


Proline 520.450 ANC


Obsah/ Table of contents/ Inhaltsverzeichnis

01	Úvodní strana/Start page/Startseite	14.1.2014
02	Obsah/ Table of contents/ Inhaltsverzeichnis	14.1.2014
03	Rozmístění prvků v rozvaděči RS1/ Placement of elements in enclosure RS1/ Platzierung der Elemente im Schaltschrank RS1	14.1.2014
04	Ovládací panel na rozvaděči/Control panel/Bedienpult	14.1.2014
05	Kusovník artiklů/Parts list/ Artikelstückliste	14.1.2014
06	Kusovník artiklů/Parts list/ Artikelstückliste	14.1.2014
07	Kusovník artiklů/Parts list/ Artikelstückliste	14.1.2014
08	Silová část M1-M3 / Power part M1-M3 / Feld partie M1-M3	14.1.2014
09	Frekvenční měnič M4 / Speed controller M4 / Frequenzumrichter M4	14.1.2014
10	Deska zdroje/Power board/Netzgerat-Platte	14.1.2014
11	Stykače motorů, M5/Motor-Schutzschalter, M5	14.1.2014
12	Hydraulické ventily/Hydraulic valve/Hydroventil	14.1.2014
13	Hydraulické ventily/Hydraulic valve/Hydroventil	14.1.2014
14	Vstupy/Inputs/Eingänge	14.1.2014
15	Tlačítka ovládací panel/Buton control panel/Taste Bedienpult	14.1.2014
16	Bezpečnostní okruh/Safety circle/Sicherheitserbereich	14.1.2014
17	Rídící systém/Control system/Steuerersystem	14.1.2014
18	Odměrování/Remuneration/Abmessung	14.1.2014
19	Příslušenství/Accessories/Zubehör	14.1.2014

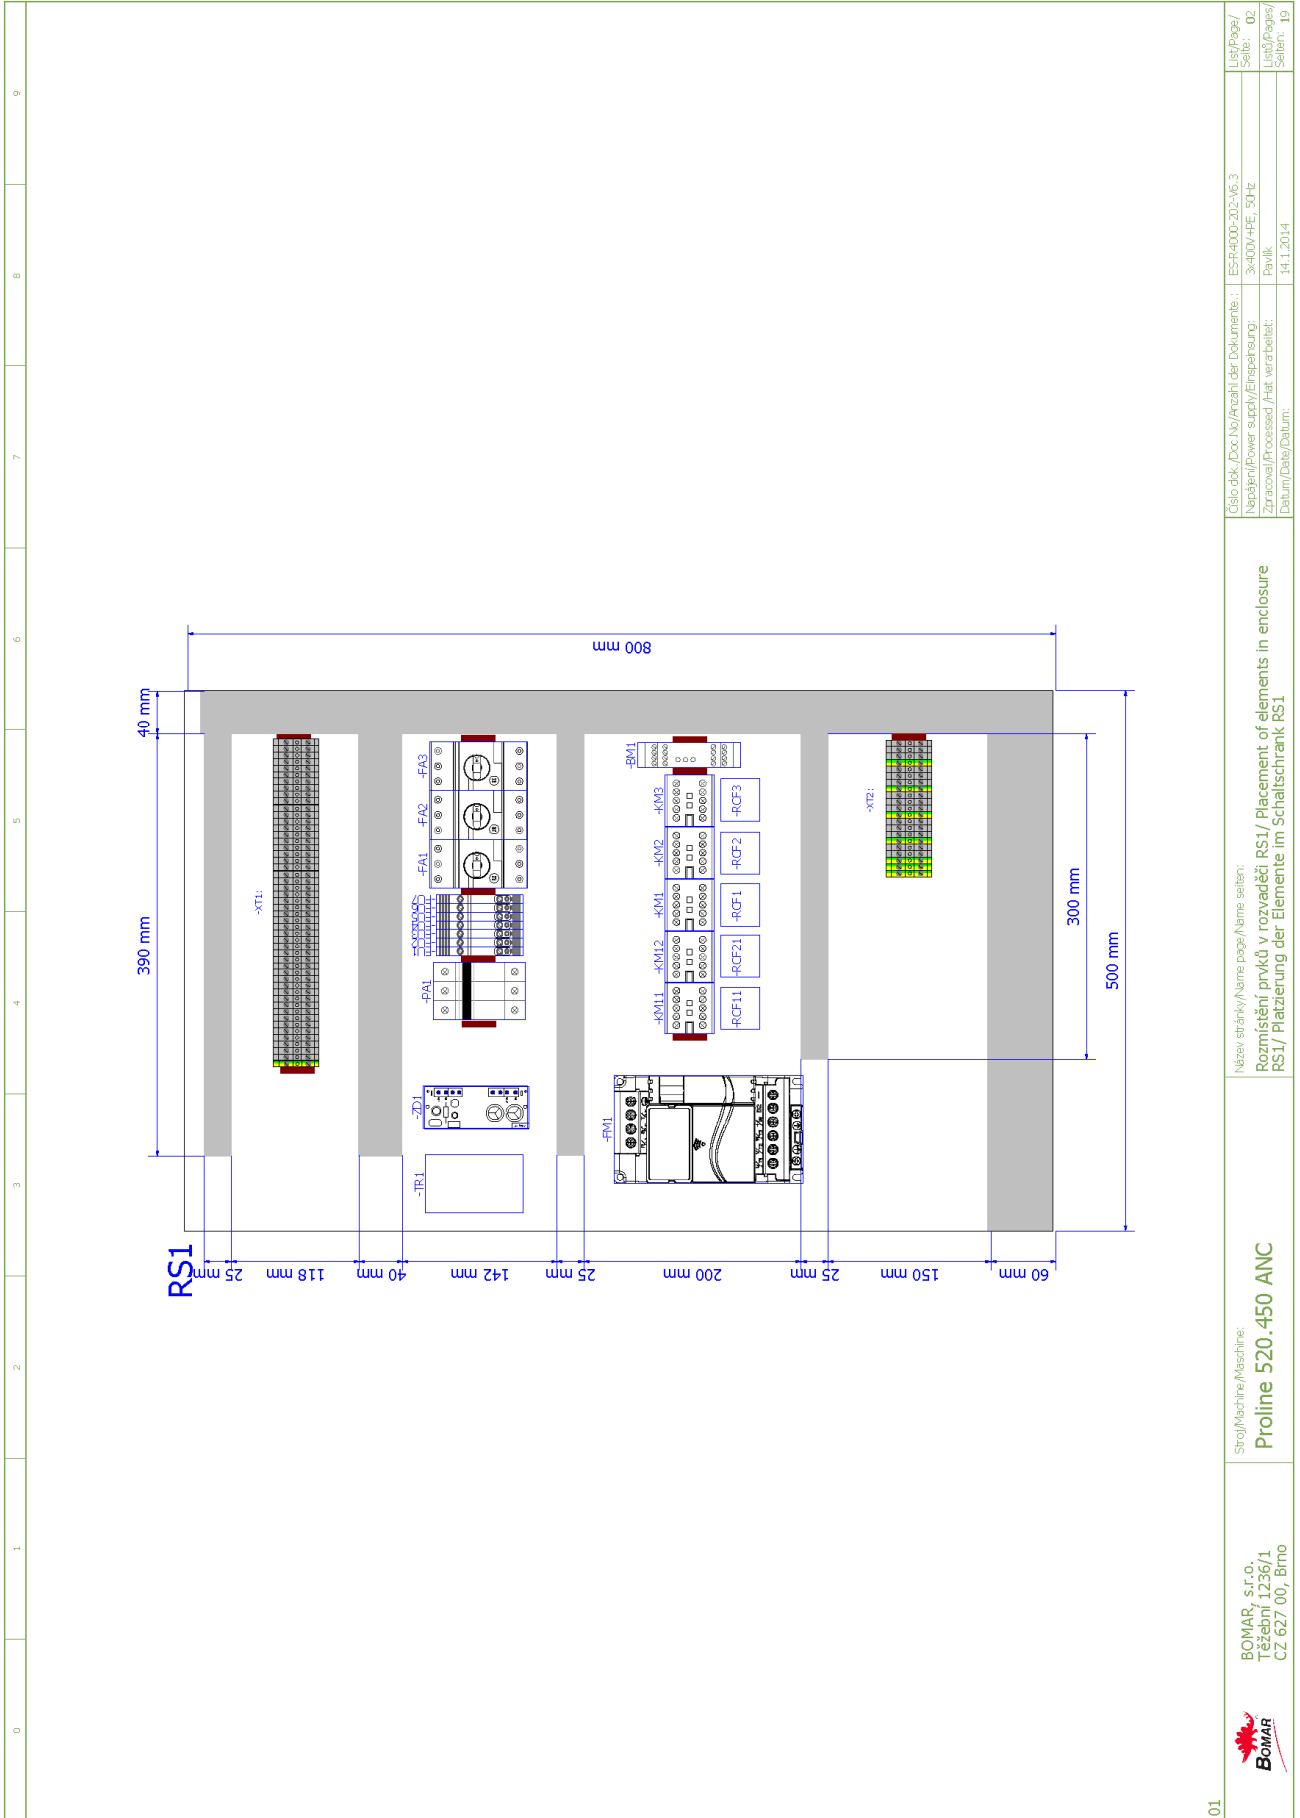



List/Page/ Seite: 03 Leitf./Pages/ Seiten: 19	Datum/Date/Datum: 14.1.2014 Zpracoval/Processed /Akte verarbeit: Pavlik Napájení/Power supply/Einspeisung: 3x400V+PE, 50Hz	Ovládací panel na rozvaděči/Control panel/Bedienpult Název stránky/Name page/Name screen: ES-R4000-202-V5.3	Sro./Machine/Maschine: <b>Proline 520.450 ANC</b> Těžiště/1236/1 BOMAR, s.r.o. CZ 627 00, Brno	
--	---	---	--	---

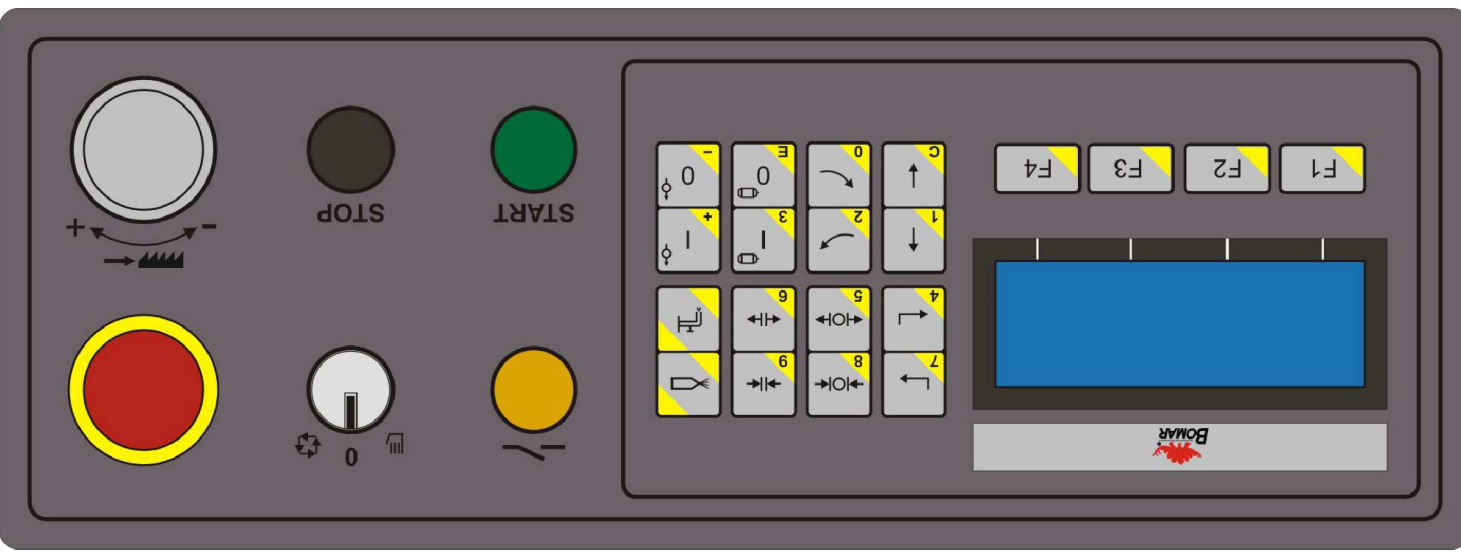

The diagram shows a control panel with the following components:

- RP1**: A large grey rotary knob with a saw icon and +/- symbols.
- SB2**: A black circular button labeled "STOP".
- SB1**: A green circular button labeled "START".
- SB3**: A yellow circular button with a power symbol.
- SA1**: A white rotary selector with a saw icon and a "0" position.
- SB501**: A red circular button with a yellow border.
- A central keypad with 12 buttons (0-9, C, E) and a numeric keypad (0-9, +/-, C, E).
- A blue LCD screen with the BOMAR logo below it.
- Four function keys labeled F1, F2, F3, and F4.



0	1	2	3	4	5	6	7	8	9
<b>Parts list</b>									
Device identification	Device description	Type number	Manufacturer	Part number	Quantity	Location (page.column)			
-ZD1	Power supply unit - 15VAC/24VDC; 20VAC/28VDC	ZDR-03	Bomar	265.915	1	/06.2			
-CU1	Touch-sensitive keyboard	31.R230-207	AKI ELECTRONIC spol.s.r.o.	31.R230-207	1	/12.0			
-FA1	Auxiliary Contact Block - 1xNO+1xNC	HKF1-11	ABB	91.046.002	1	/05.3			
-FA2	Auxiliary Contact Block - 1xNO+1xNC	HKF1-11	ABB	91.046.002	1	/05.5			
-FA3	Auxiliary Contact Block - 1xNO+1xNC	HKF1-11	ABB	91.046.002	1	/05.7			
-HL1	Green light for Eaton adapter	M22-LED-G	EATON	91.061.023	1	/08.a.5			
-HL2	White light for Eaton adapter	M22-LED-W	EATON	91.061.034	1	/11.7			
-SA1	Head of 3 positional switch	M22-WRK3	EATON	91.060.051	1	/10.5			
-SB1	Green translucent switch head	M22-DL-G	EATON	91.060.031	1	/10.2			
-SB3	Yellow translucent switch head	M22-DL-Y	EATON	91.060.053	1	/11.3			
-SN1	Lineare incrementa encoder - 10-30VDC/5V TTL line driver	LMIX2-026-08.0-1-01	ELGO	91.270.006	1	/13.4			
-FU1	Tube fuse - 2A/250V, slow, 5x20	T2A/250V	ESKA	91.230.001	1	/06.1			
-FU2	Tube fuse - 2A/250V, slow, 5x20	T2A/250V	ESKA	91.230.001	1	/06.1			
-FU3	Tube fuse - 500mA/250V, slow, 5x20	T500mA/250V	ESKA	91.230.011	1	/06.5			
-FU6	Tube fuse - 6.3A/250V, slow, 5x20	T6.3A/250V	ESKA	91.230.002	1	/06.5			
-RP1	Potenciometr 4k7	TP195 4k7/M20A	GES-ELECTRONICS, a.s.	91.283.015	1	/05.a.6			
-RP1	Potentiometer knob - 24mm	S8877 BLK	GES-ELECTRONICS, a.s.	91.060.063	1	/05.a.6			
-RCF1	RCF filter	FBOPR1624	Ing. Miroslav Viček	91.041.015	1	/05.2			
-RCF2	RCF filter	FBOPR1624	Ing. Miroslav Viček	91.041.015	1	/05.4			
-RCF3	RCF filter	FBOPR1624	Ing. Miroslav Viček	91.041.015	1	/05.6			
-RCF11	RCF filter	FBOPR1624	Ing. Miroslav Viček	91.041.015	1	/05.a.1			
-RCF21	RCF filter	FBOPR1624	Ing. Miroslav Viček	91.041.015	1	/05.a.1			
-BM1	Safety relay - 3xNO	CS AR-02M024	PIZZATO	91.051.034	1	/11.5			
-FA1	Manual motor starter - 0.4A	MS116-0,4	ABB	91.045.017	1	/05.3			
-FA2	Manual motor starter - 1A	MS116-1,00	ABB	91.045.019	1	/05.5			
-FA3	Manual motor starter - 4A	MS116-4,0	ABB	91.045.022	1	/05.7			
-FU1	Fuse terminal	WK4/THSI5U	WIELAND	91.251.102	1	/06.1			
-FU2	Fuse terminal	WK4/THSI5U	WIELAND	91.251.102	1	/06.1			

The manufacturer reserves right to use an equivalent replacement device.

BOMAR, s.r.o. Těšební 1236/1 CZ 627 00, Brno	Stroj/Machine/Maschine: <b>Proline 520.450 ANC</b>	Název stránky/Name page/Name seiten: <b>Kusovník artikl/ Parts list/ Artikelstückliste</b>	Celo odk./Doc.No./Anzahl der Dokumente.: ESR-400-202-V6.3	List/Page/ Seite: <b>04</b>
			Nápojn/Power supply/Einspeisung: 3x400V/4PE, 50Hz	List/Page/ Seite: <b>04</b>
			Zpracoval/Processed/Abt. verarbeitet: JH.L.2014	List/Page/ Seite: <b>19</b>


0	1	2	3	4	5	6	7	8	9
Device identification	Device description	Type number	Manufacturer	Part number	Quantity	Location (page,column)			
-FU3	Fuse terminal	WK4/TH15U	WIELAND	91.251.102	1	/06,5			
-FU4	Fuse terminal	WK4/TH15U	WIELAND	91.251.102	1	/06,5			
-FU4	Tube fuse - 800mA/250V, slow, 5x20	T800mA/250V	ESKA	91.230.010	1	/06,5			
-FU5	Fuse terminal	WK4/TH15U	WIELAND	91.251.102	1	/06,5			
-FU5	Tube fuse - 1A/250V, slow, 5x20	T1A/250V	ESKA	91.230.031	1	/06,5			
-FU6	Fuse terminal	WK4/TH15U	WIELAND	91.251.102	1	/06,5			
-FU7	Tube fuse - 200mA/250V, slow, 5x20	T200mA/250V	ESKA	91.230.037	1	/14,1			
-FU7	Fuse terminal	WK4/TH15U	WIELAND	91.251.102	1	/14,1			
-KM1	Minicontactor - 4kV/400V, 3P	B65-30-01-1..7-71	ABB	91.040.049	1	/07,2			
-KM2	Minicontactor - 4kV/400V, 3P	B65-30-01-1..7-71	ABB	91.040.049	1	/07,4			
-KM3	Minicontactor - 4kV/400V, 3P	B65-30-01-1..7-71	ABB	91.040.049	1	/07,5			
-KM11	Minicontactor - 4kV/400V, 3P	B65-30-01-1..7-71	ABB	91.040.049	1	/11,7			
-KM12	Minicontactor - 4kV/400V, 3P	B65-30-01-1..7-71	ABB	91.040.049	1	/11,8			
-PA1	Fuse switch disconnector E-90 - 3P	E 93/32	ABB	91.241.014	1	/05,a,2			
-QS1	Handle switch - black	OHBS2P3	ABB	91.180.015	1	/05,0			
-RP1	Fastconnect clamp	WAGO 224-112	WIELAND	91.250.009	3	/05,a,6			
-SA1	Attaching adapter + INO	M22-AK10	EATON	91.061.021	1	/10,5			
-SA1	NO contact for Eaton adapter	M22-K10	EATON	91.061.022	1	/10,5			
-SB1	Attaching adapter + INO	M22-AK10	EATON	91.061.021	1	/10,2			
-SB2	Attaching adapter + INO	M22-AK10	EATON	91.061.021	1	/10,3			
-SB2	Switch head - black	M22-D-S	EATON	91.060.035	1	/10,3			
-SB3	Attaching adapter + INO	M22-AK10	EATON	91.061.021	1	/11,3			
-SB501	Emergency-stop mushroom push - button + 3XNC	YW1B-V4E02R	IDEC	91.060.084	1	/11,1			
-TR1	Toroidal transformer - 0-230-400V/20V/15V, 0.65-0.38A/6A/2A, 150VA	1502304002015	KARBAN s.r.o.	91.080.026	1	/06,1			
-SQ8	Safety limit switch - 2XNC	QKS8	KEDU	91.173.012	1	/11,1			
-PA1	Cylindric fuse - 12A, 10x38 fast, gG characteristic	PV10 12A gG	OEZ	91.231.007	3	/05,a,2			
-SQ3	Limit switch - 1NC+1NO, M20, slow	D4N-4A32	OMRON	91.173.010	1	/09,2			
-SQ4	Limit switch - 1NO + 1NC, roller, M2, snap action	FR 605-M2	PIZZATO	91.173.009	1	/09,3			


The manufacturer reserves right to use an equivalent replacement device.

04	 BOMAR, s.r.o. Těšební 1236/1 CZ 627 00, Brno	Proline 520.450 ANC Strojí/Machine/Maschine:	Kusuovník artiklů/ Parts list/ Artikelstückliste	Název stránky/Name page/Name section: Název/Power supply/Einspeisung: Zpracovatel/Processed /Artl. verarbeitet: Datum/Date/Datum:	ES-R4000-20-V6,3 3x400V+PE, 50Hz PAVIK 14.1.2014	List/Page/ Seite: 04 4 List/Pages/ Seiten: 19
----	--	---	--	--	---	--


0	1	2	3	4	5	6	7	8	9
<b>Parts list</b>									
Device identification	Device description	Type number	Manufacturer	Part number	Quantity	Location (page.column)			
-SQ5	Limit switch - 1NO + 1NC, roller, M2, snap action	FR 605-M2	PIZZATO	91.173.009	1	/09.4			
-SQ6	Limit switch - 1NO + 1NC	FR 615-M2	PIZZATO	91.173.044	1	/09.5			
-SQ7	Limit switcher - 1NO + 1NC, large adjustable roller, M2, snap action	FR 655-M2	PIZZATO	91.173.045	1	/09.6			
-LQ1.A	Sensor cable	MOD.14/4 M12 SL LC10	SICK	91.142.001	1	/09.7			
-LQ1.B	Sensor cable	MOD.15/4 M12 SL LC10	SICK	91.142.002	1	/09.8			
-QS1	Disconnecter - 3P, 32A	OT25FT3	ABB	91.170.016	1	/05.0			
-CU1	Control circuit	PRO-5-X	Bomar	265.917	1	/12.0			
-FM1	AC motor drive - 3.7kW, 3x400VAC	VFD037E43A	DELTA ELECTRONICS, INC.	91.012.094	1	/05.a.2			
-M5	Fan 24VDC, 154CFM	RDH1238 B2	Xinruilian Electronic Co.	91.015.126	1	/07.7			
-QS1	Terminal shroud	OTS40T3	ABB	91.170.017	1	/05.0			
<p>The manufacturer reserves right to use an equivalent replacement device.</p>									
<p>BOMAR, s.r.o. Těšební 1236/1 CZ 627 00, Brno</p>		<p>Stroj/Machine/Maschine: <b>Proline 520.450 ANC</b></p>		<p>Název stránky/Name page/Name seiten: <b>Kusovník artiklů/ Parts list/ Artikelstückliste</b></p>		<p>Celo odk./Doc.No./Anzahl der Dokumente.: ES4-400-202-V5.3</p> <p>Název/Power supply/Einspeisung: 3x400V/PE, 50Hz</p> <p>Zpracoval/Processed./Htt. verarbeitet: Pavil</p> <p>Datum/Date/Datum: 14.1.2014</p>		<p>List/Page/ Seite: <b>04</b></p> <p>List/Pages/ Seiten: <b>19</b></p>	


04.a

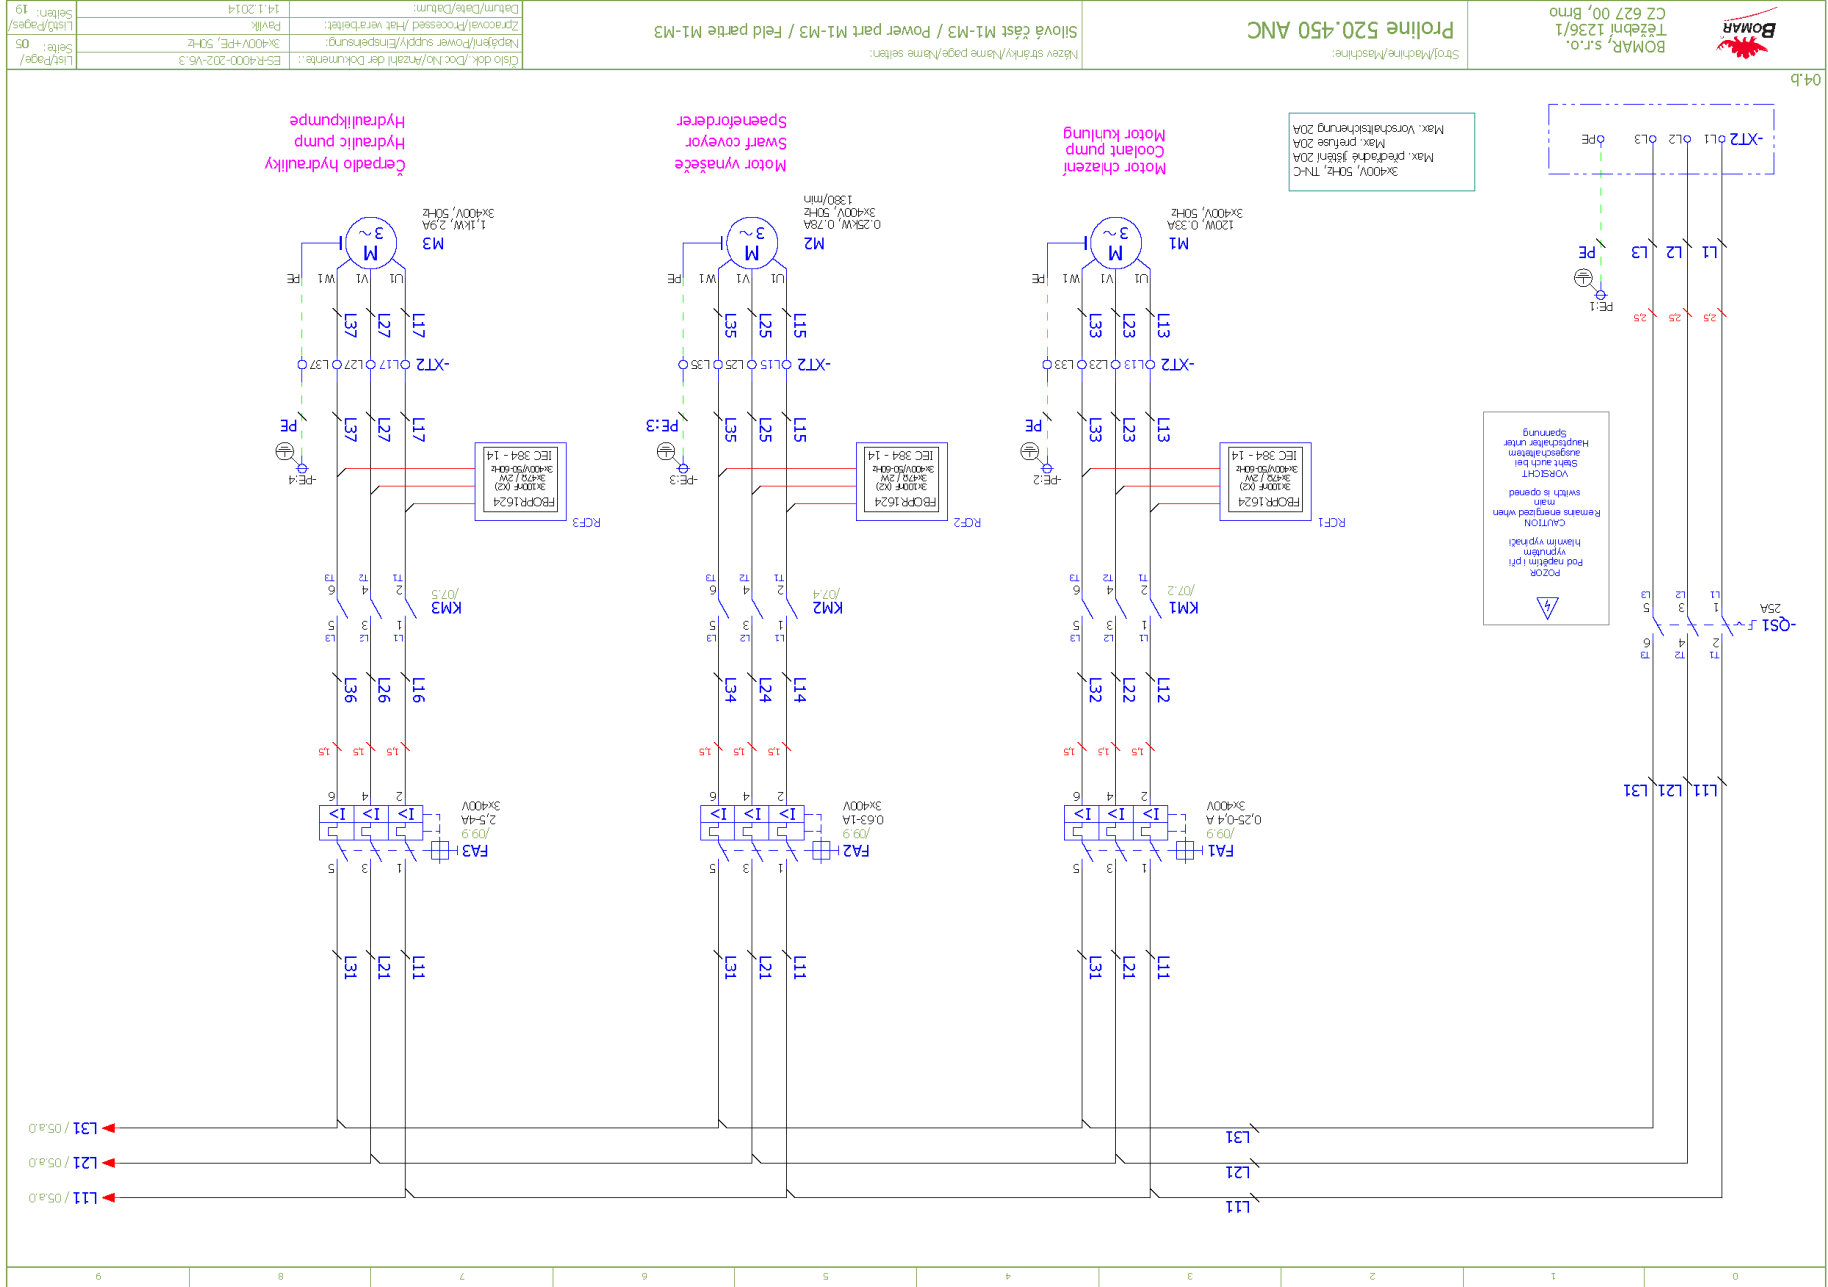

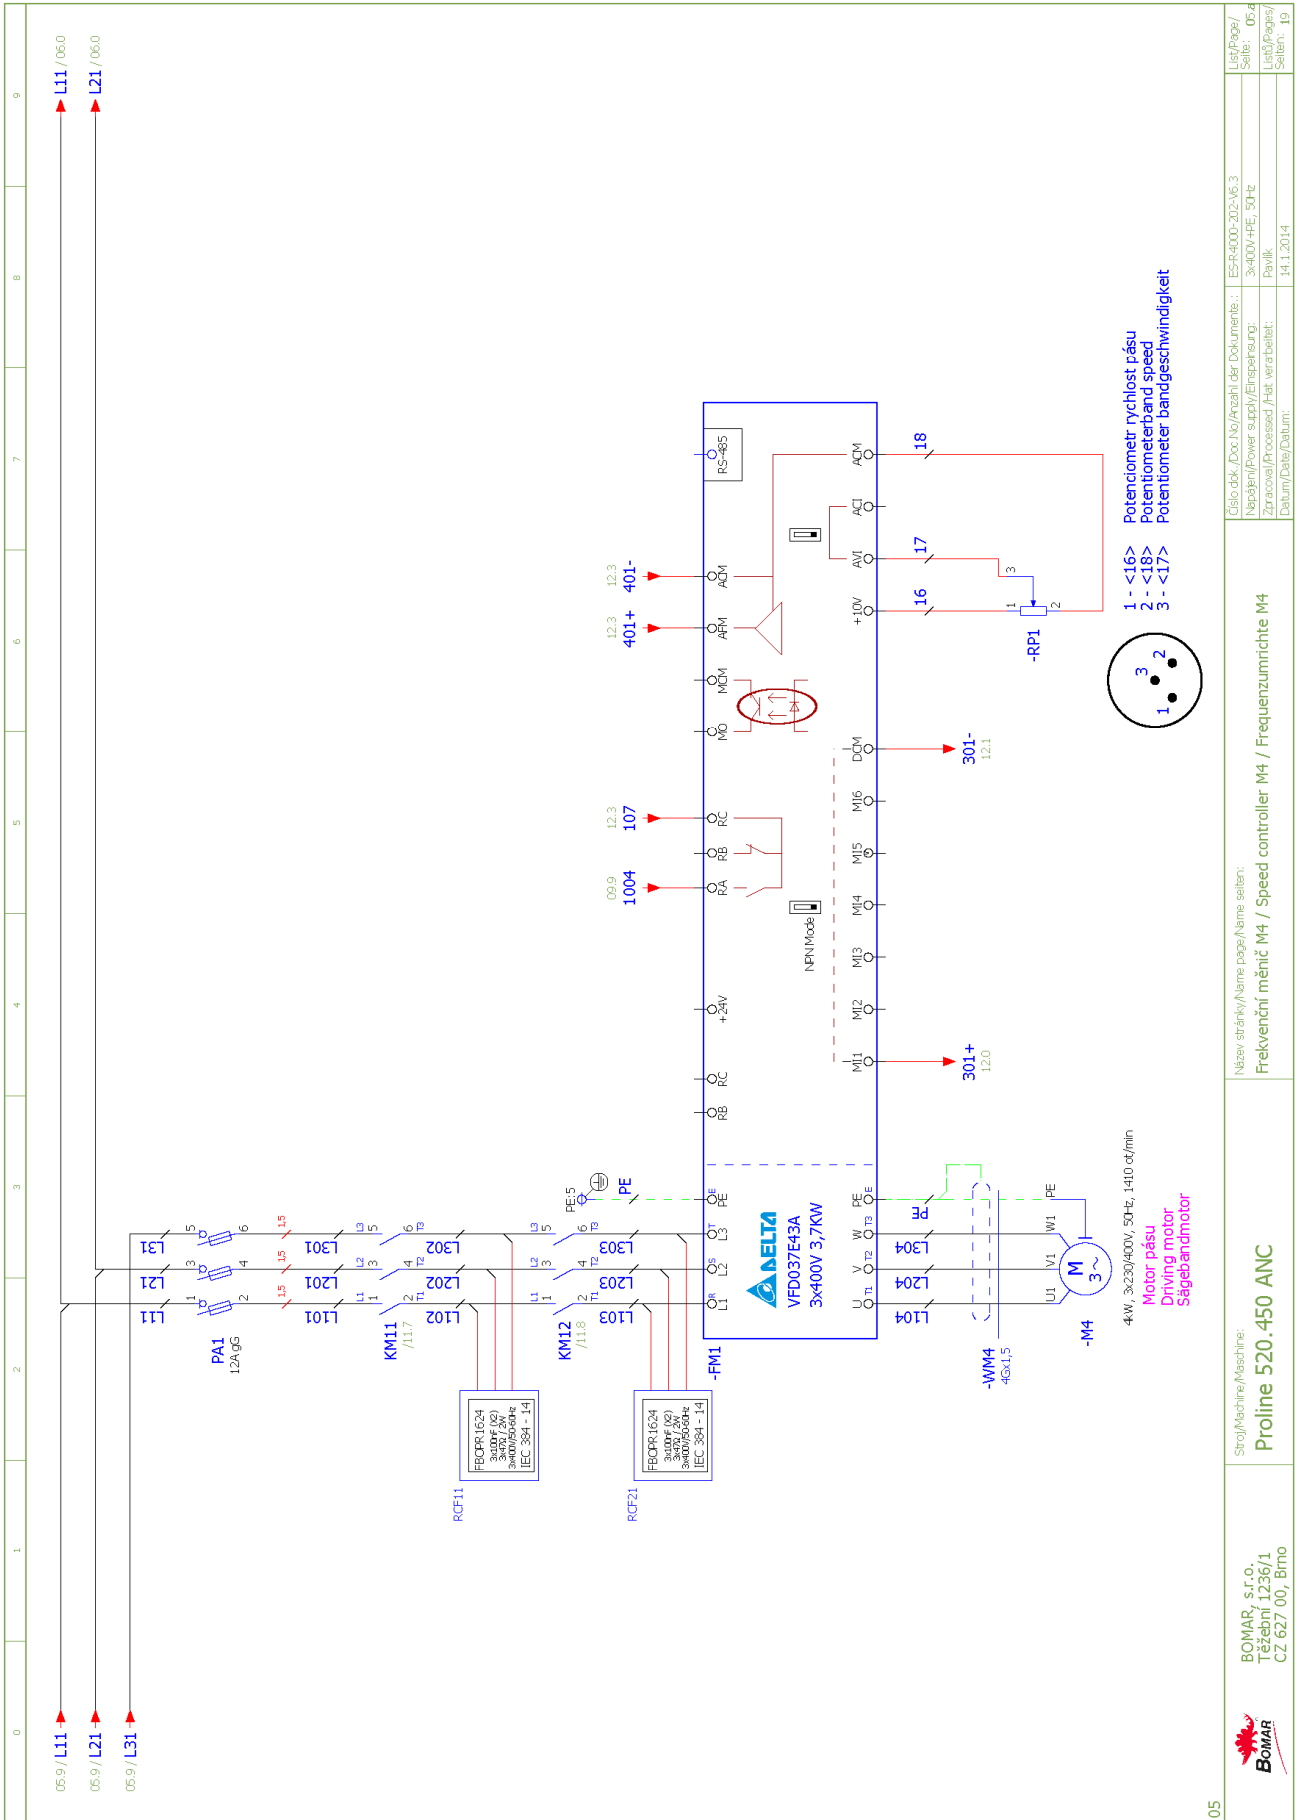


05.9 / L11 → L11 / 06.0	05.9 / L21 → L21 / 06.0	05.9 / L31 →
FCBR 1624 3x400V 20kA 3x400V/50/60Hz IEC 384 - 14	FCBR 1624 3x400V 20kA 3x400V/50/60Hz IEC 384 - 14	PA1 12A 6G
KM11 /11.7	KM12 /11.8	DELTA VFD037E43A 3x400V 3.7KW
401+ 12.3	401- 12.3	1004 00.9
107 12.3	301+ 12.0	301- 12.1
RP1	M4 4kW, 3x230/400V, 50Hz, 1410 cf/min	Motor pásu Driving motor Ságebåndmotor
Potenciometr rychlost pásu Potentiometer band speed Potentiometer bandgeschwindigkeit	1 - <16> 2 - <18> 3 - <17>	Název stránky/Name page/Name seiten: Frekvenční měnič M4 / Speed controller M4 / Frequenzumrichter M4
Stroj/Machine/Maschine: Proline 520.450 ANC	05	05.9 / L11 → L11 / 06.0 05.9 / L21 → L21 / 06.0 05.9 / L31 →

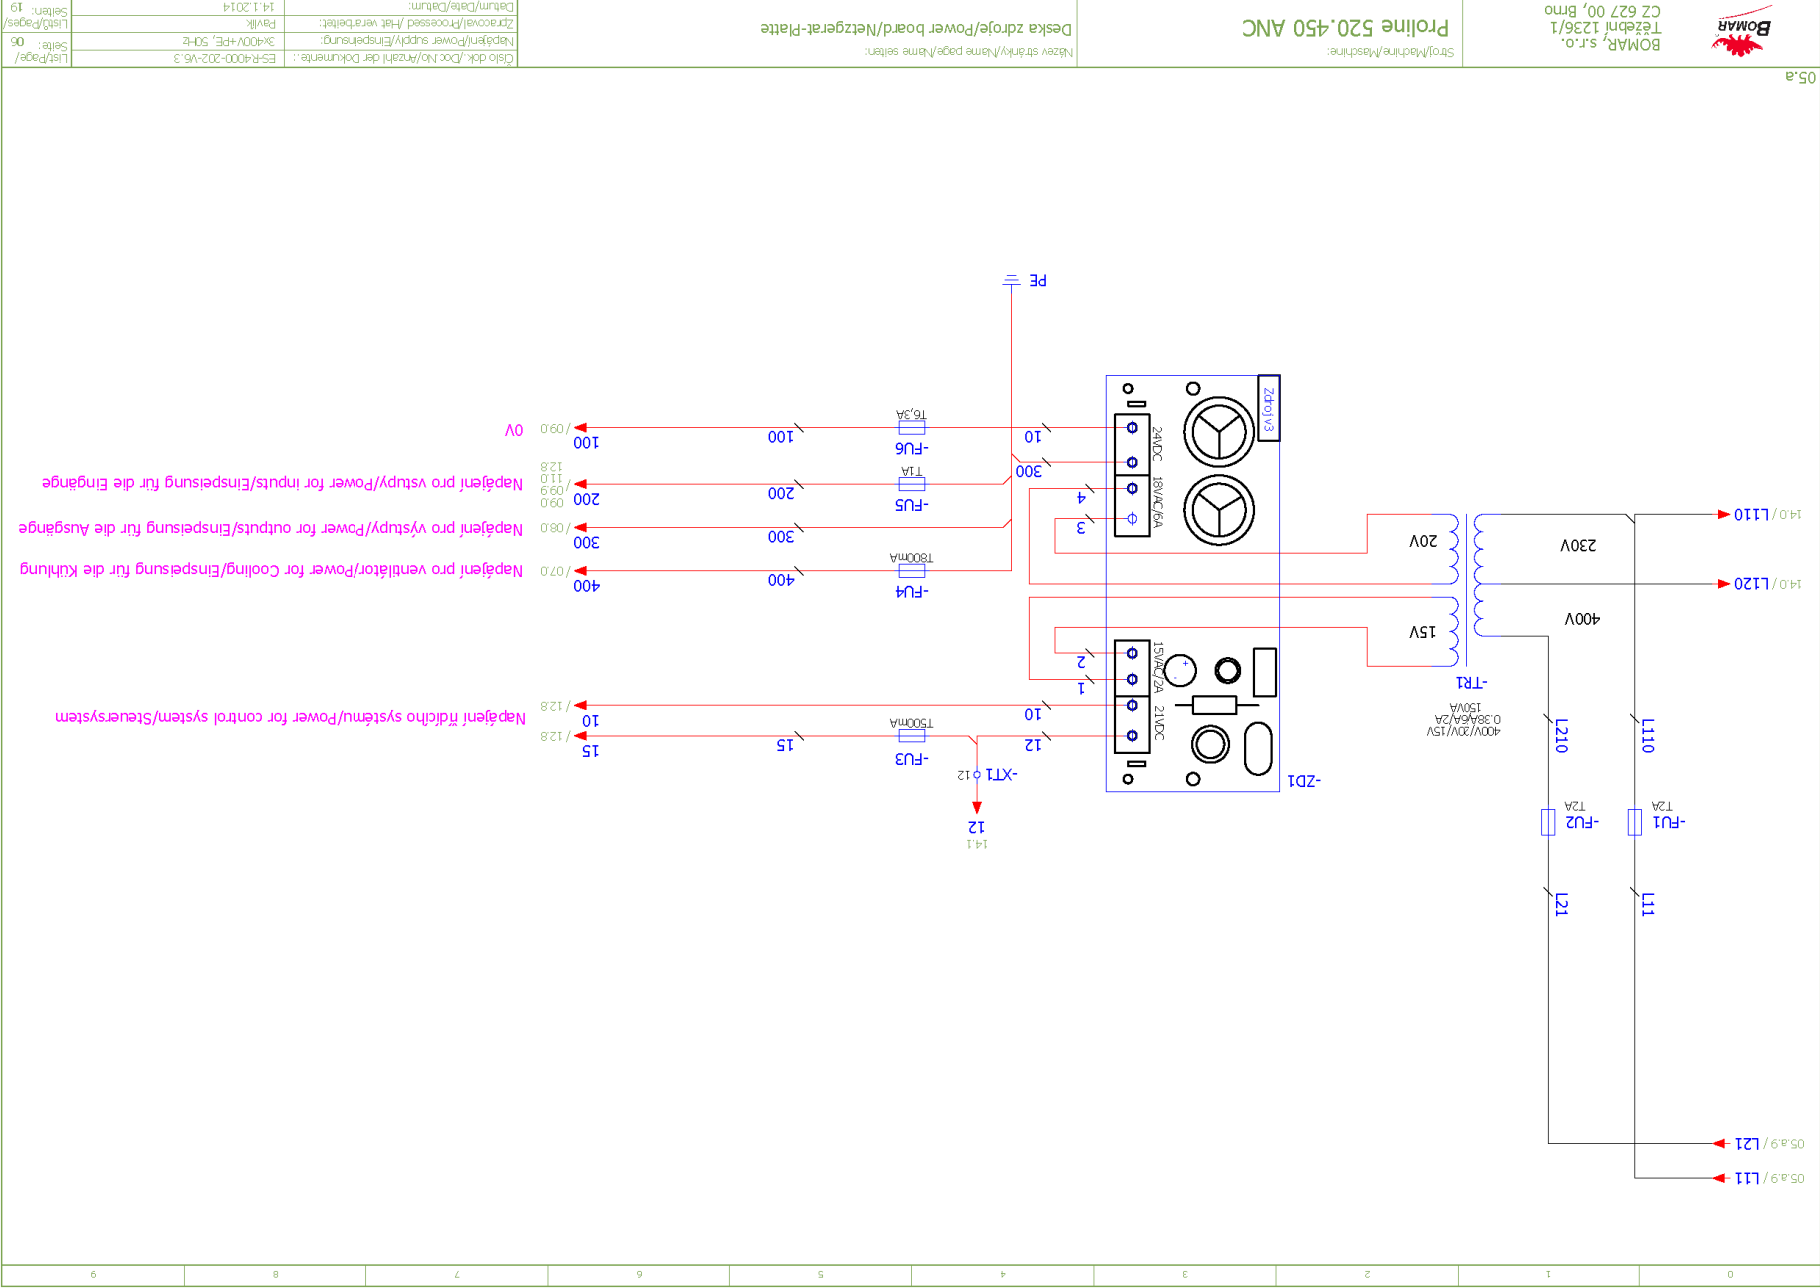


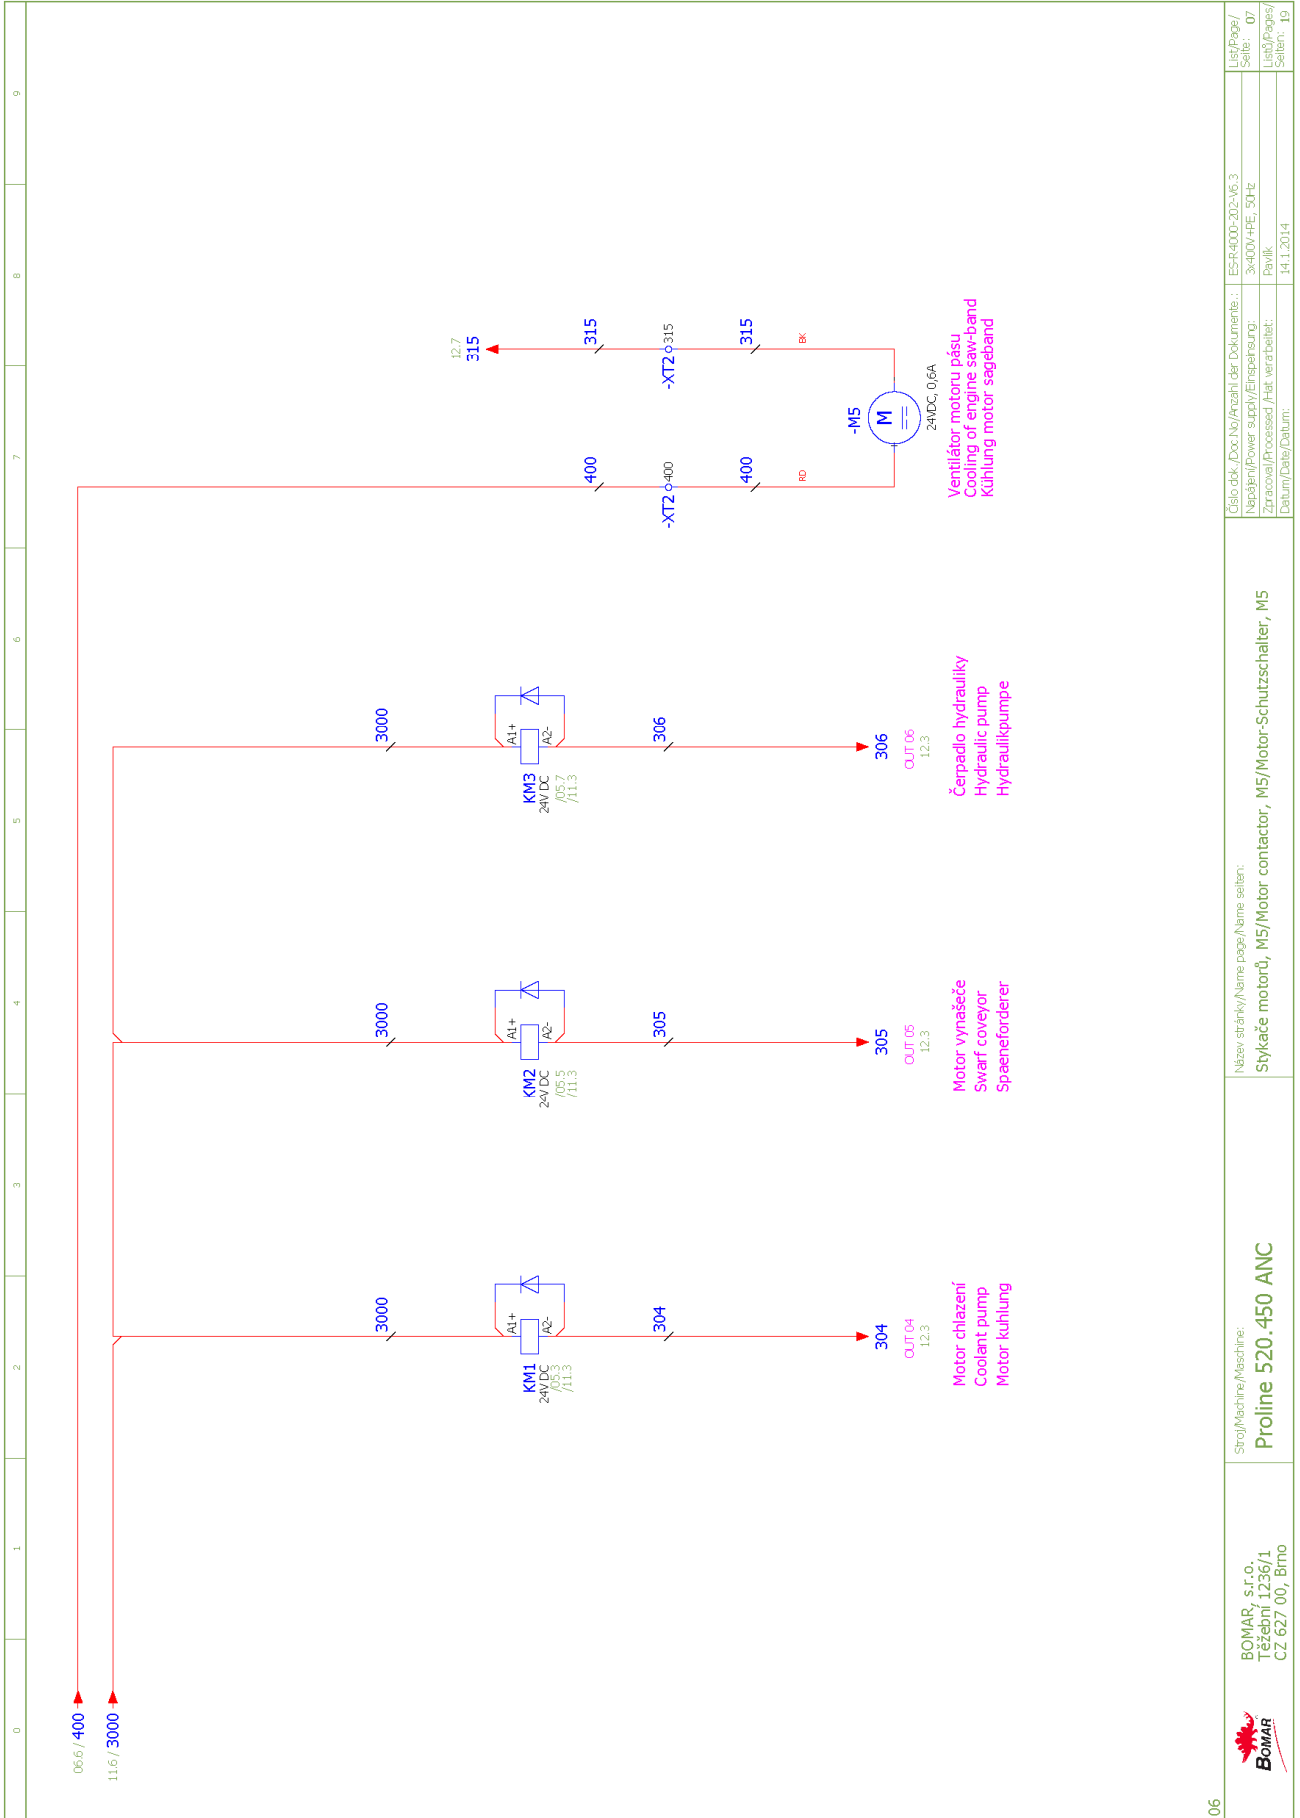



BOMAR, s.r.o. Těšební 1236/1 CZ 627 007, Brno	Stroj/Machine/Maschine: <b>Proline 520.450 ANC</b>	Název stránky/Name page/Name seiten: <b>Sykace motorů, M5/Motor contactor, M5/Motor-Schutzschalter, M5</b>	Celo dok./Doc.No./Anzahl der Dokumente.: ES4-400-202-V5.3	List/Page/ Seite: <b>07</b>
			Napájení/Power supply/Einspeisung: 3x400V/4PE, 50Hz	
			Zpracování/Processed./Htt. verarbeitet: PauR	List/Page/ Seite: <b>19</b>
			Datum/Date/Datum: 14.1.2014	List/Page/ Seite: <b>19</b>



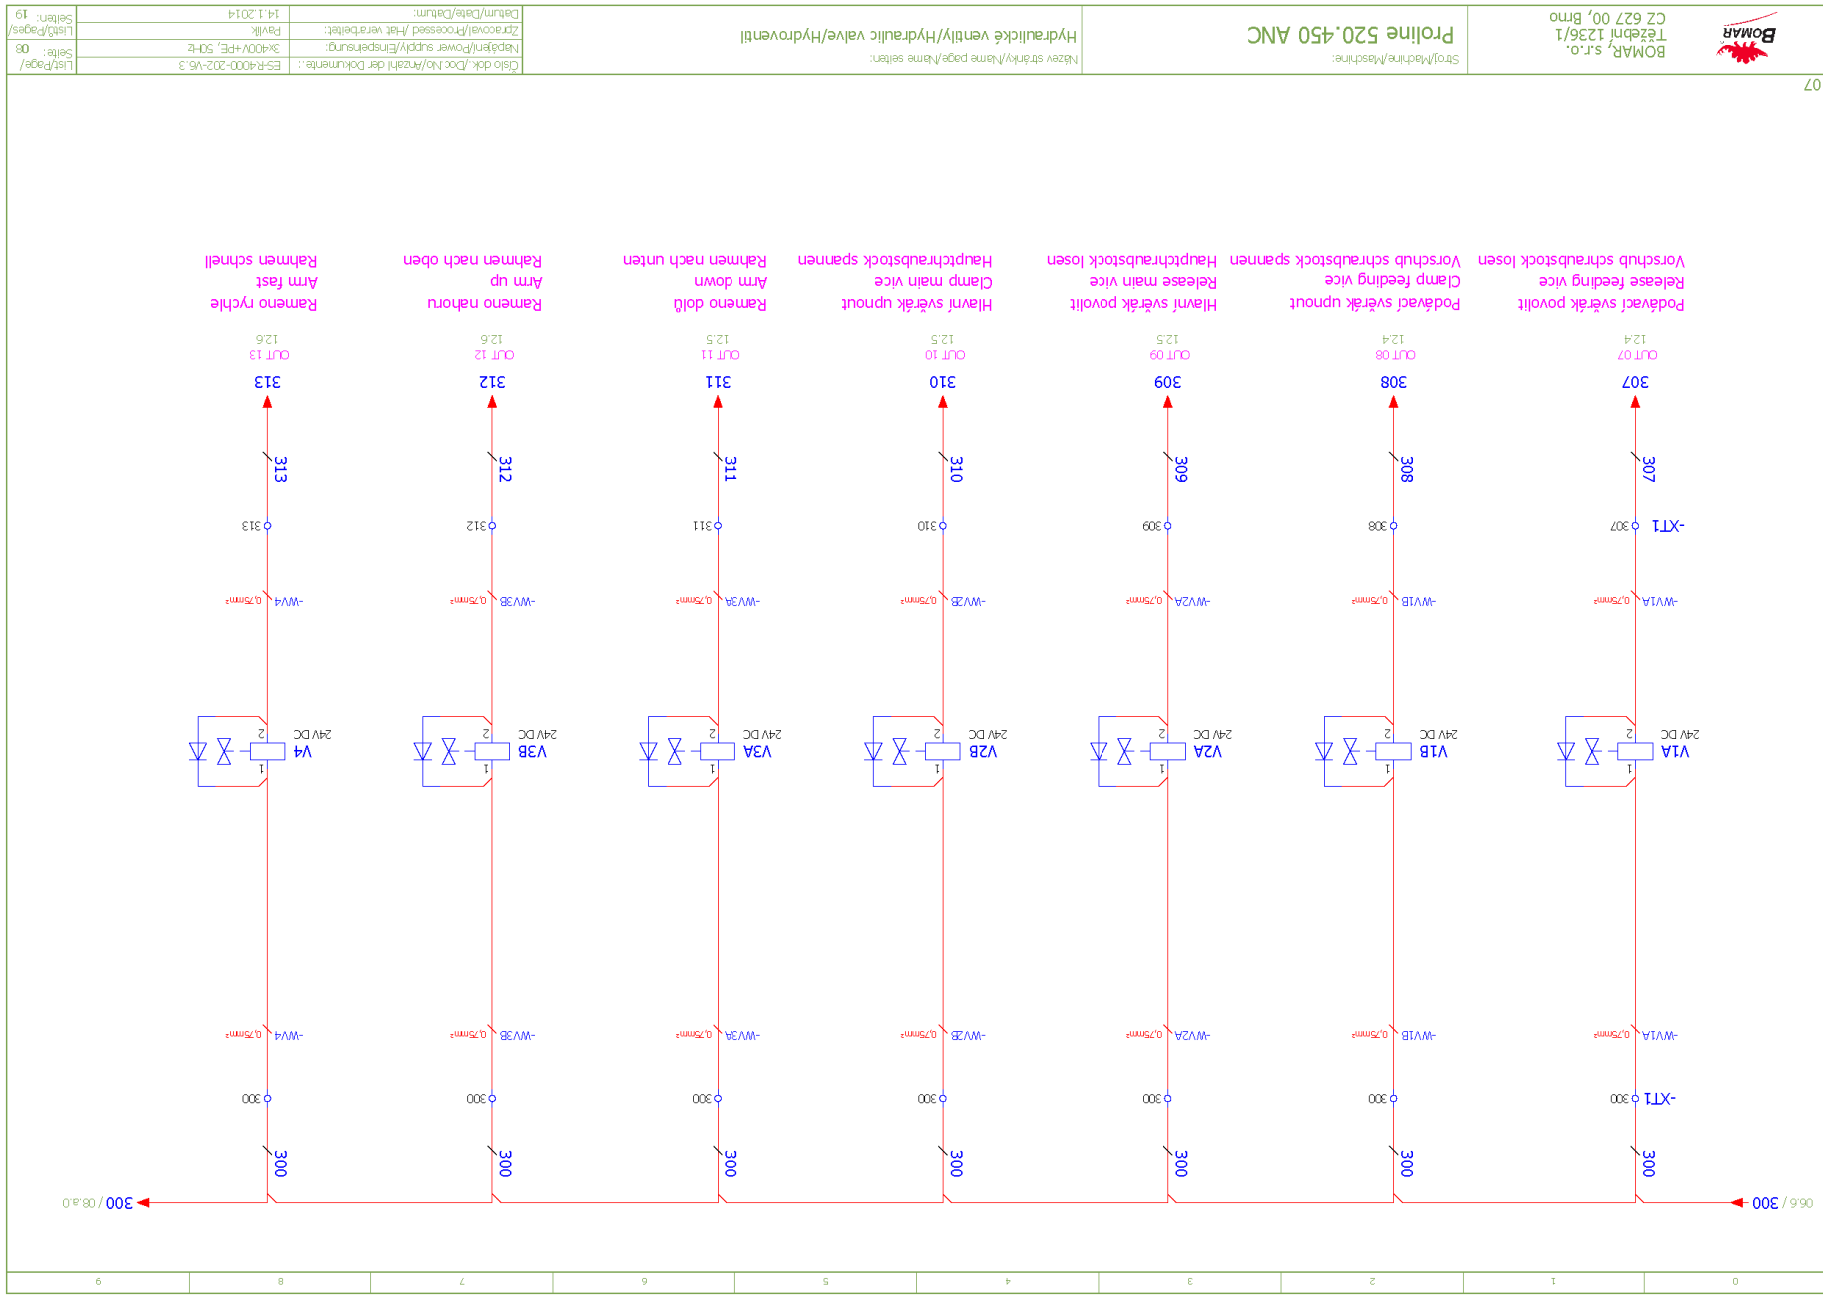

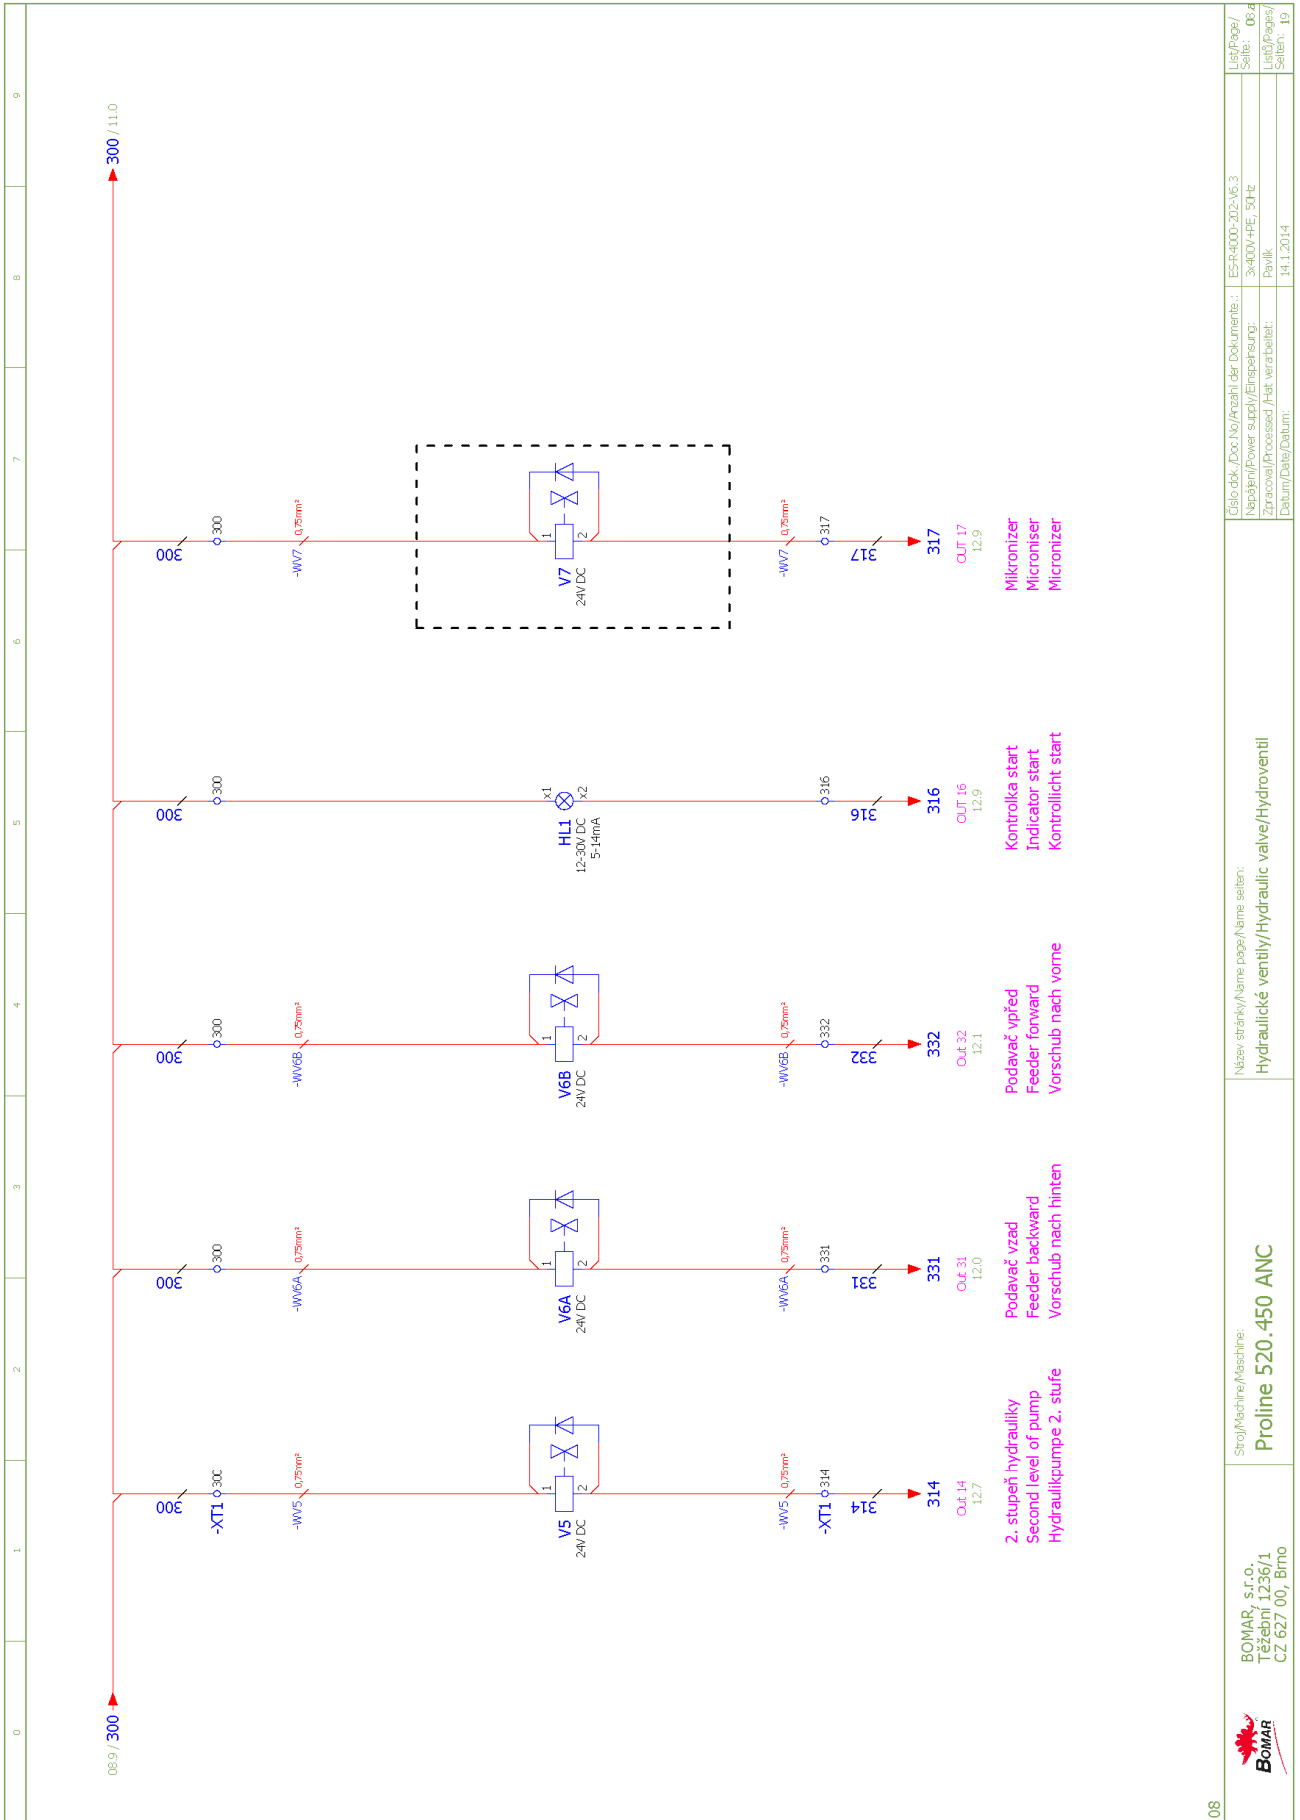


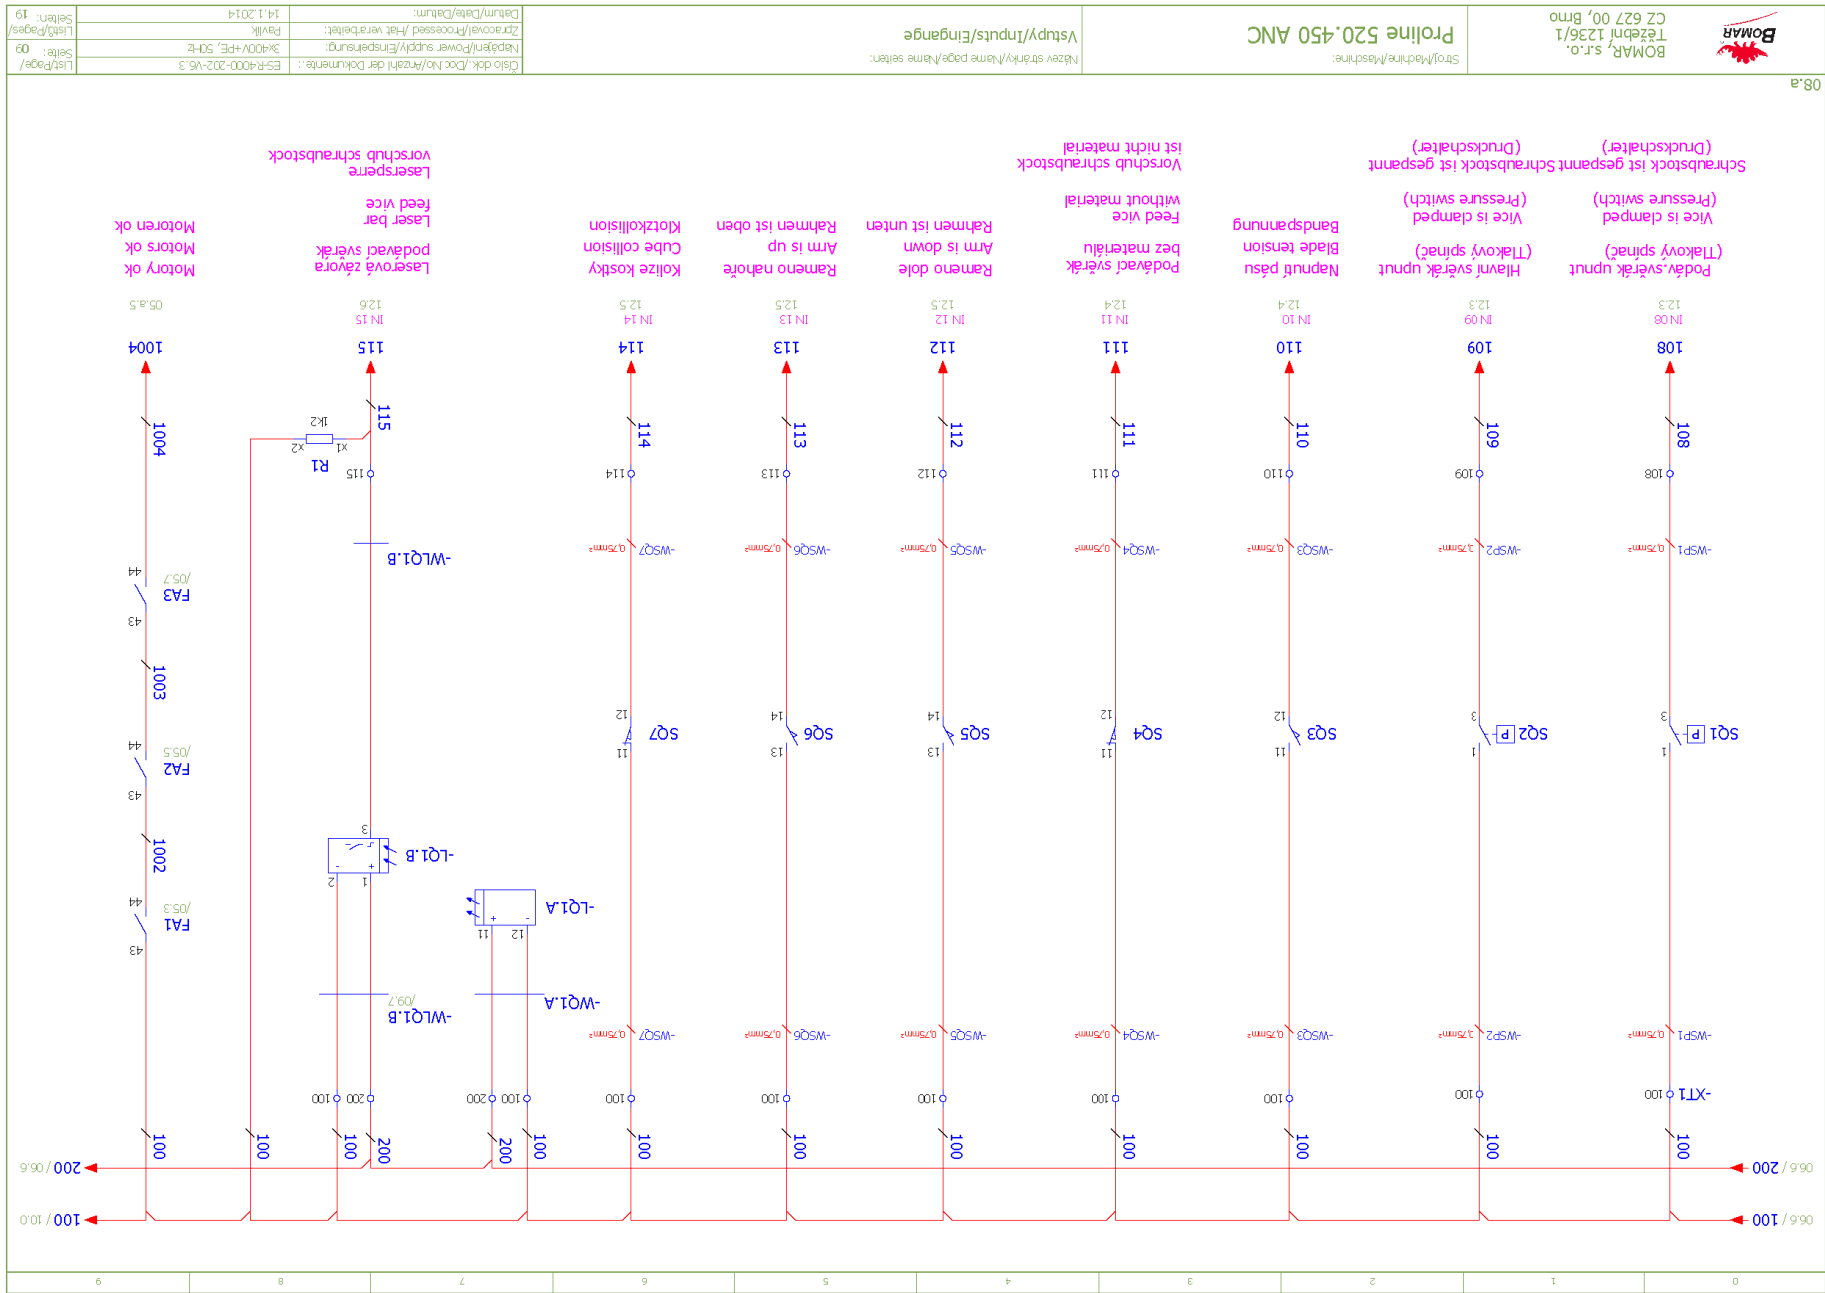


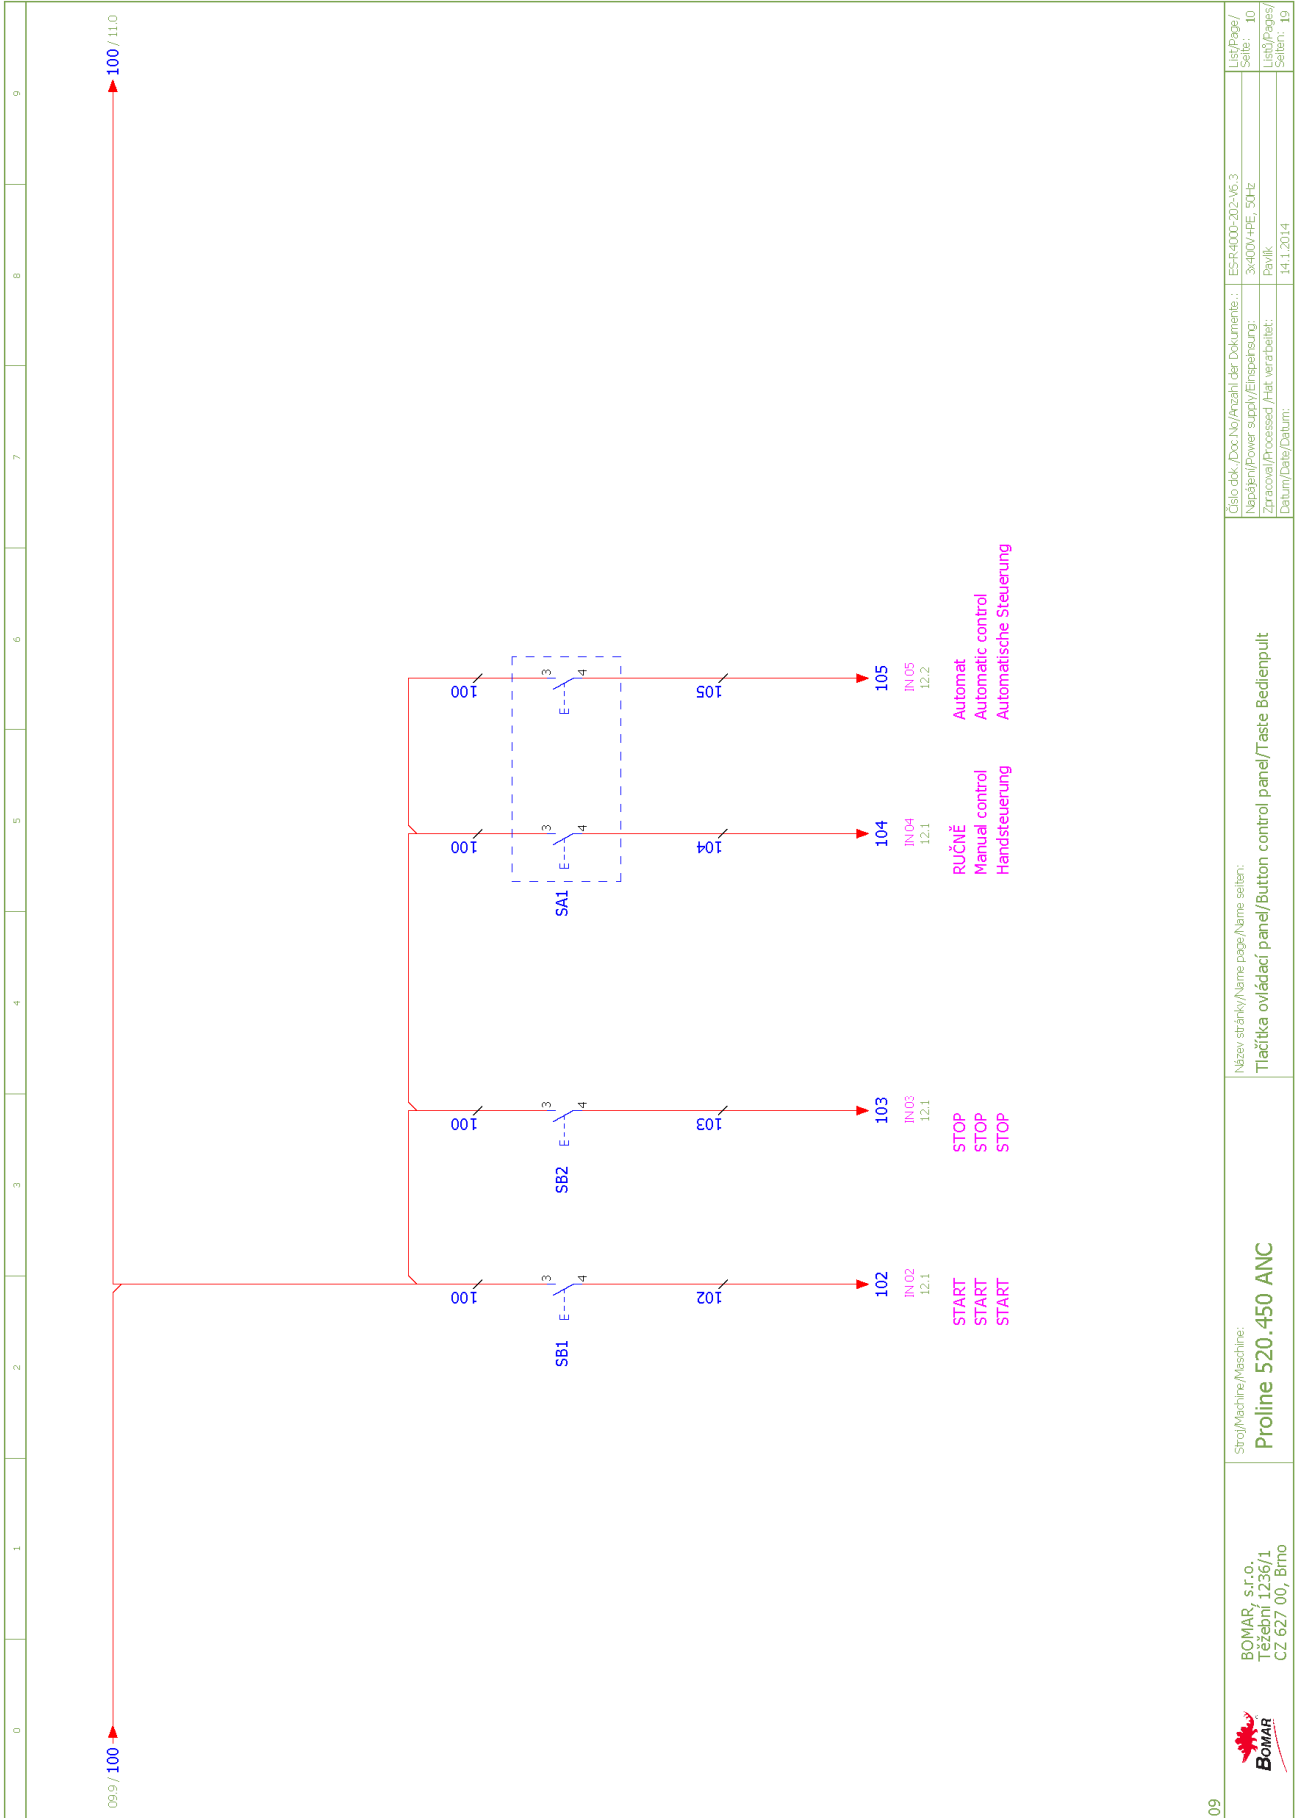


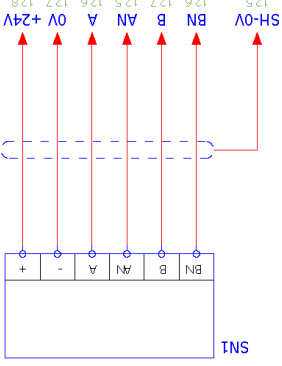
09


 BOMAR, s.r.o. Těšební 1236/1 CZ 627 007, Brno	Stroj/Machine/Maschine: <b>Proline 520.450 ANC</b>	Název stránky/Name page/Name seiten: <b>Tlačítka ovládací panel/button control panel/Taste Bedienpult</b>	Číslo dok./Doc.No./Anzahl der Dokumente.: ES4-400-202-V6.3 Napětí/Power supply/Einspeisung: 3x400V/4PE, 50Hz Zpracováno/Processed /Htt. verarbeitet: Paul Datum/Date/Datum: 14.1.2014	List/Page/ Seite: 10 List/Page/ Seiten: 19
--	---	--	--	---

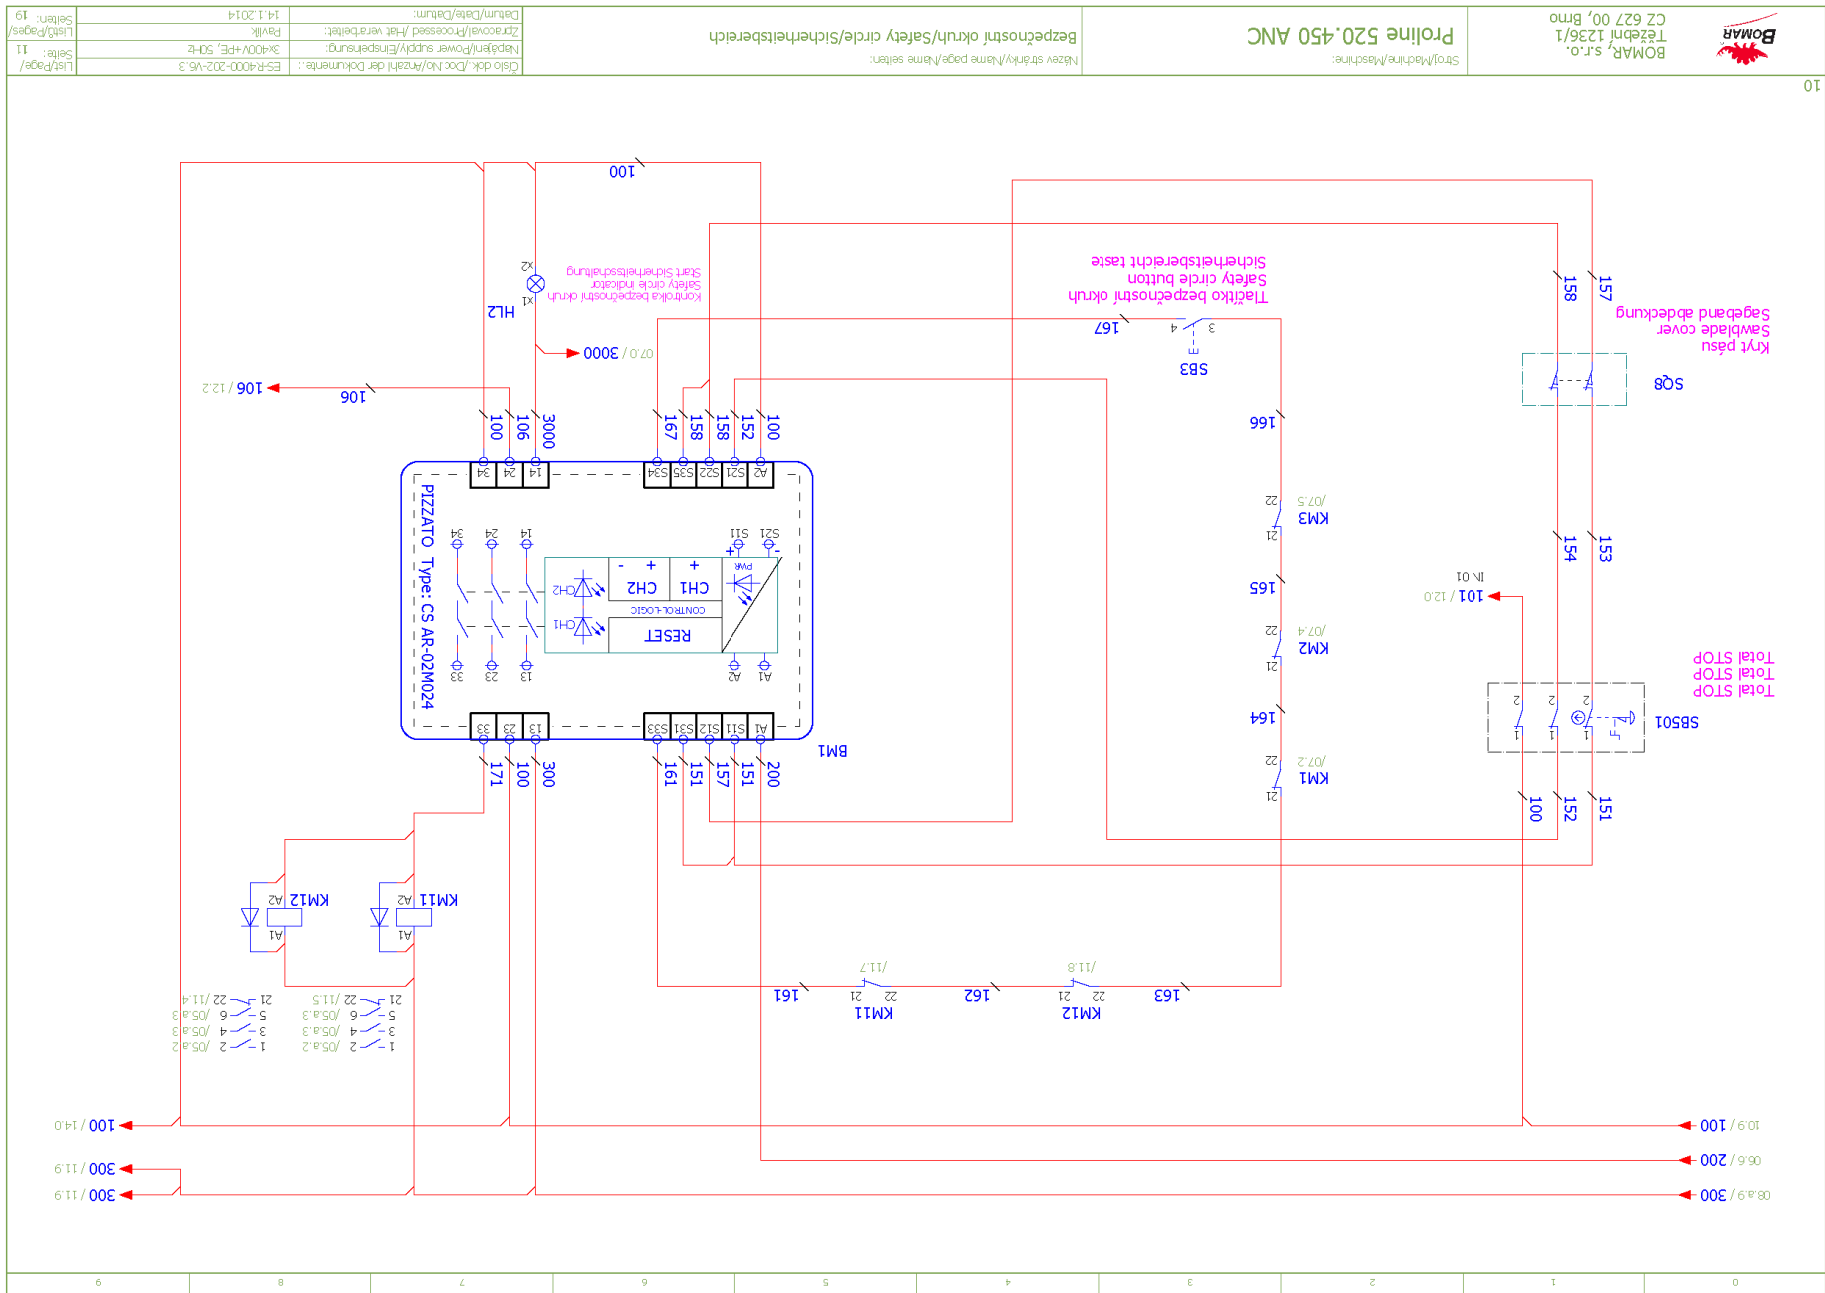

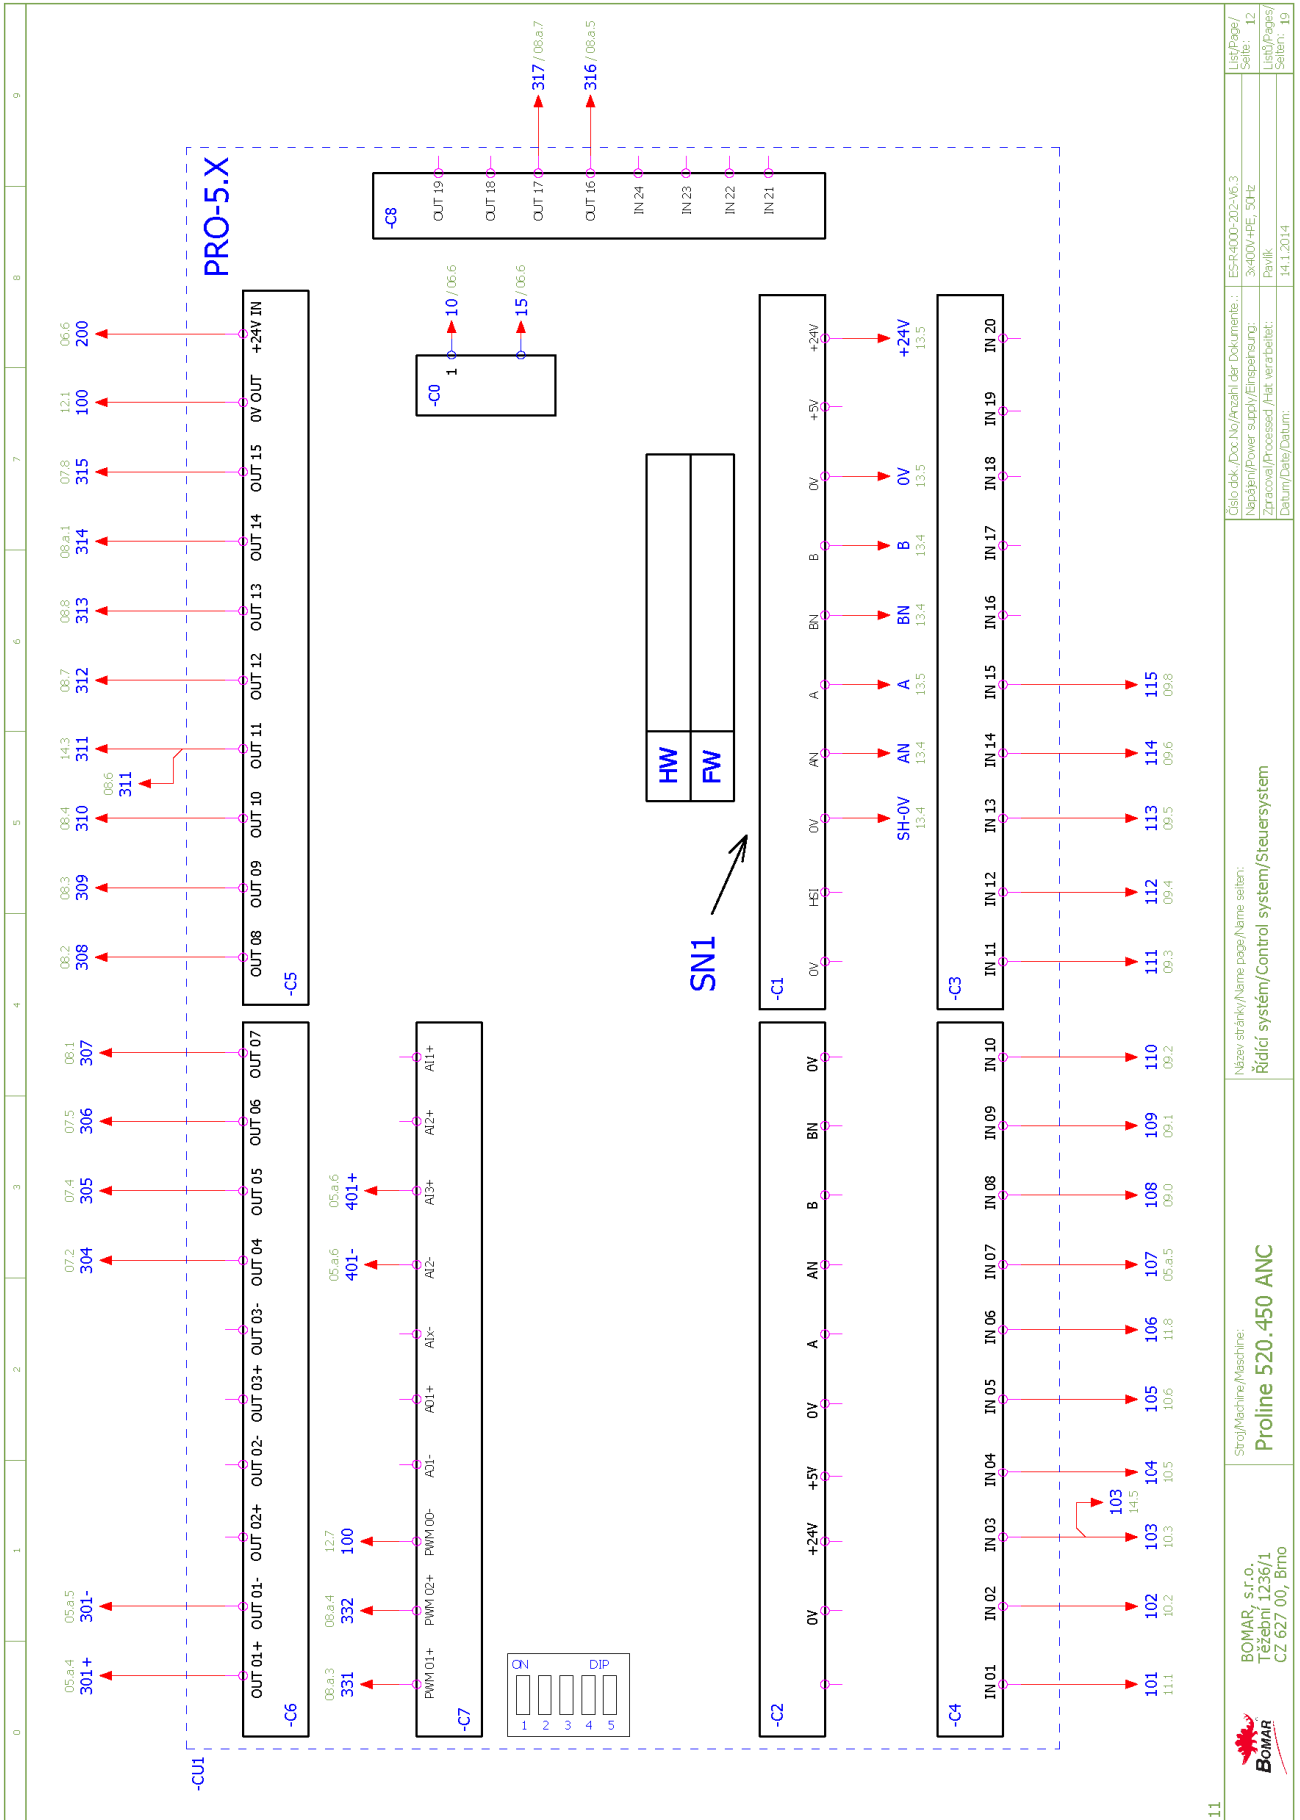

0	1	2	3	4	5	6	7	8	9
<p>11</p> <p>BOMAR, s.r.o. Těšební 1236/1 CZ 627 00, Brno</p> <p>Stroj/Machine/Maschine: <b>Proline 520.450 ANC</b></p> <p>Název stránky/Name page/Name seiten: <b>Rídící systém/Control system/Steuersystem</b></p> <p>Celo odk./Doc.No./Anzahl der Dokumente.: ES4-400-202-V6.3</p> <p>Název/Power supply/Energieung: 3x400V/4PE, 50Hz</p> <p>Paříž/ Produced/Produced/Produced:</p> <p>Paříž/ Produced/Produced/Produced:</p> <p>Date/Date/Datum: 14.1.2014</p>									
<p>List/Page/ Seite: 12</p> <p>List/Page/ Seite: 19</p>									

 BOMAR, s.r.o. Těšební 1236/1 CZ 627 00, Břno	Svoji/Machine/Maschine: <b>Proline 520.450 ANC</b>	Název stránky/Náme page/Náme seiten: Odměřování/Remuneration/Abmessung	Dátum/Date/Datum: 14.1.2014	Zpracoval/Processed /Abit verarbeit: Pavič	Název/Power supply/Einspeisung: 3x400+PE, 50Hz	Dátum dok./Doc No./Anzahl der Dokumente: ES-R4000-202-V6.3	List/Page/ Seite: 13	List/Page/ Seite: 19																											
<div style="display: flex; justify-content: space-between;"> <div data-bbox="907 912 1422 1428" style="width: 45%;"> <table border="1"> <tr> <td colspan="2">Kabel HELU-Flexi 7x0.14</td> <td>SNT</td> </tr> <tr> <td>HNĚDÁ+MODRÁ BROWN+BLUE BRAUN+BLAU</td> <td>+</td> <td>BRAUN</td> </tr> <tr> <td>HNĚDÁ BLÁ WHITE BROWN/WHITE+BLAU/WHITE</td> <td>-</td> <td>WEISS</td> </tr> <tr> <td>ZELENÁ GREEN GRÜN</td> <td>A</td> <td>ZELENÁ GRÜN</td> </tr> <tr> <td>FIALOVÁ VIOLET GRÜN/WEISS</td> <td>AN</td> <td>FIALOVÁ VIOLET GRÜN/WEISS</td> </tr> <tr> <td>ŽLUTÁ YELLOW ORANŽOVÁ</td> <td>B</td> <td>ŽLUTÁ YELLOW ORANŽOVÁ</td> </tr> <tr> <td>ORANŽOVÁ ORANGE/WHITE ORANGE/WEISS</td> <td>BN</td> <td>ORANŽOVÁ ORANGE ORANGE/WHITE ORANGE/WEISS</td> </tr> <tr> <td>ČERNÁ BLACK SCHWARZ</td> <td></td> <td>ČERNÁ BLACK SCHWARZ</td> </tr> <tr> <td>STĚNĚNÍ SHIELD LEITUNGSSCHIRM</td> <td></td> <td>STĚNĚNÍ SHIELD LEITUNGSSCHIRM</td> </tr> </table> </div> <div data-bbox="1064 438 1344 805" style="width: 45%;">  </div> </div>									Kabel HELU-Flexi 7x0.14		SNT	HNĚDÁ+MODRÁ BROWN+BLUE BRAUN+BLAU	+	BRAUN	HNĚDÁ BLÁ WHITE BROWN/WHITE+BLAU/WHITE	-	WEISS	ZELENÁ GREEN GRÜN	A	ZELENÁ GRÜN	FIALOVÁ VIOLET GRÜN/WEISS	AN	FIALOVÁ VIOLET GRÜN/WEISS	ŽLUTÁ YELLOW ORANŽOVÁ	B	ŽLUTÁ YELLOW ORANŽOVÁ	ORANŽOVÁ ORANGE/WHITE ORANGE/WEISS	BN	ORANŽOVÁ ORANGE ORANGE/WHITE ORANGE/WEISS	ČERNÁ BLACK SCHWARZ		ČERNÁ BLACK SCHWARZ	STĚNĚNÍ SHIELD LEITUNGSSCHIRM		STĚNĚNÍ SHIELD LEITUNGSSCHIRM
Kabel HELU-Flexi 7x0.14		SNT																																	
HNĚDÁ+MODRÁ BROWN+BLUE BRAUN+BLAU	+	BRAUN																																	
HNĚDÁ BLÁ WHITE BROWN/WHITE+BLAU/WHITE	-	WEISS																																	
ZELENÁ GREEN GRÜN	A	ZELENÁ GRÜN																																	
FIALOVÁ VIOLET GRÜN/WEISS	AN	FIALOVÁ VIOLET GRÜN/WEISS																																	
ŽLUTÁ YELLOW ORANŽOVÁ	B	ŽLUTÁ YELLOW ORANŽOVÁ																																	
ORANŽOVÁ ORANGE/WHITE ORANGE/WEISS	BN	ORANŽOVÁ ORANGE ORANGE/WHITE ORANGE/WEISS																																	
ČERNÁ BLACK SCHWARZ		ČERNÁ BLACK SCHWARZ																																	
STĚNĚNÍ SHIELD LEITUNGSSCHIRM		STĚNĚNÍ SHIELD LEITUNGSSCHIRM																																	

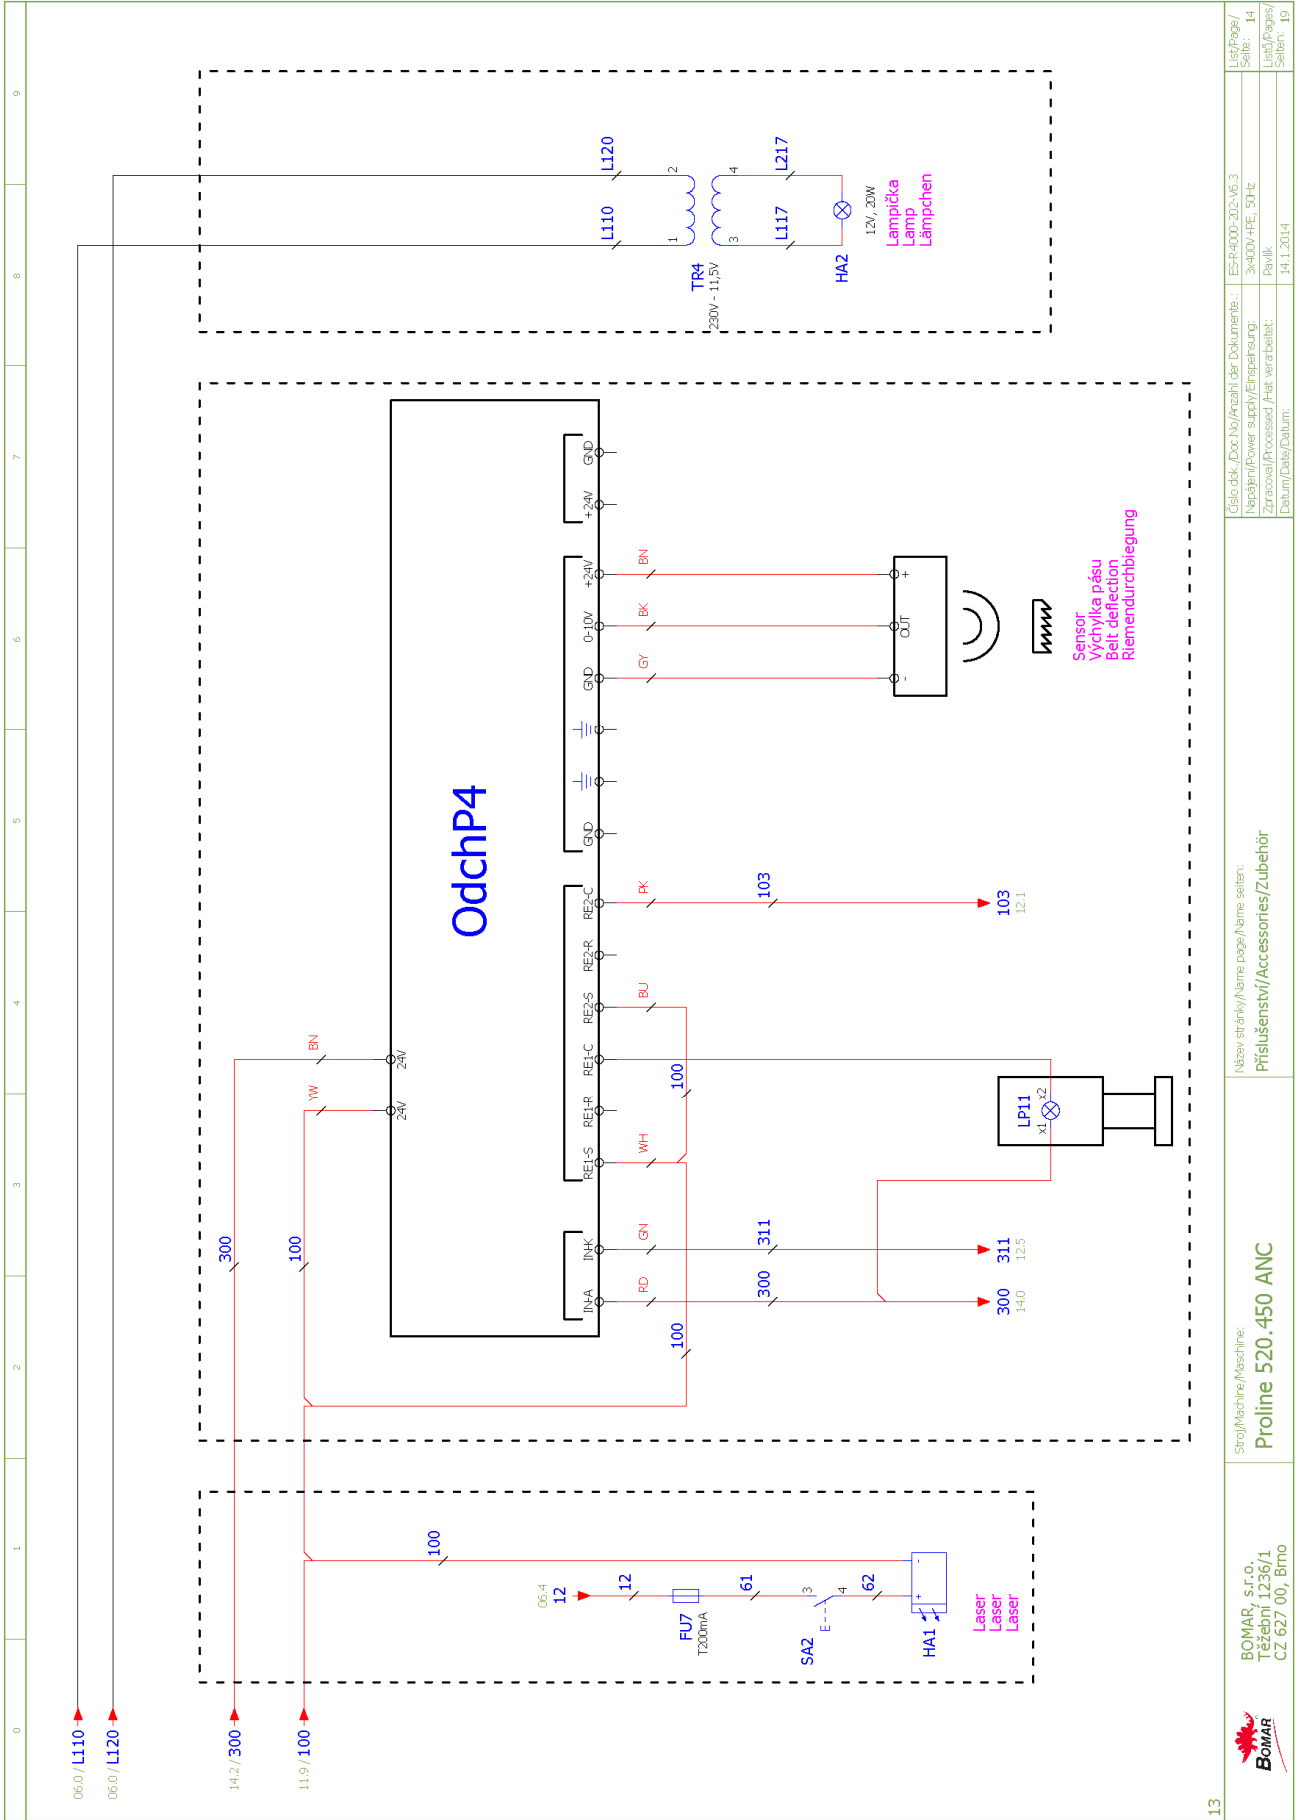


BOMAR, s.r.o. Tržební 1236/1 CZ 627 007, Brno	Strojíř/Machine/Maschine: <b>Proline 520.450 ANC</b>	Název stránky/Name page/Name seiten: <b>Přístušenství/Accessories/Zubehör</b>	Číslo odk./Doc.No./Anzahl der Dokumente.: ES4-400-202-V6.3	
			Název/Power supply/Einspeisung: 3x400V/4PE, 50Hz	
		Datum/Date/Datum: 14.1.2014		
		List/Page/ Seite: 14		
		List/Page/ Seiten: 19		




6.3. Elektrické schéma /  
 Elektroschema /  
 Electric scheme – 3x230 V, PE, 50 Hz

0	1	2	3	4	5	6	7	8	9	
 <p style="text-align: center;"><b>Proline 520.450 ANC</b></p> <p style="text-align: center;">Bomar, spol. s r.o.        Těžební 1236/1        627 00 Brno        Czech republic</p>										
 BOMAR, s.r.o. Těžební 1236/1 CZ 627 00, Brno		Stroji/Machine/Maschine: <b>Proline 520.450 ANC</b>		Název stránky/Name page/Name seiten: <b>Úvodní strana/Start page/Startseite</b>		Číslo dok./Doc No./Anzahl der Dokumente: Název/power supply/Erschienen: Zpracoval/Processed /Hat verarbeitet: Datum/Date/Datum:		ESR-400-203-V6.3 3x230V+PE, 50Hz Pivik 14.1.2014		List/Page/ Seite: 00 List/Page/ Seiten: 10

0	1	2	3	4	5	6	7	8	9
<b>Obsah/ Table of contents/ Inhaltsverzeichnis</b>									
Stránka/Page/Seite	Název stránky/Name page/Name Seite	Datum/Date/Datum							
00	Úvodní strana/Start page/Startseite	14.1.2014							
01	Obsah/ Table of contents/ Inhaltsverzeichnis	14.1.2014							
02	Rozmístění prvků v rozvaděči RS1/ Placement of elements in enclosure RS1/ Platzierung der Elemente im Schaltschrank RS1	14.1.2014							
03	Ovládací panel na rozvaděči/Control panel/Bedienpult	14.1.2014							
04	Kusovník artiklů/ Parts list/ Artikelstückliste	14.1.2014							
04.a	Kusovník artiklů/ Parts list/ Artikelstückliste	14.1.2014							
04.b	Kusovník artiklů/ Parts list/ Artikelstückliste	14.1.2014							
05	Silová část M1-M3 / Power part M1-M3 / Feld partie M1-M3	14.1.2014							
05.a	Frekvenční měnič M4/ Speed controller M4/ Frequenzumrichter M4	14.1.2014							
06	Deska zdroje/Power board/Netzgerat-Platte	14.1.2014							
07	Stykače motorů, M5/Motor contactor, M5/Motor-Schutzschalter, M5	14.1.2014							
08	Hydraulické ventily/Hydraulic valve/Hydroventil	14.1.2014							
08.a	Hydraulické ventily/Hydraulic valve/Hydroventil	14.1.2014							
09	Vstupy/Inputs/Eingänge	14.1.2014							
10	Tlačítka ovládací panel/Button control panel/Taste Bedienpult	14.1.2014							
11	Bezpečnostní okruhy/Safety circle/Sicherheitsbereich	14.1.2014							
12	Řídicí systém/Control system/Steuersystem	14.1.2014							
13	Odměňování/Remuneration/Abmessung	14.1.2014							
14	Příslušenství/Accessories/Zubehör	14.1.2014							

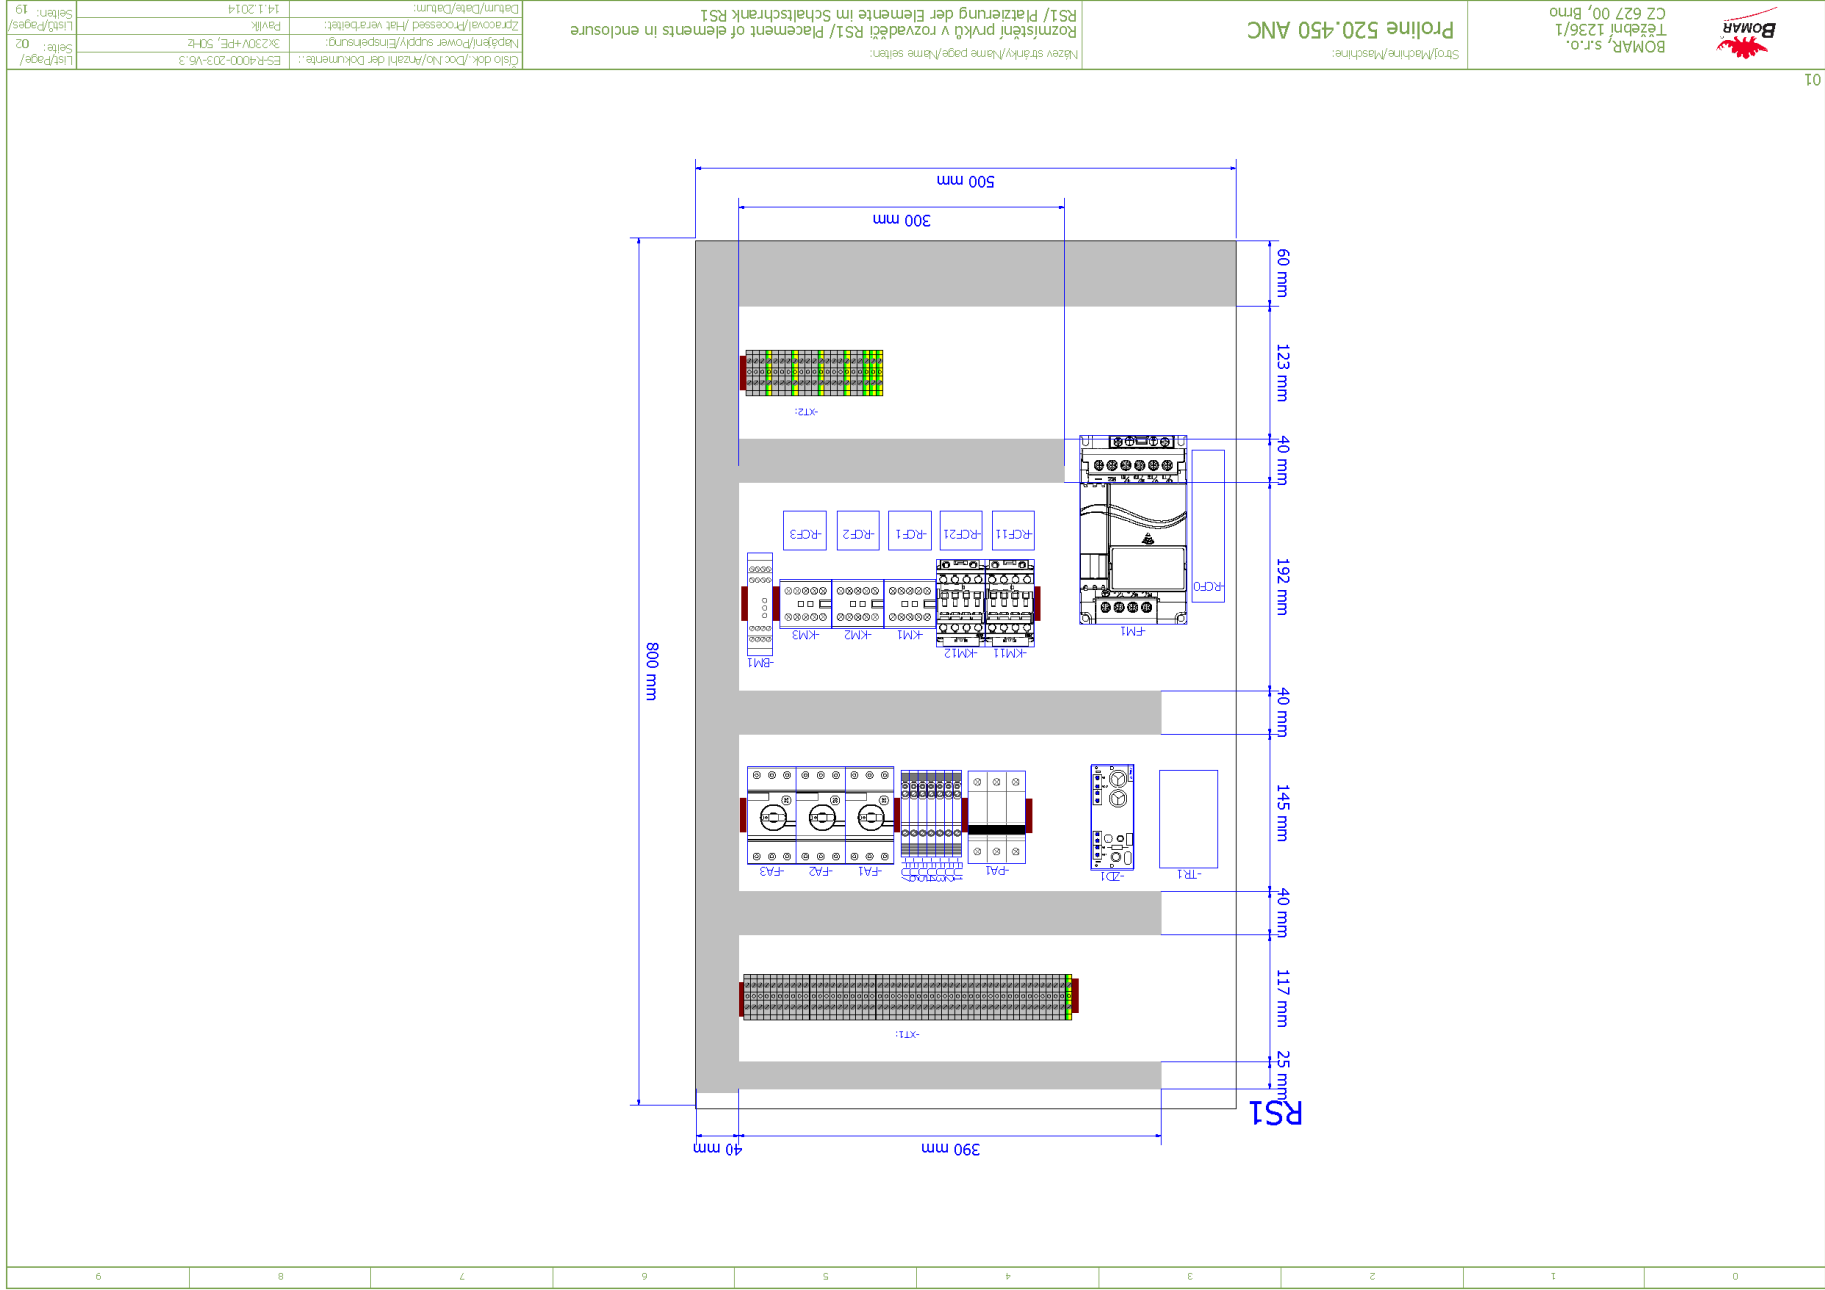

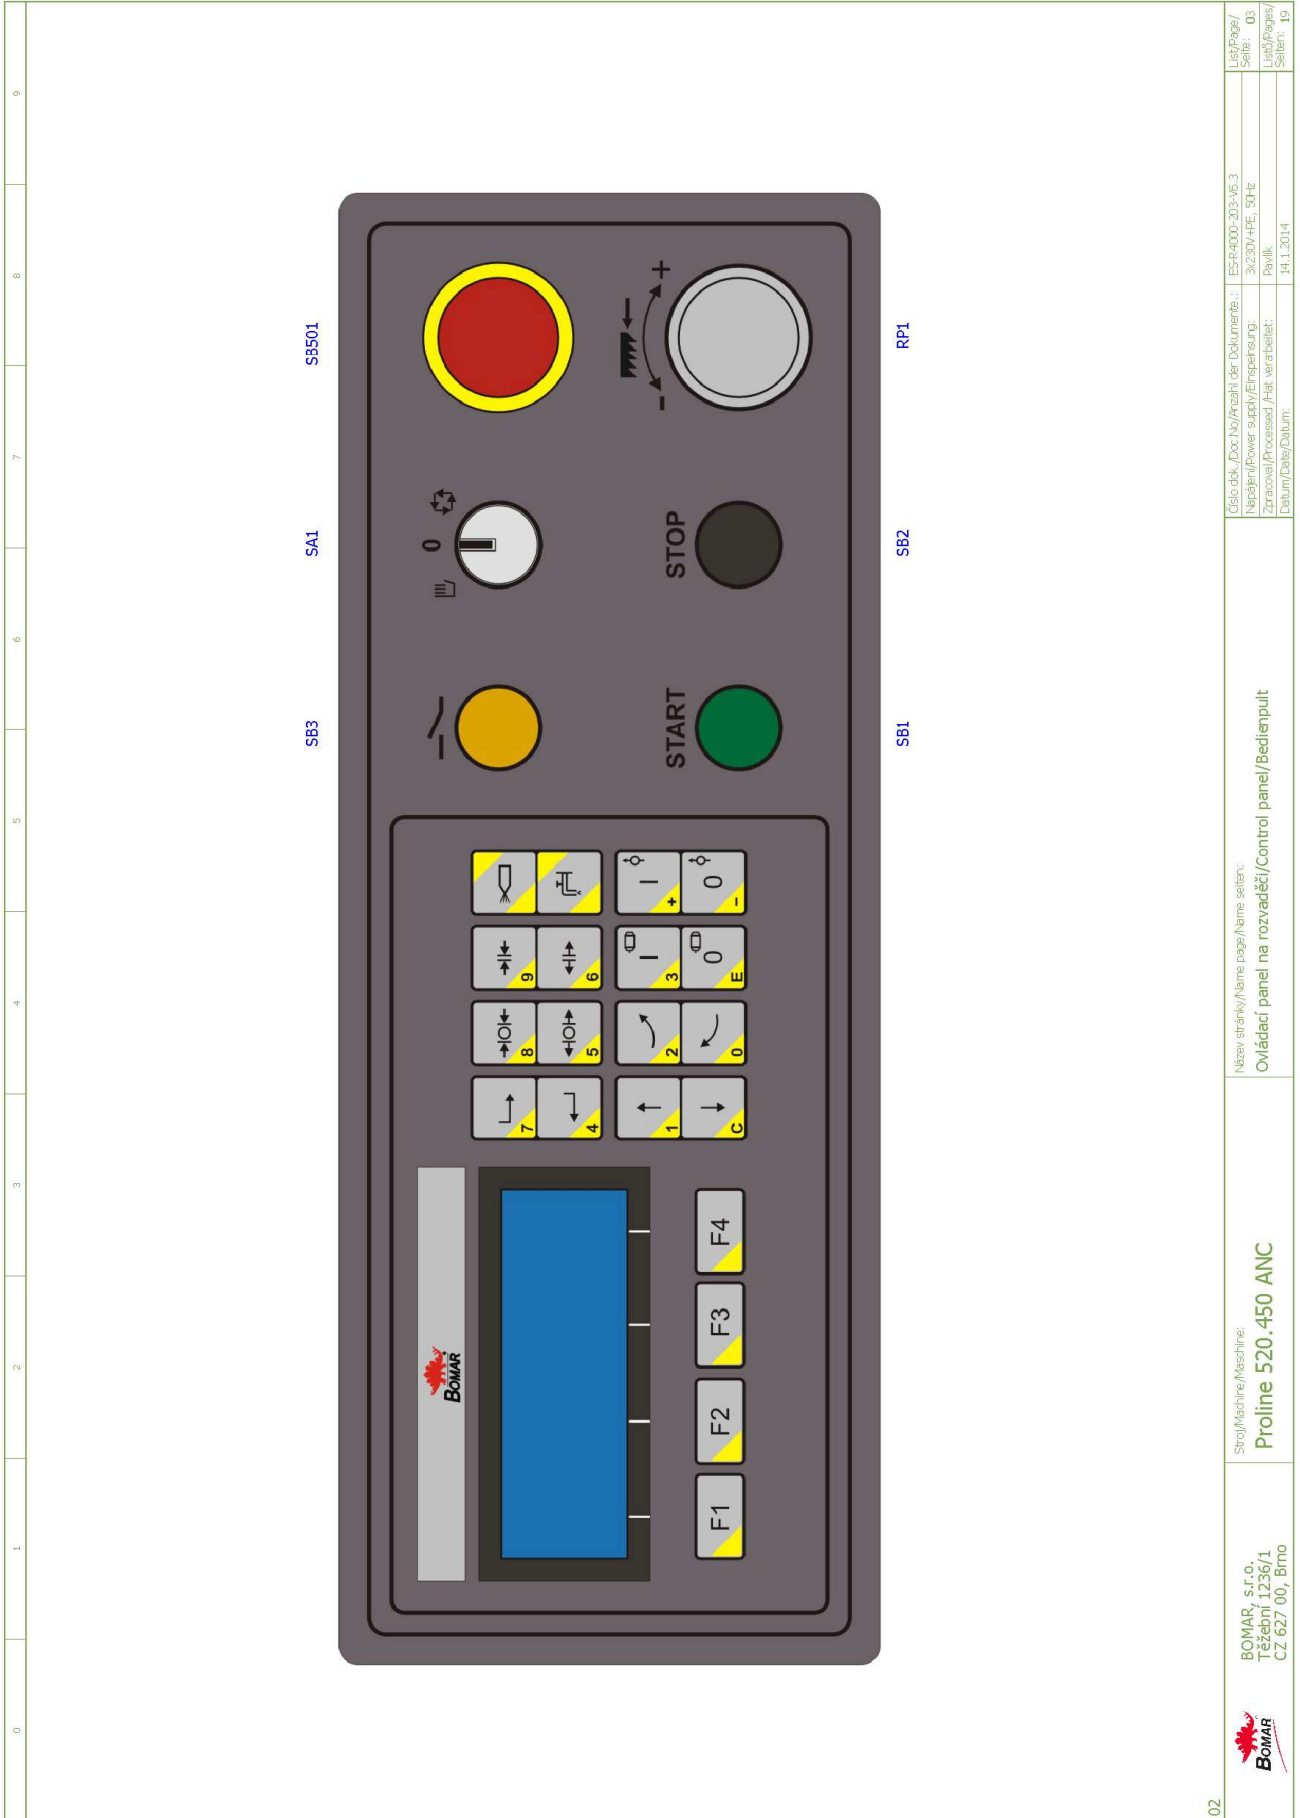


0	1	2	3	4	5	6	7	8	9
Device identification	Device description	Type number	Manufacturer	Part number	Quantity	Location (page,column)			
-ZD1	Power supply unit - 15VAC/24VDC; 20VAC/28VDC	ZDR-03	Bomar	265.915	1	/06,2			
-CU1	Touch-sensitive keyboard	31.R230-207	AKI ELECTRONIC, spol.s.r.o.	31.R230-207	1	/12,0			
-FA1	Auxiliary Contact Block - 1XNO+1XNC	HKF1-11	ABB	91.046.002	1	/05,3			
-FA2	Auxiliary Contact Block - 1XNO+1XNC	HKF1-11	ABB	91.046.002	1	/05,5			
-FA3	Auxiliary Contact Block - 1XNO+1XNC	HKF1-11	ABB	91.046.002	1	/05,7			
-HL1	Green light for Eaton adapter	M22-LED-G	EATON	91.061.023	1	/08,a,5			
-HL2	White light for Eaton adapter	M22-LED-W	EATON	91.061.034	1	/11,7			
-SA1	Head of 3 positional switch	M22-WRK3	EATON	91.060.051	1	/10,5			
-SB1	Green translucent switch head	M22-DL-G	EATON	91.060.031	1	/10,2			
-SB3	Yellow translucent switch head	M22-DL-Y	EATON	91.060.053	1	/11,3			
-SN1	Lineare incrementa encoder - 10-30VDC/5V TTL line driver	LMIX2-026-08,0-1-01	ELGO	91.270.006	1	/13,4			
-FU1	Tube fuse - 2A/250V, slow, 5x20	T2A/250V	ESKA	91.230.001	1	/06,1			
-FU2	Tube fuse - 2A/250V, slow, 5x20	T2A/250V	ESKA	91.230.001	1	/06,1			
-FU3	Tube fuse - 500mA/250V, slow, 5x20	T500mA/250V	ESKA	91.230.011	1	/06,5			
-FU6	Tube fuse - 6,3A/250V, slow, 5x20	T6,3A/250V	ESKA	91.230.002	1	/06,5			
-RP1	Potenciometr 4k7	TP195 4k7/N20A	GES-ELECTRONICS, a.s.	91.283.015	1	/05,a,6			
-RP1	Potenciometer knob - 24mm	S8877 BLK	GES-ELECTRONICS, a.s.	91.060.063	1	/05,a,6			
-RCF1	RCF filter	FBOPR1624	Ing. Miroslav Vítek	91.041.015	1	/05,2			
-RCF2	RCF filter	FBOPR1624	Ing. Miroslav Vítek	91.041.015	1	/05,4			
-RCF3	RCF filter	FBOPR1624	Ing. Miroslav Vítek	91.041.015	1	/05,6			
-RCF11	RCF filter	FBOPR1624	Ing. Miroslav Vítek	91.041.015	1	/05,a,1			
-RCF21	RCF filter	FBOPR1624	Ing. Miroslav Vítek	91.041.015	1	/05,a,1			
-BM1	Safety relay - 3xNO	CS AR-02M024	PIZZATO	91.051.034	1	/11,5			
-FA1	Manual motor starter - 0.63A	MS16-0,63	ABB	91.045.018	1	/05,3			
-FA2	Manual motor starter - 1.6A	MS16-1,6	ABB	91.045.020	1	/05,5			
-FA3	Manual motor starter - 6.3A	MS16-6,3	ABB	91.045.023	1	/05,7			
-FU1	Fuse terminal	WK4/THS15U	WIELAND	91.251.102	1	/06,1			
-FU2	Fuse terminal	WK4/THS15U	WIELAND	91.251.102	1	/06,1			

The manufacturer reserves right to use an equivalent replacement device.

03	 BOMAR, s.r.o. Těšební 1236/1 CZ 627 00, Brno	Strojí/Machine/Maschine: <b>Proline 520.450 ANC</b>	Kúsovník artiklů/ Parts list/ Artikelsstückliste	Dátum/Date/Datum: 14.1.2014	Dátum/Page/ 04
			Názov stránky/Name page/Name seiten: Název/Power supply/Einspeisung: 3x230V+PE, 50Hz	Zpracov./Processed /Akt. verarbeitete: PAVIK	List/Pages/ 19
			Dátum dok./Doc No./Anzahl der Dokumente: ES-R4000-203-V6,3	Názov/Power supply/Einspeisung: 3x230V+PE, 50Hz	List/Pages/ 04


0	1	2	3	4	5	6	7	8	9	
<b>Parts list</b>										
Device identification	Device description	Type number	Manufacturer	Part number	Quantity	Location (page.column)				
-FU3	Fuse terminal	WK4/T/HSIU	WIELAND	91.251.102	1	/06.5				
-FU4	Fuse terminal	WK4/T/HSIU	WIELAND	91.251.102	1	/06.5				
-FU4	Tube fuse - 800mA/250V, slow, 5x20	T800mA/250V	ESKA	91.230.010	1	/06.5				
-FU5	Fuse terminal	WK4/T/HSIU	WIELAND	91.251.102	1	/06.5				
-FU5	Tube fuse - 1A/250V, slow, 5x20	T1A/250V	ESKA	91.230.031	1	/06.5				
-FU6	Fuse terminal	WK4/T/HSIU	WIELAND	91.251.102	1	/06.5				
-FU7	Tube fuse - 200mA/250V, slow, 5x20	T200mA/250V	ESKA	91.230.037	1	/14.1				
-FU7	Fuse terminal	WK4/T/HSIU	WIELAND	91.251.102	1	/14.1				
-KM1	Minicontactor - 4kW/400V, 3P	B6S-30-01-1.7-71	ABB	91.040.049	1	/07.2				
-KM2	Minicontactor - 4kW/400V, 3P	B6S-30-01-1.7-71	ABB	91.040.049	1	/07.4				
-KM3	Minicontactor - 4kW/400V, 3P	B6S-30-01-1.7-71	ABB	91.040.049	1	/07.5				
-KM11	Contact - 5,5kW/400V, 3P	AF12-30-01-11	ABB	91.040.051	1	/11.7				
-KM12	Contact - 5,5kW/400V, 3P	AF12-30-01-11	ABB	91.040.051	1	/11.8				
-PA1	Fuse switch disconnecter E-90 - 3P	E 93/32	ABB	91.241.014	1	/05.a.2				
-Q51	Handle switch - black	OH52RJ	ABB	91.180.015	1	/05.0				
-RP1	Fastconnect clamp	WAGO 224-112	WIELAND	91.250.009	3	/05.a.6				
-SA1	Attaching adapter + 1NO	M22-AK10	EATON	91.061.021	1	/10.5				
-SA1	NO contact for Eaton adapter	M22-K10	EATON	91.061.022	1	/10.5				
-SB1	Attaching adapter + 1NO	M22-AK10	EATON	91.061.021	1	/10.2				
-SB2	Attaching adapter + 1NO	M22-AK10	EATON	91.061.021	1	/10.3				
-SB2	Switch head - black	M22-D-S	EATON	91.060.035	1	/10.3				
-SB3	Attaching adapter + 1NO	M22-AK10	EATON	91.061.021	1	/11.3				
-SB501	Emergency-stop mushroom push - button + 3xNC	YW1B-V4E02R	IDEC	91.060.084	1	/11.1				
-TR1	Toroidal transformer - 0-230-400V/20V/15V, 0.65-0.38A/6A/2A, 150VA	1502304002015	KARBAN s.r.o.	91.080.026	1	/06.1				
-SQ8	Safety limit switch - 2xNC	QK58	KEDU	91.173.012	1	/11.1				
-PA1	Cylindric fuse - 25A, 10x38 fast, gG characteristic	PV10 25A gG	OEZ	91.230.021	3	/05.a.2				
-SQ3	Limit switch - 1NC+1NO, M20, slow	D4N-4A32	OMRON	91.173.010	1	/09.2				
-SQ4	Limit switch - 1NO + 1NC, roller, M2, snap action	FR 605-M2	PIZZATO	91.173.009	1	/09.3				
<b>The manufacturer reserves right to use an equivalent replacement device.</b>										
 <b>BOMAR, s.r.o.</b> Těšební 1236/1 CZ 627 00, Brno		Stroj/Machine/Maschine: <b>Proline 520.450 ANC</b>		Název stránky/Name page/Name seiten: <b>Kusovník artiklů/ Parts list/ Artikelstückliste</b>		Celo dok./Doc.No./Anzahl der Dokumente.: ES4-400-203-V5.3 Název/Power supply/Einspeisung: 3x230V/4PE, 50Hz Zpracoval/Processed./Hlt. verarbeitet: Pavl. Datum/Date/Datum: 14.1.2014		List/Page/ Seite: <b>04</b> List/Page/ Seiten: <b>19</b>		

0	1	2	3	4	5	6	7	8	9	
<b>Parts list</b>										
<b>Device identification</b>										
Device description	Type number	Manufacturer	Part number	Quantity	Location (page,column)					
Limit switch - 1NO + 1NC, roller, M2, snap action	FR 605-M2	PIZZATO	91.173.009	1	/09.4					
Limit switch - 1NO + 1NC	FR 615-M2	PIZZATO	91.173.044	1	/09.5					
Limit switcher - 1NO + 1NC, large adjustable roller, M2, snap action	FR 655-M2	PIZZATO	91.173.045	1	/09.6					
Sensor cable	MOD.14/4 M12 SL LC10	SICK	91.142.001	1	/09.7					
Sensor cable	MOD.15/4 M12 SL LC10	SICK	91.142.002	1	/09.8					
Disconnector - 3P,40A	OT40FT3	ABB	91.170.019	1	/05.0					
Control circuit	PRO-5-X	Bomar	265.917	1	/12.0					
AC motor drive - 3.7kW, 3x230VAC	VFD037EL23A	DELTA ELECTRONICS, INC.	91.012.096	1	/05.a.2					
RCF filter - 5.5 kW, 3x400V, 25A	ATV31/5,5KW	Ing. Miroslav Vítek	91.041.027	1	/05.a.2					
Fan 24VDC, 154CFM	RDH1238 B2	Xinnlian Electronic Co.	91.015.126	1	/07.7					
Terminal shroud	OTS40T3	ABB	91.170.017	1	/05.0					

The manufacturer reserves right to use an equivalent replacement device.

04.a


 BOMAR, s.r.o. Těšební 1236/1 CZ 627 00, Brno		Strojí/Machine/Machine: <b>Proline 520.450 ANC</b>		Kusovník artiklů/ Parts list/ Artikelstückliste		Datum/Date/Date: 14.1.2014		List/Page/ Seite: 04	
		Název strojů/Name page/Name seiten: ES-R4000-203-V6.3		Datum/Date/Date: 14.1.2014		Zpracoval/Processed /Hitt verarbeitet: PAVIK		List/Page/ Seite: 04	
		Název/Power supply/Einspeisung: 3x230V+PE, 50Hz		Datum/Date/Date: 14.1.2014		Zpracoval/Processed /Hitt verarbeitet: PAVIK		List/Page/ Seite: 04	
		Dle dok./Doc No./Anzahl der Dokumente: ES-R4000-203-V6.3		Datum/Date/Date: 14.1.2014		Zpracoval/Processed /Hitt verarbeitet: PAVIK		List/Page/ Seite: 04	

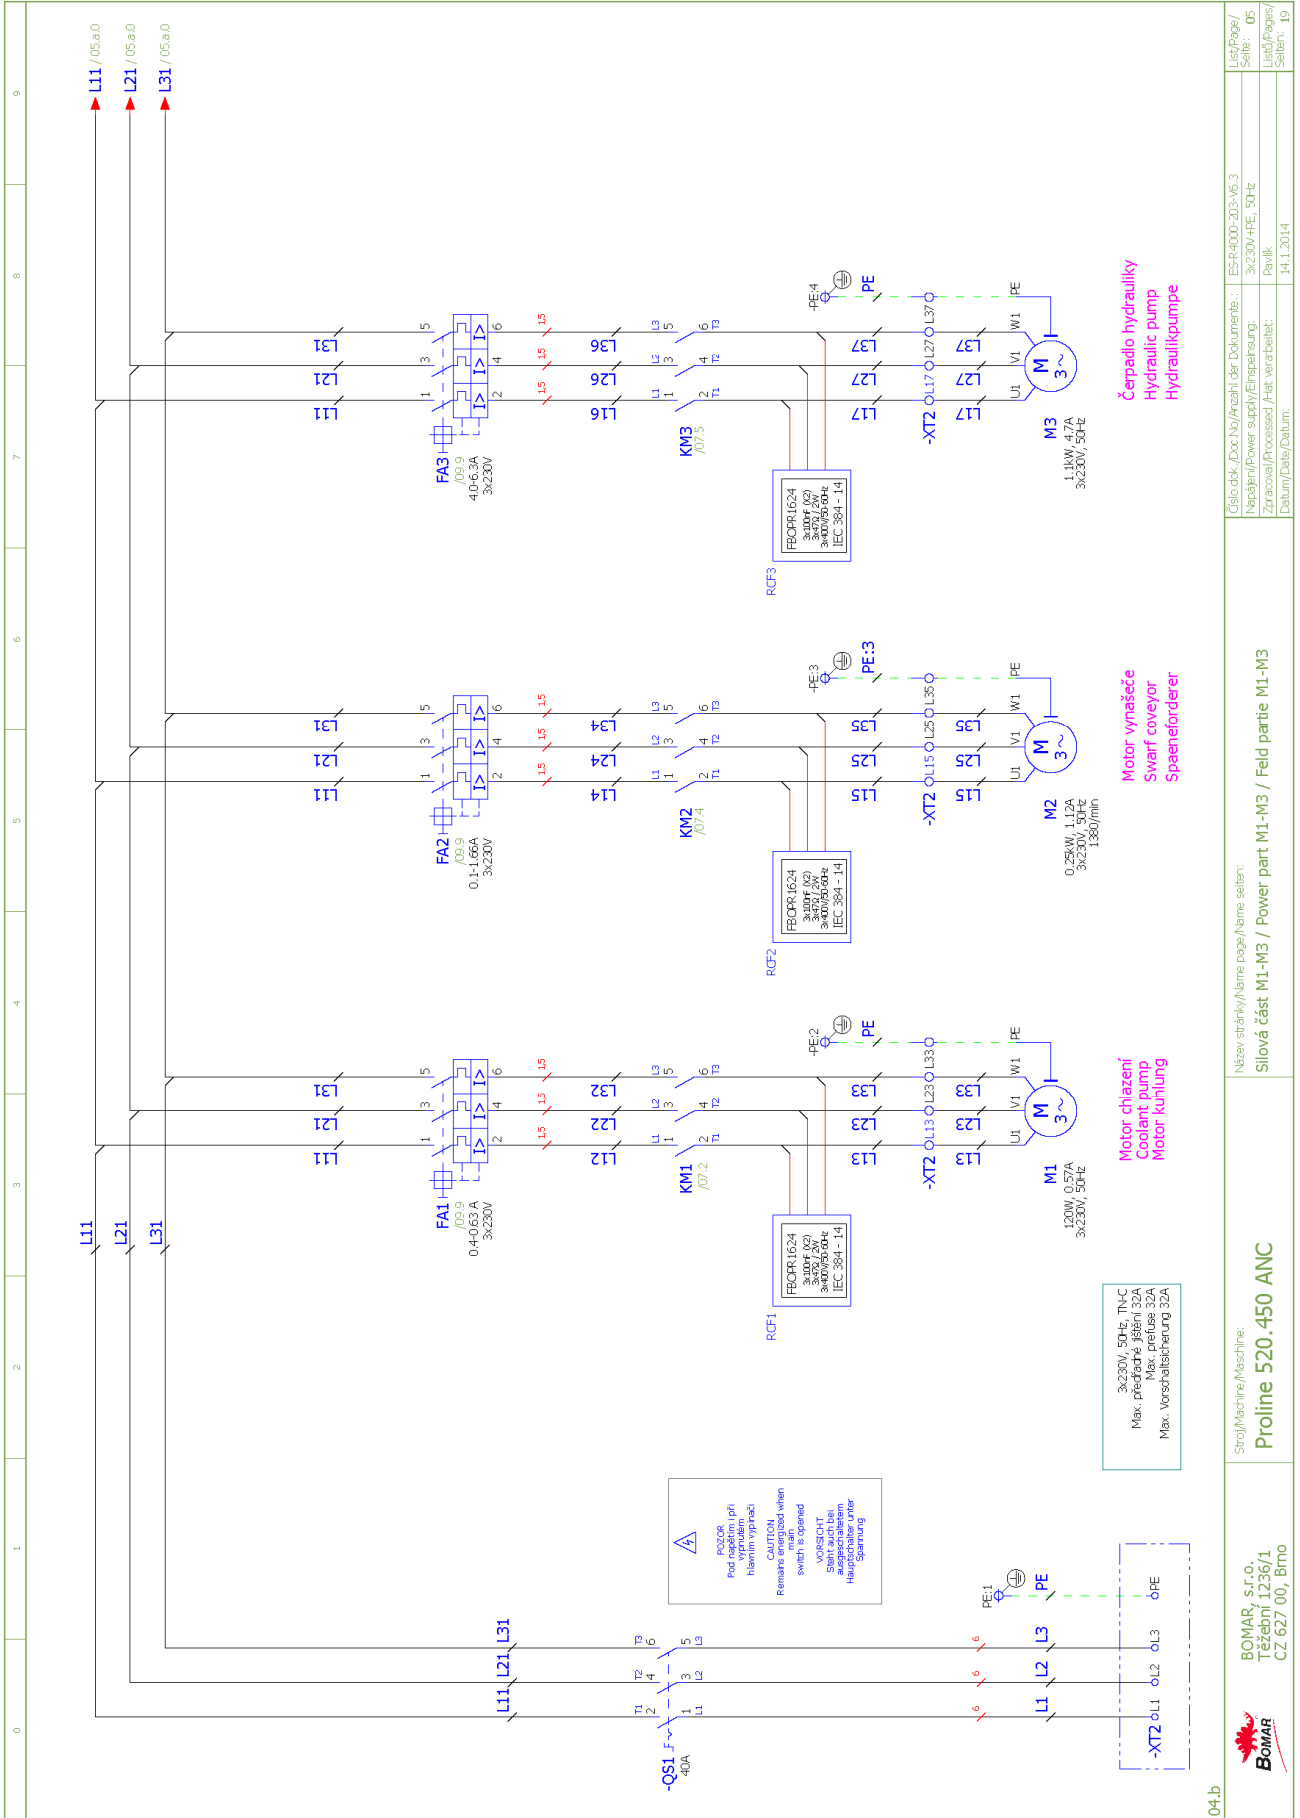



04.b


<p>BOMAR, s.r.o. Těšební 1236/1 CZ 627 00, Brno</p>	<p>Stroj/Machine/Maschine: <b>Proline 520.450 ANC</b></p>	<p>Název stránky/Name page/Name seiten: <b>Silová část M1-M3 / Power part M1-M3 / Feld partie M1-M3</b></p>	<p>Číslo dok./Doc.No./Anzahl der Dokumente: E54-400-203-V6.3</p>
	<p>3x230V, 50Hz</p>	<p>Page: 14.1.2014</p>	<p>Page: 19</p>



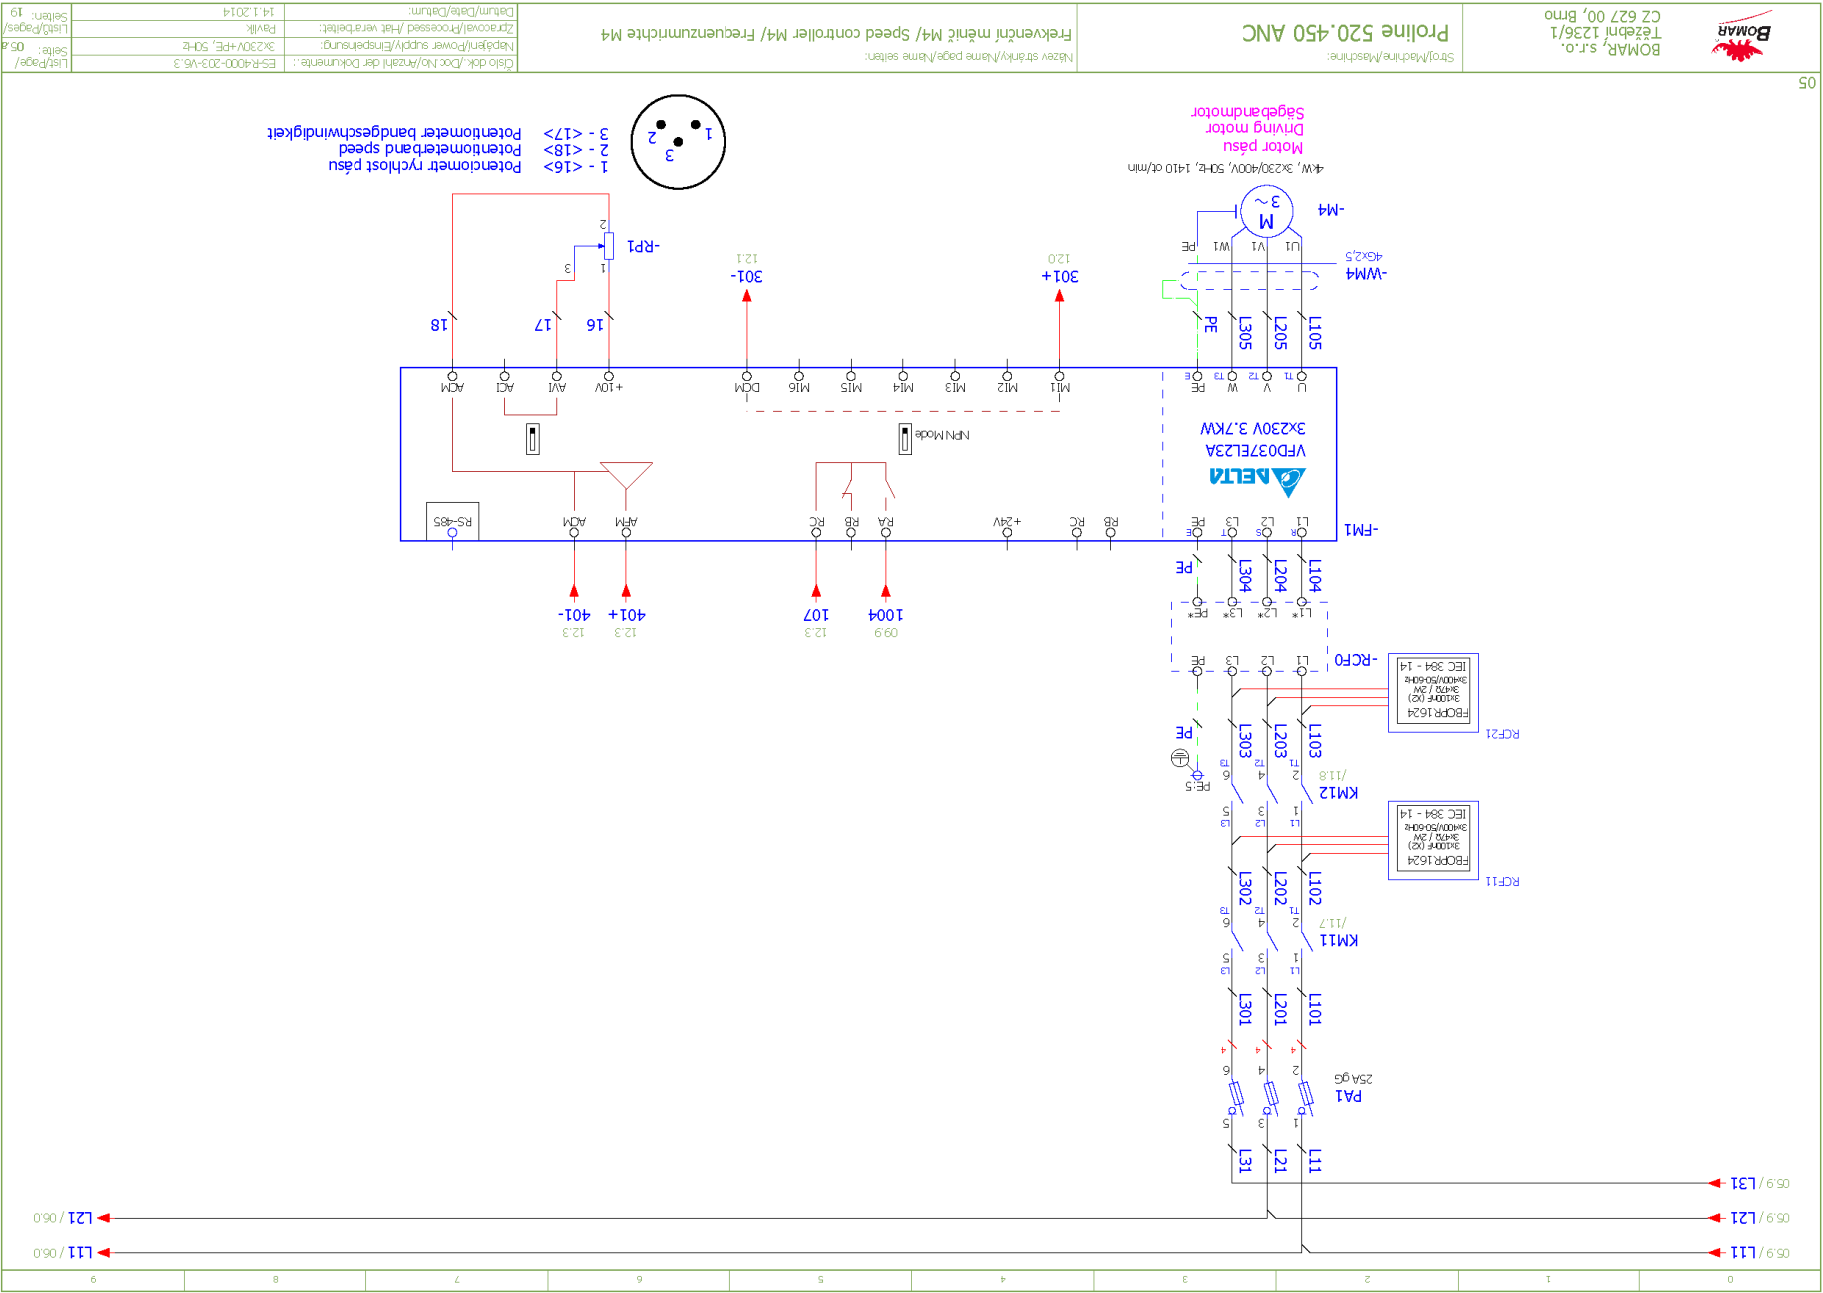

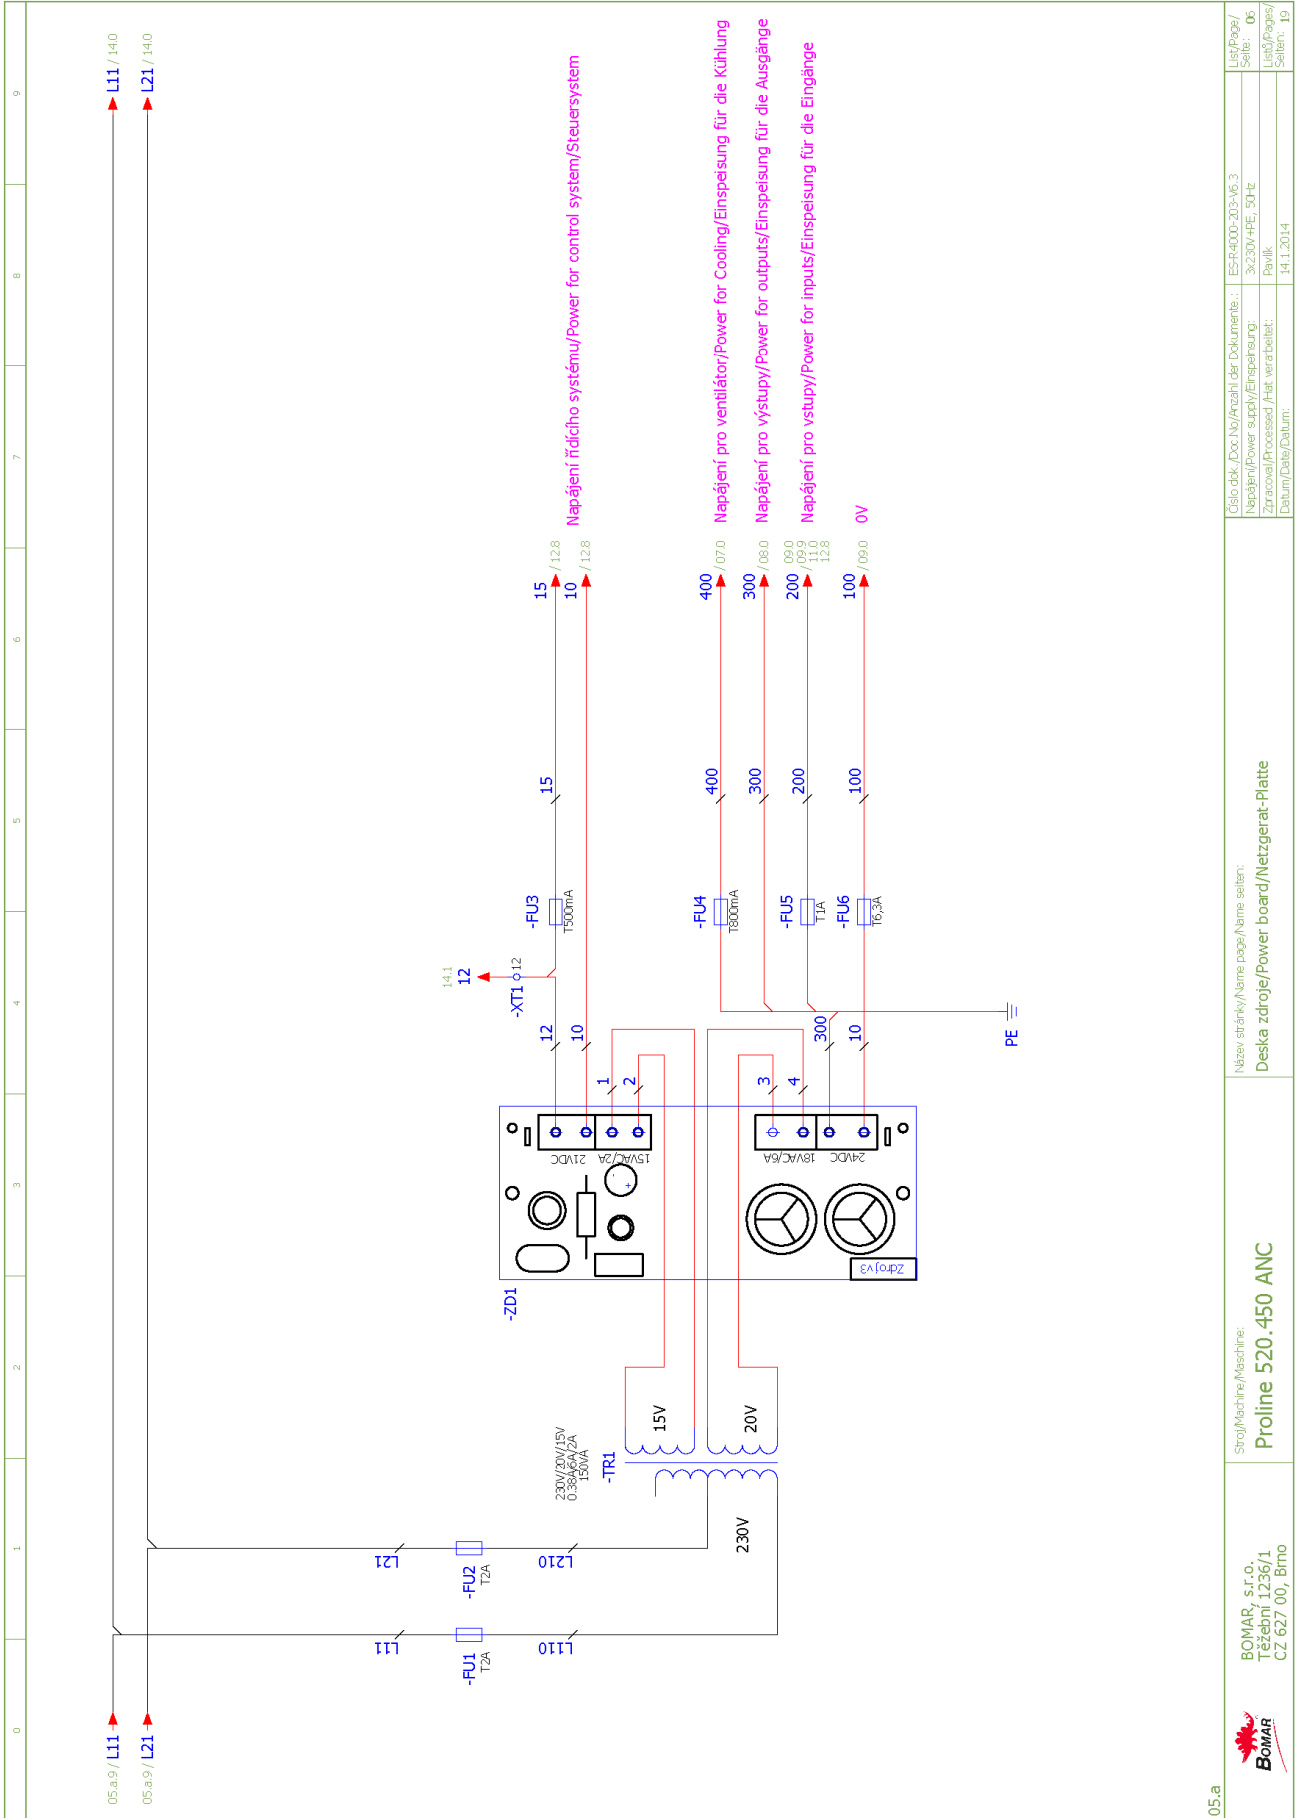


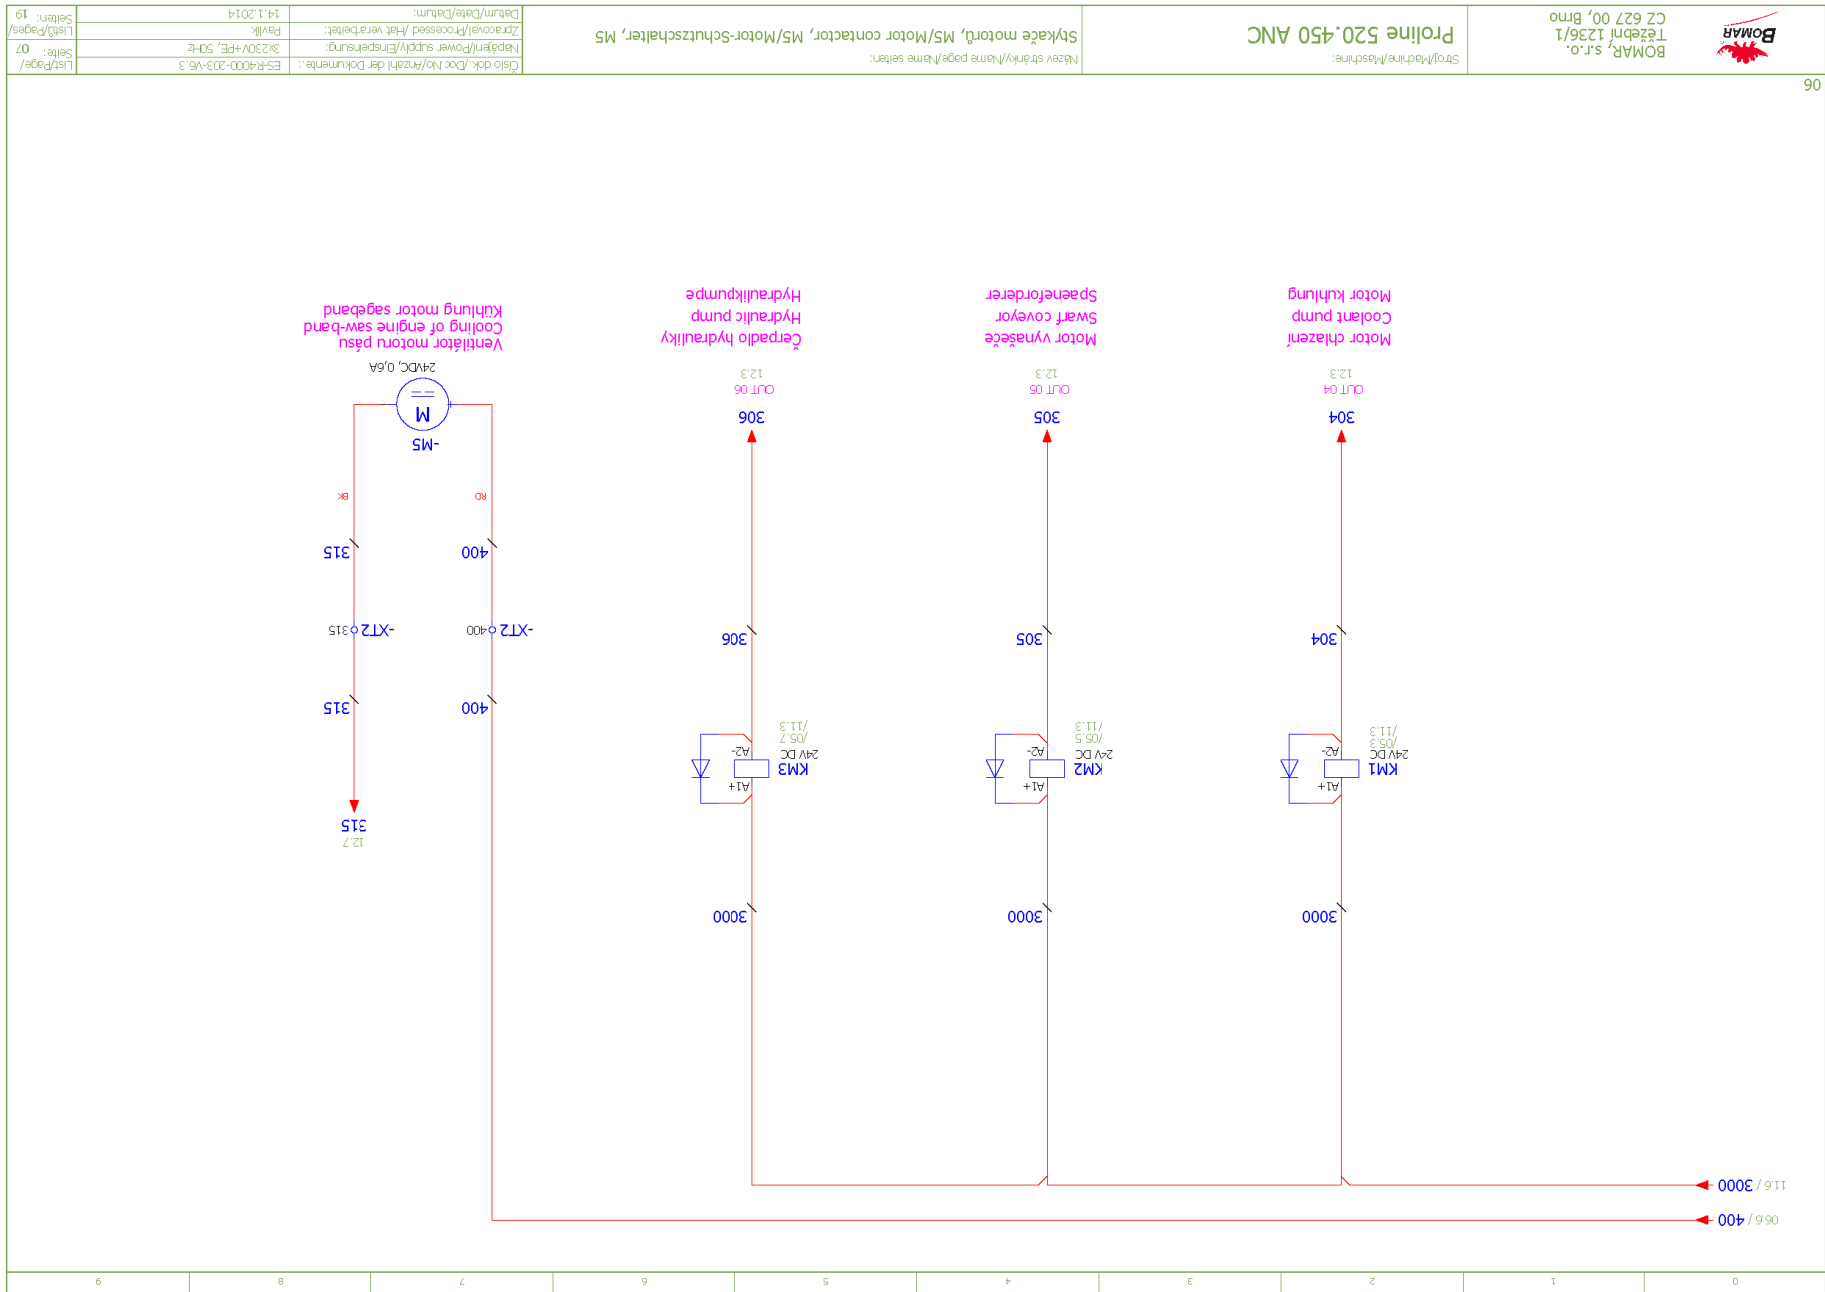


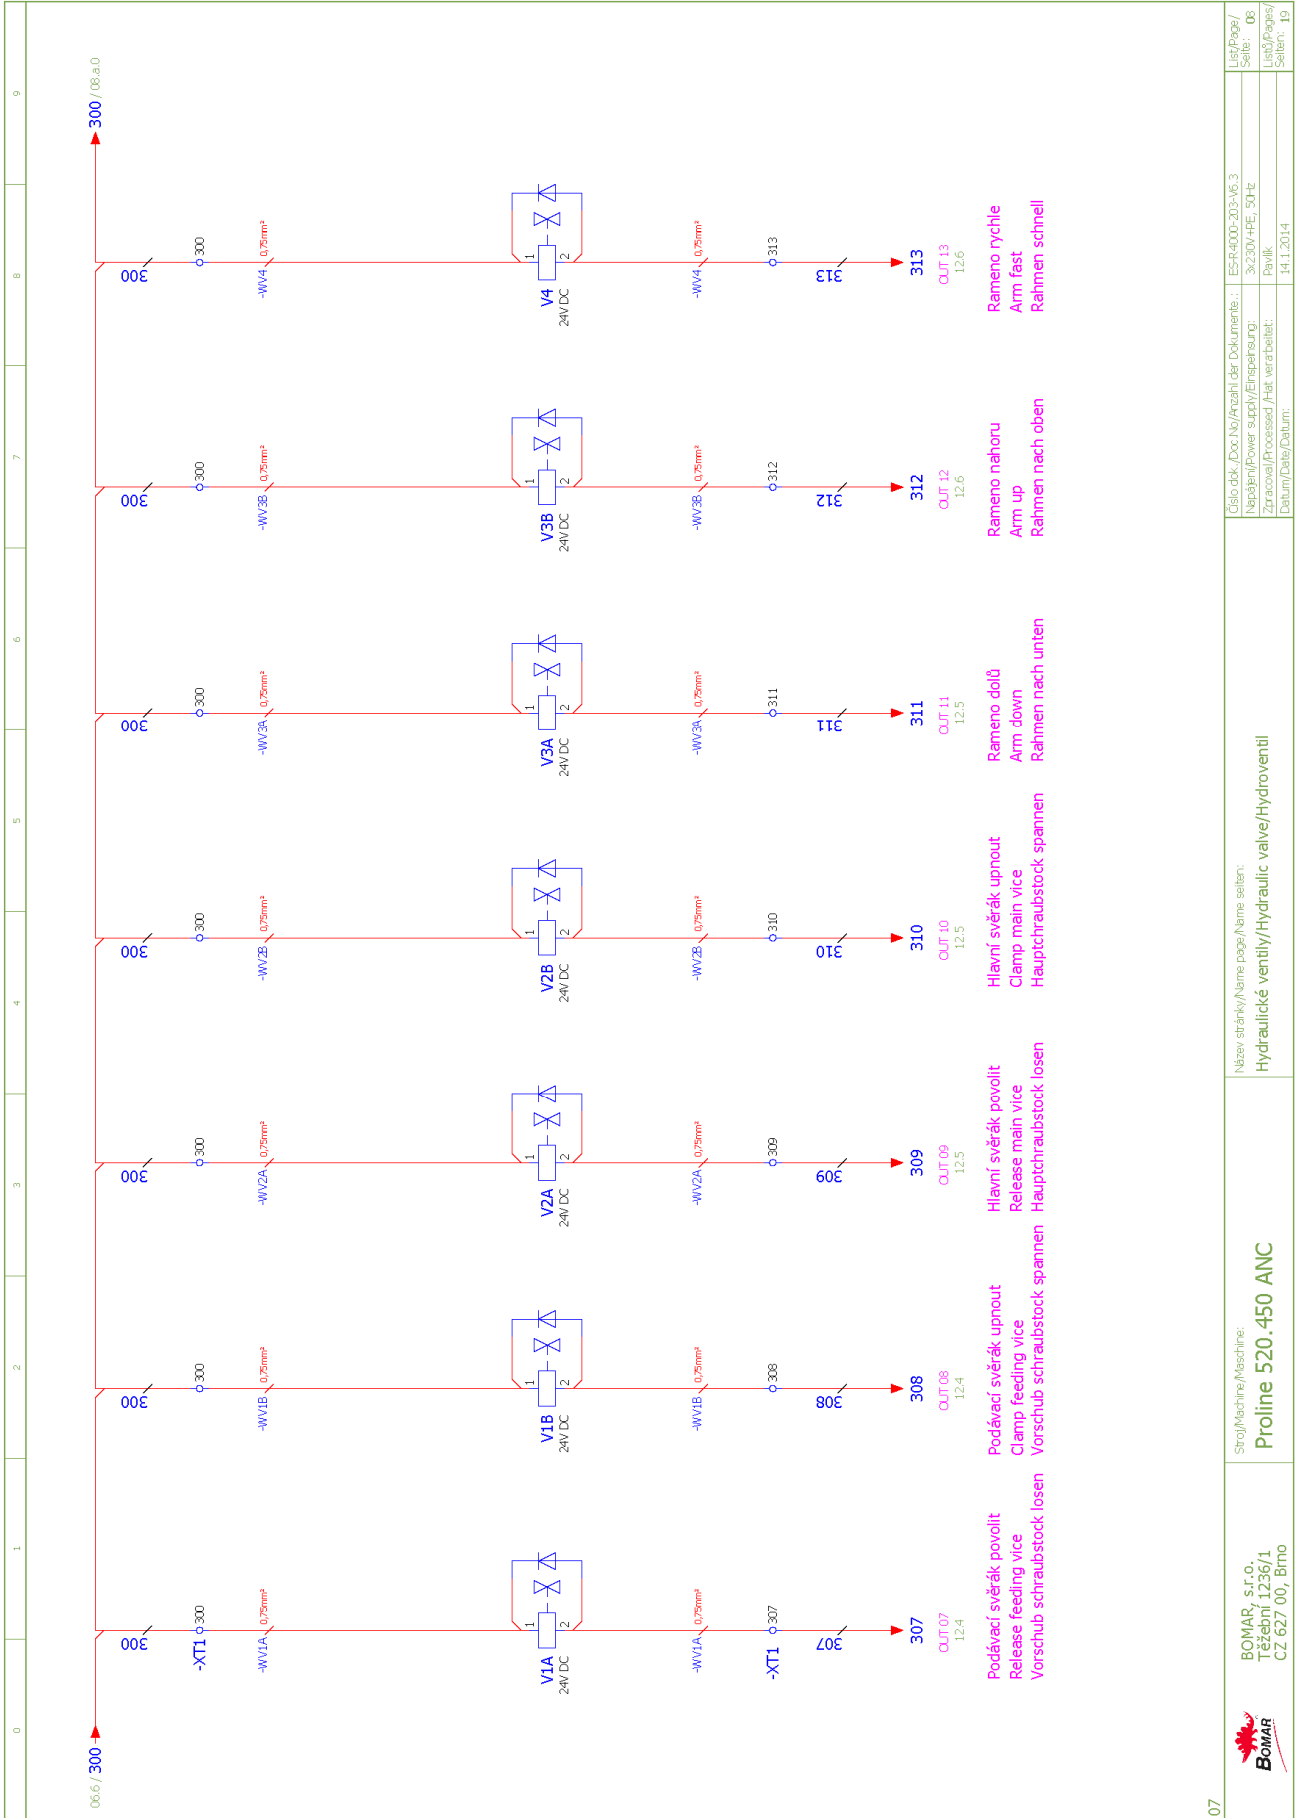

07	Glo dkk./Doc.No./Anzahl der Dokumente: ES4-400-203-V6.3	List/Page/ Seite: 08
	Nápojní/Power supply/Einspeisung: 3x230V/4PE, 50Hz	List/Page/ Seite: 08
	Zpracování/Processed./Htt. verarbeitet: Pahl	List/Page/ Seite: 19
	Datum/Date/Datum: 14.1.2014	List/Page/ Seite: 19



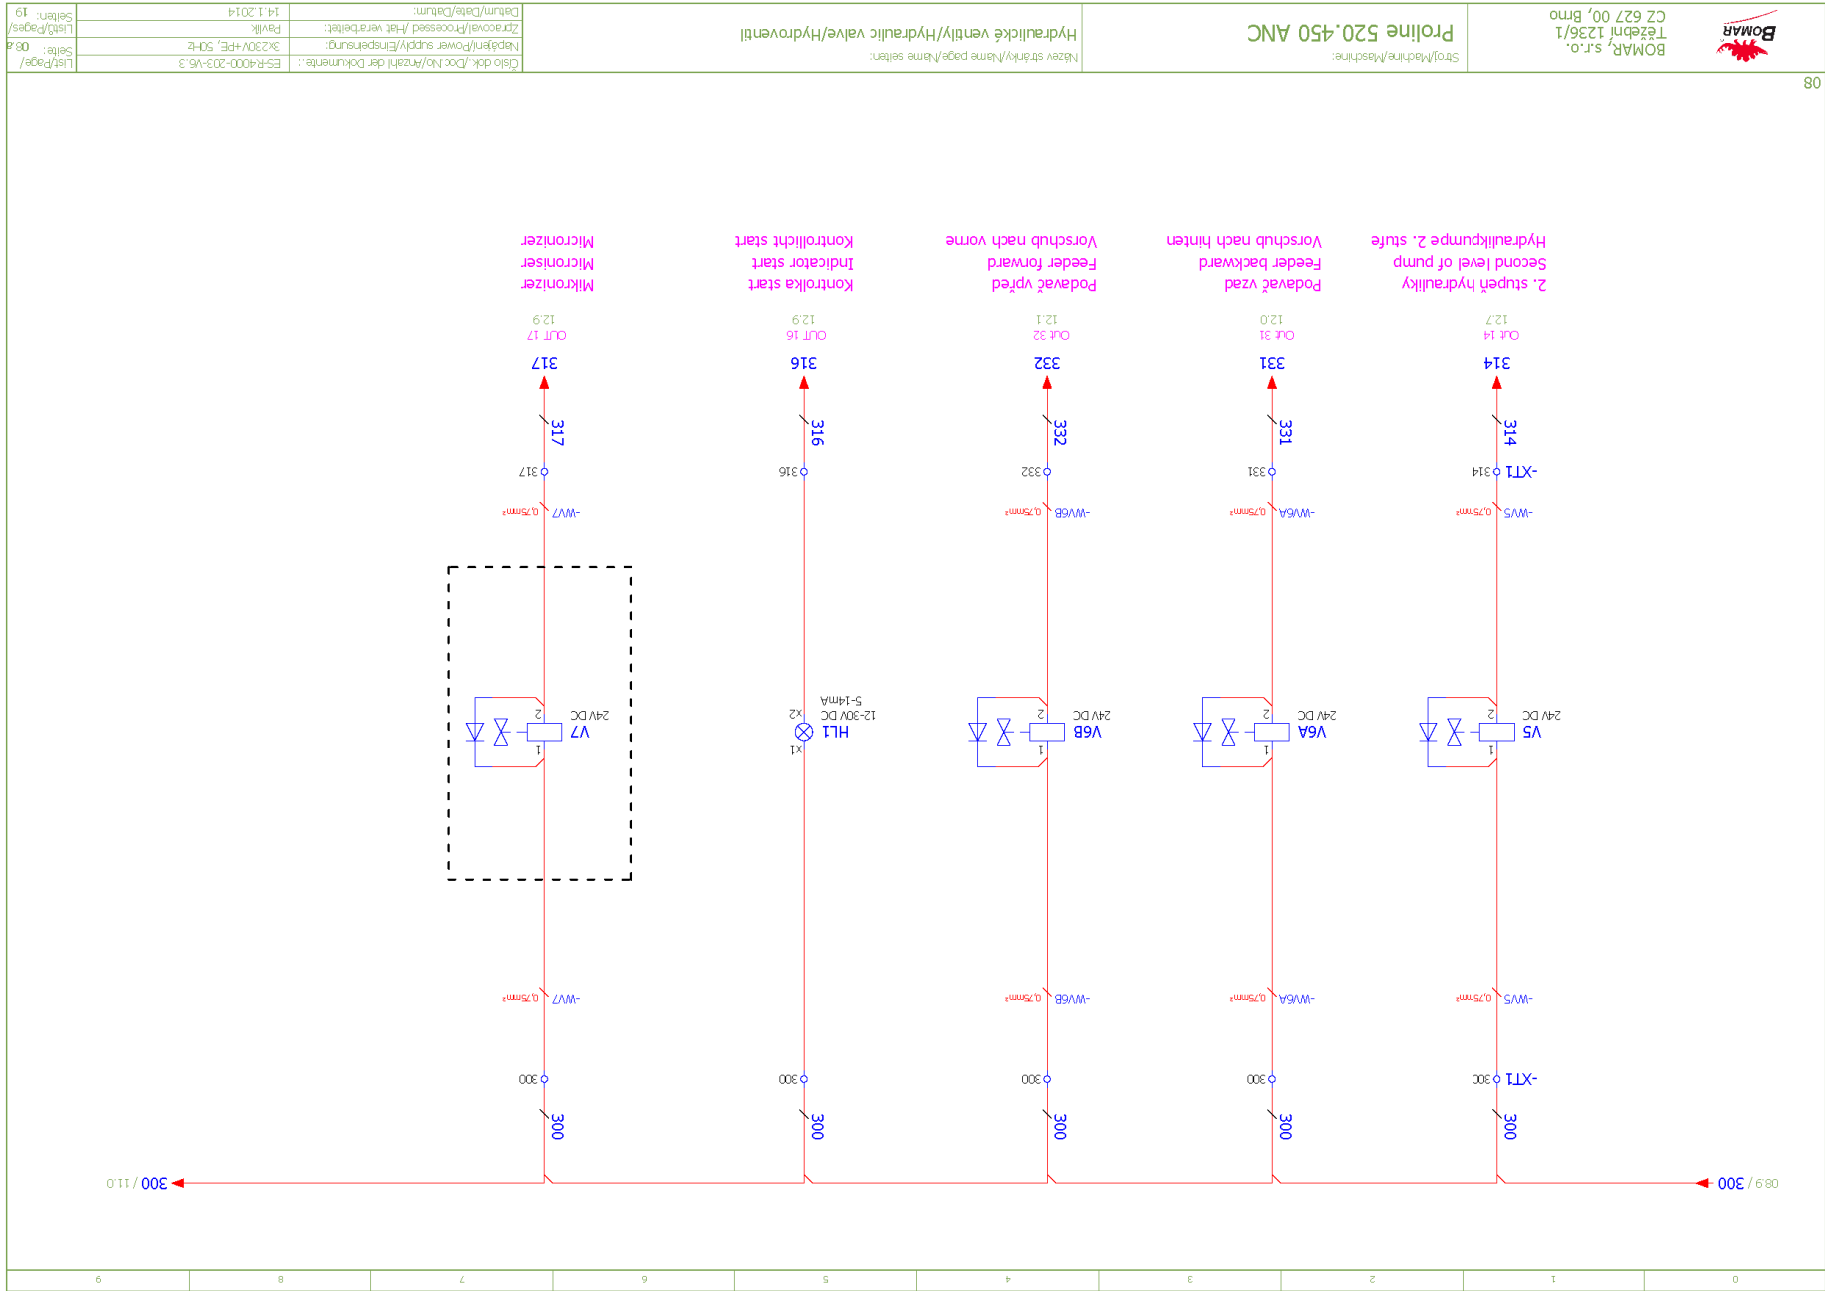


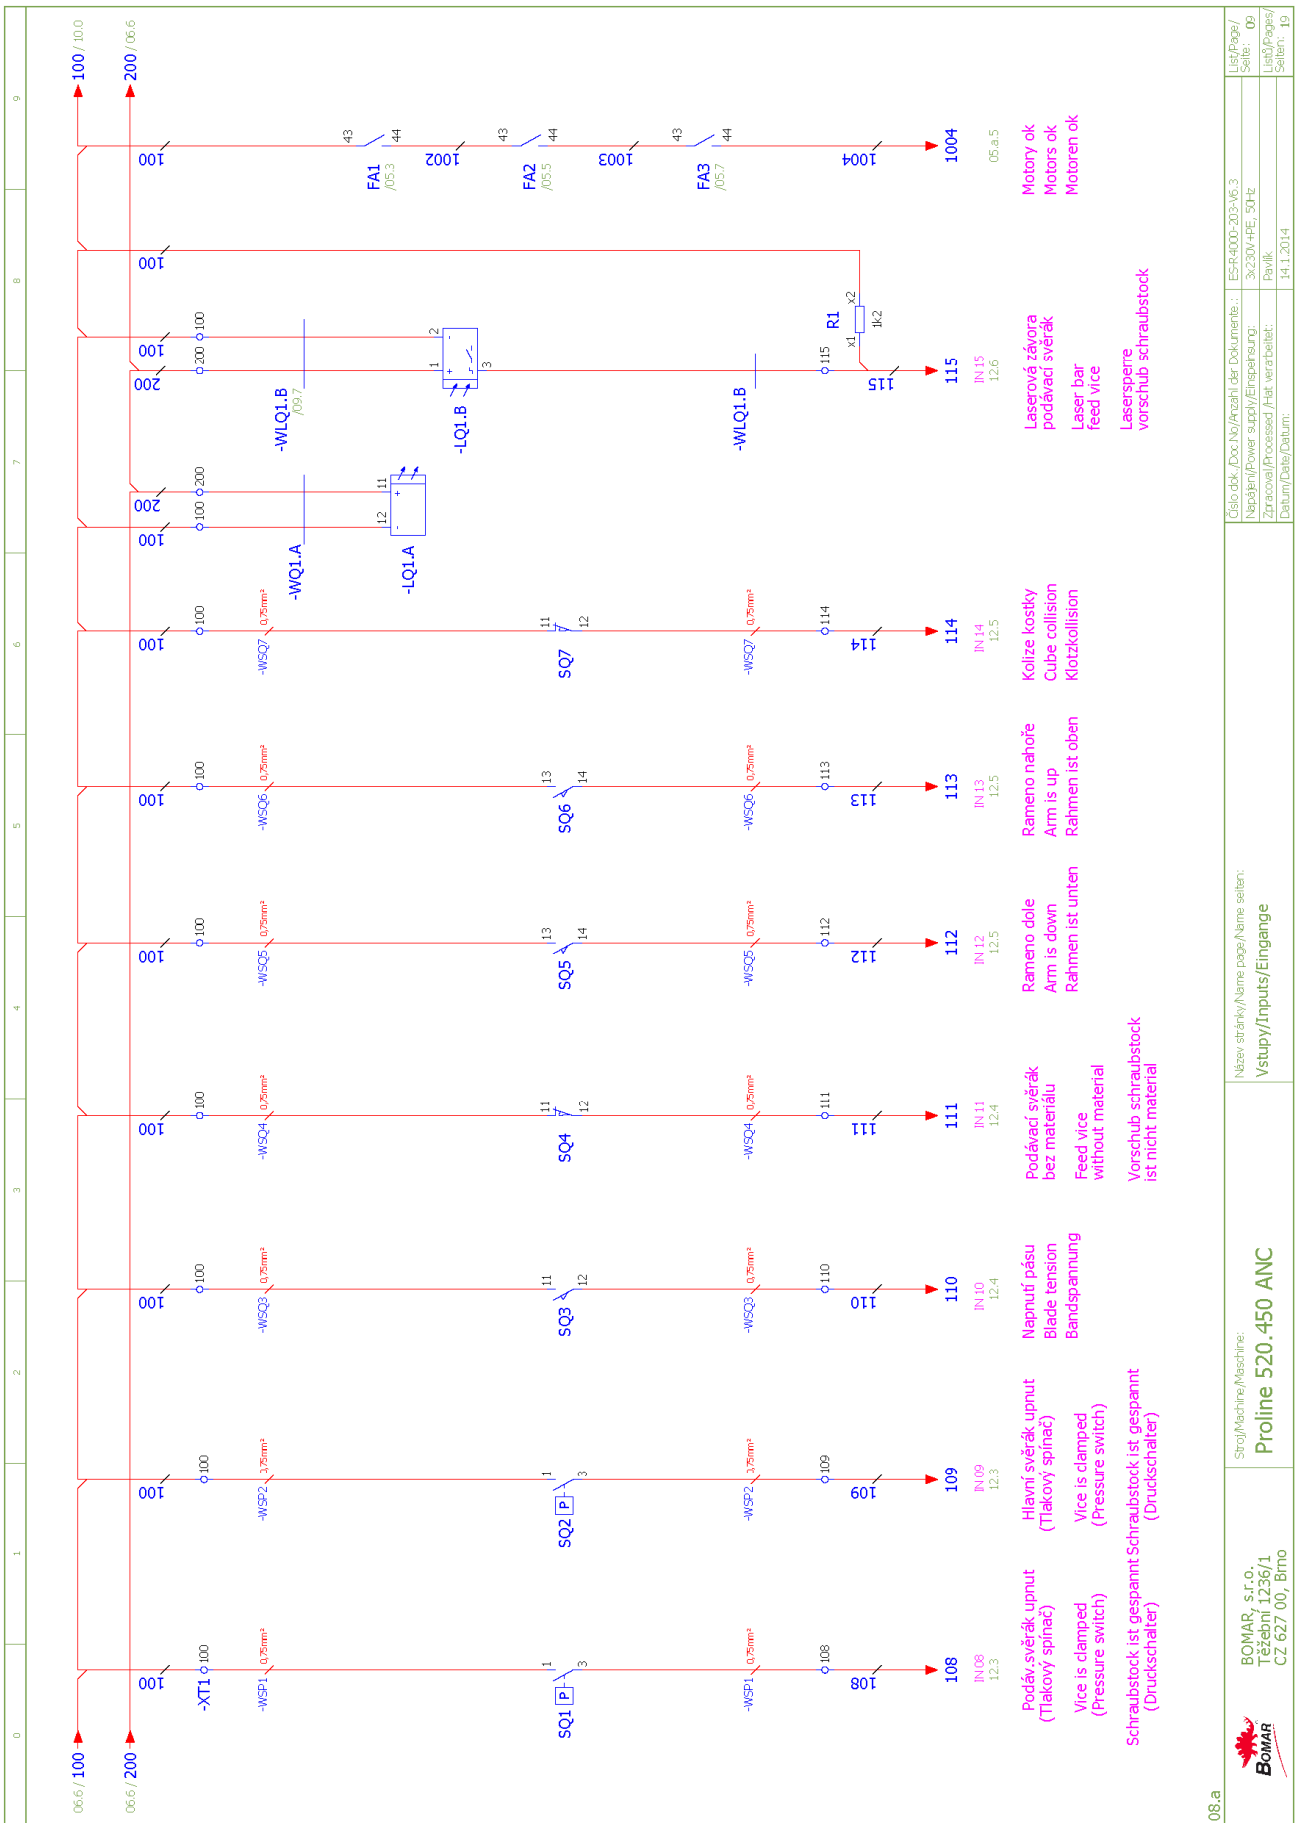


08.a

 BOMAR, s.r.o. Těšební 1236/1 CZ 627 00, Brno	Stroj/Machine/Maschine: <b>Proline 520.450 ANC</b>	Název stránky/Name page/Name seiten: <b>Vstup/Inputs/Eingänge</b>	Číslo odk./Doc.No./Anzahl der Dokumente.: E54-400-203-V6.3 Napětí/Power supply/Einspeisung: 3x230V/4PE, 50Hz Zpracováno/Processed/Abt. verarbeitet: Pavla Datum/Date/Datum: 14.1.2014
---	---	--	--

List/Page/	00	List/Page/	19
Seite:	00	Seite:	19

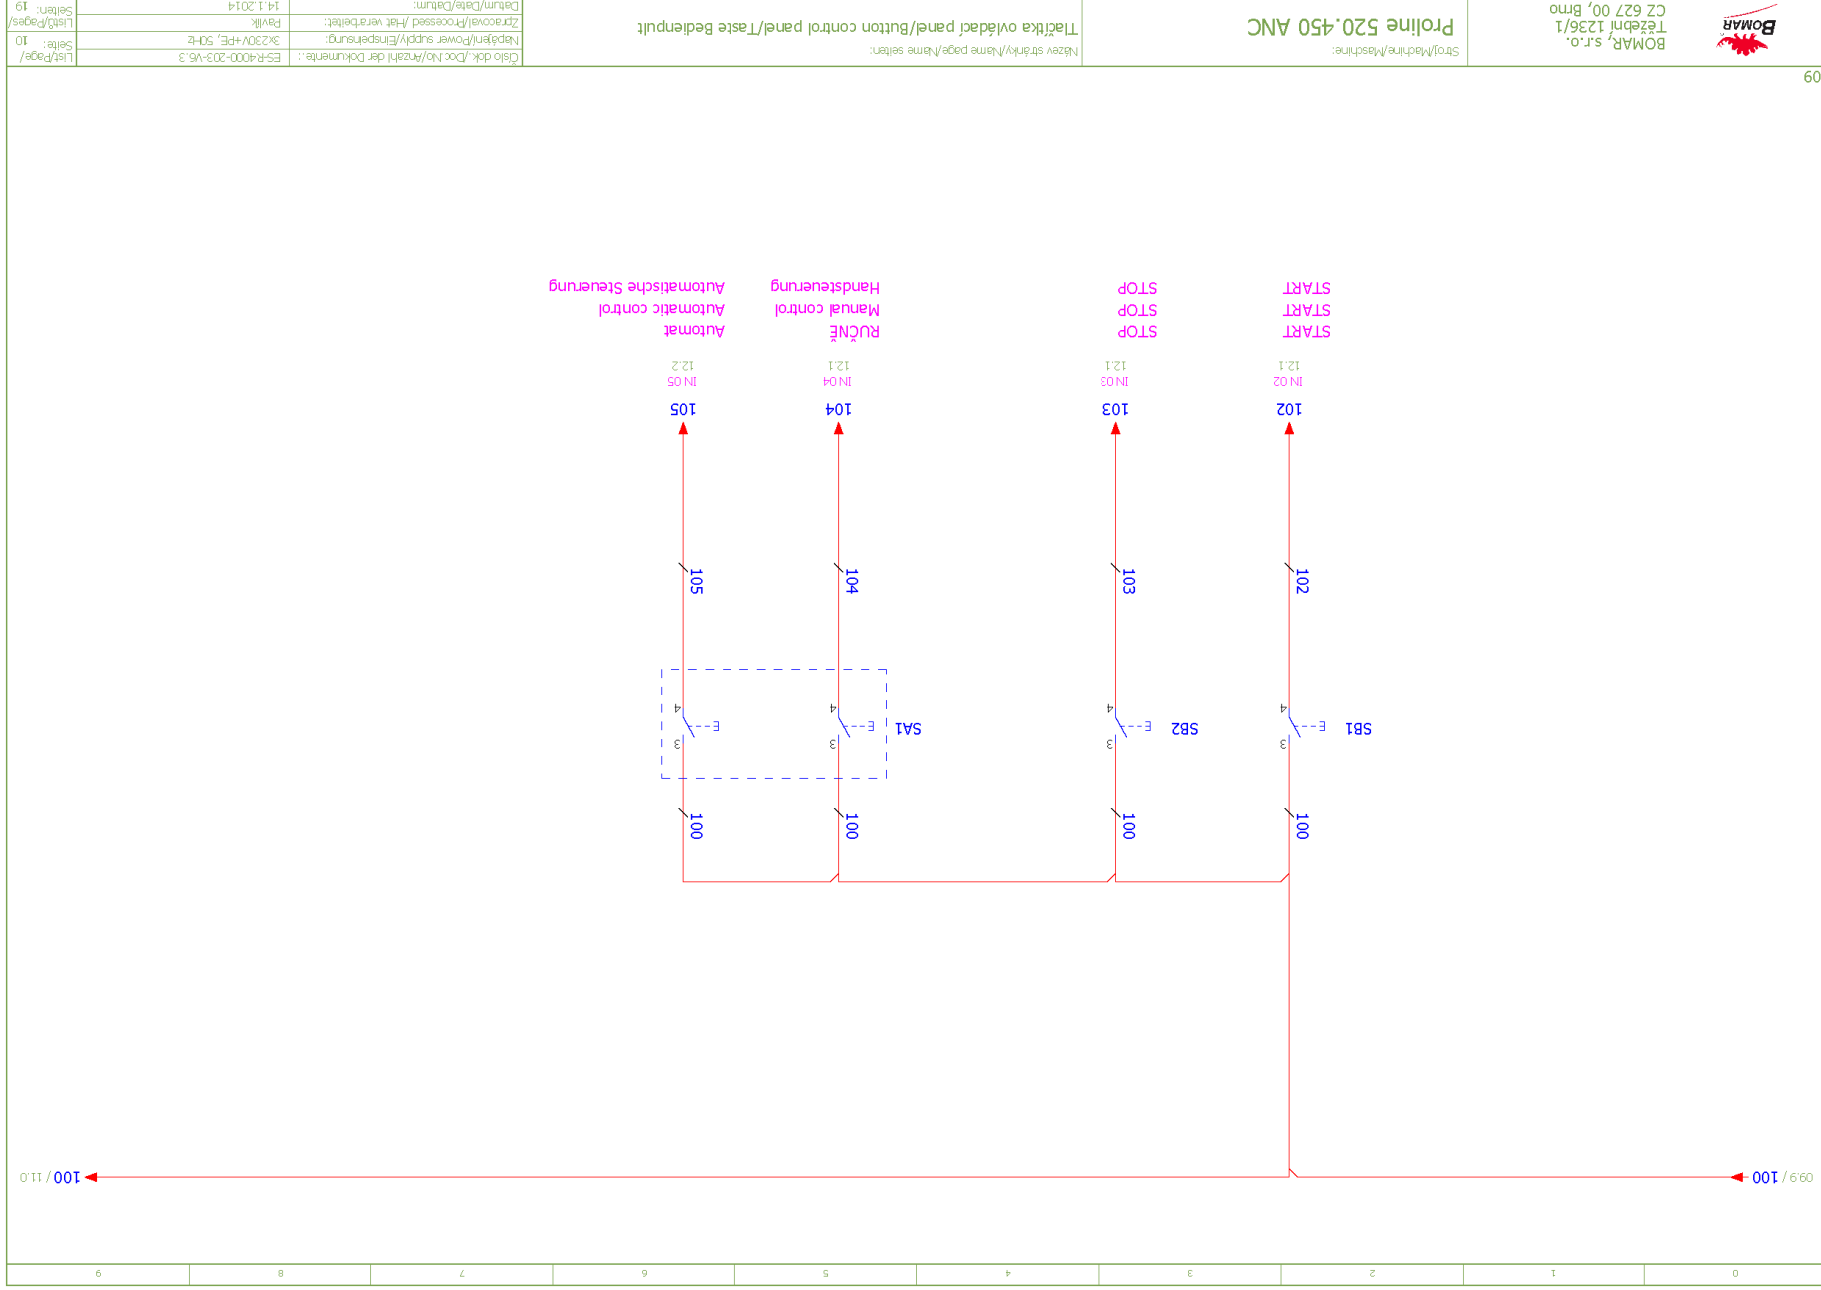


100 / 11.0 →

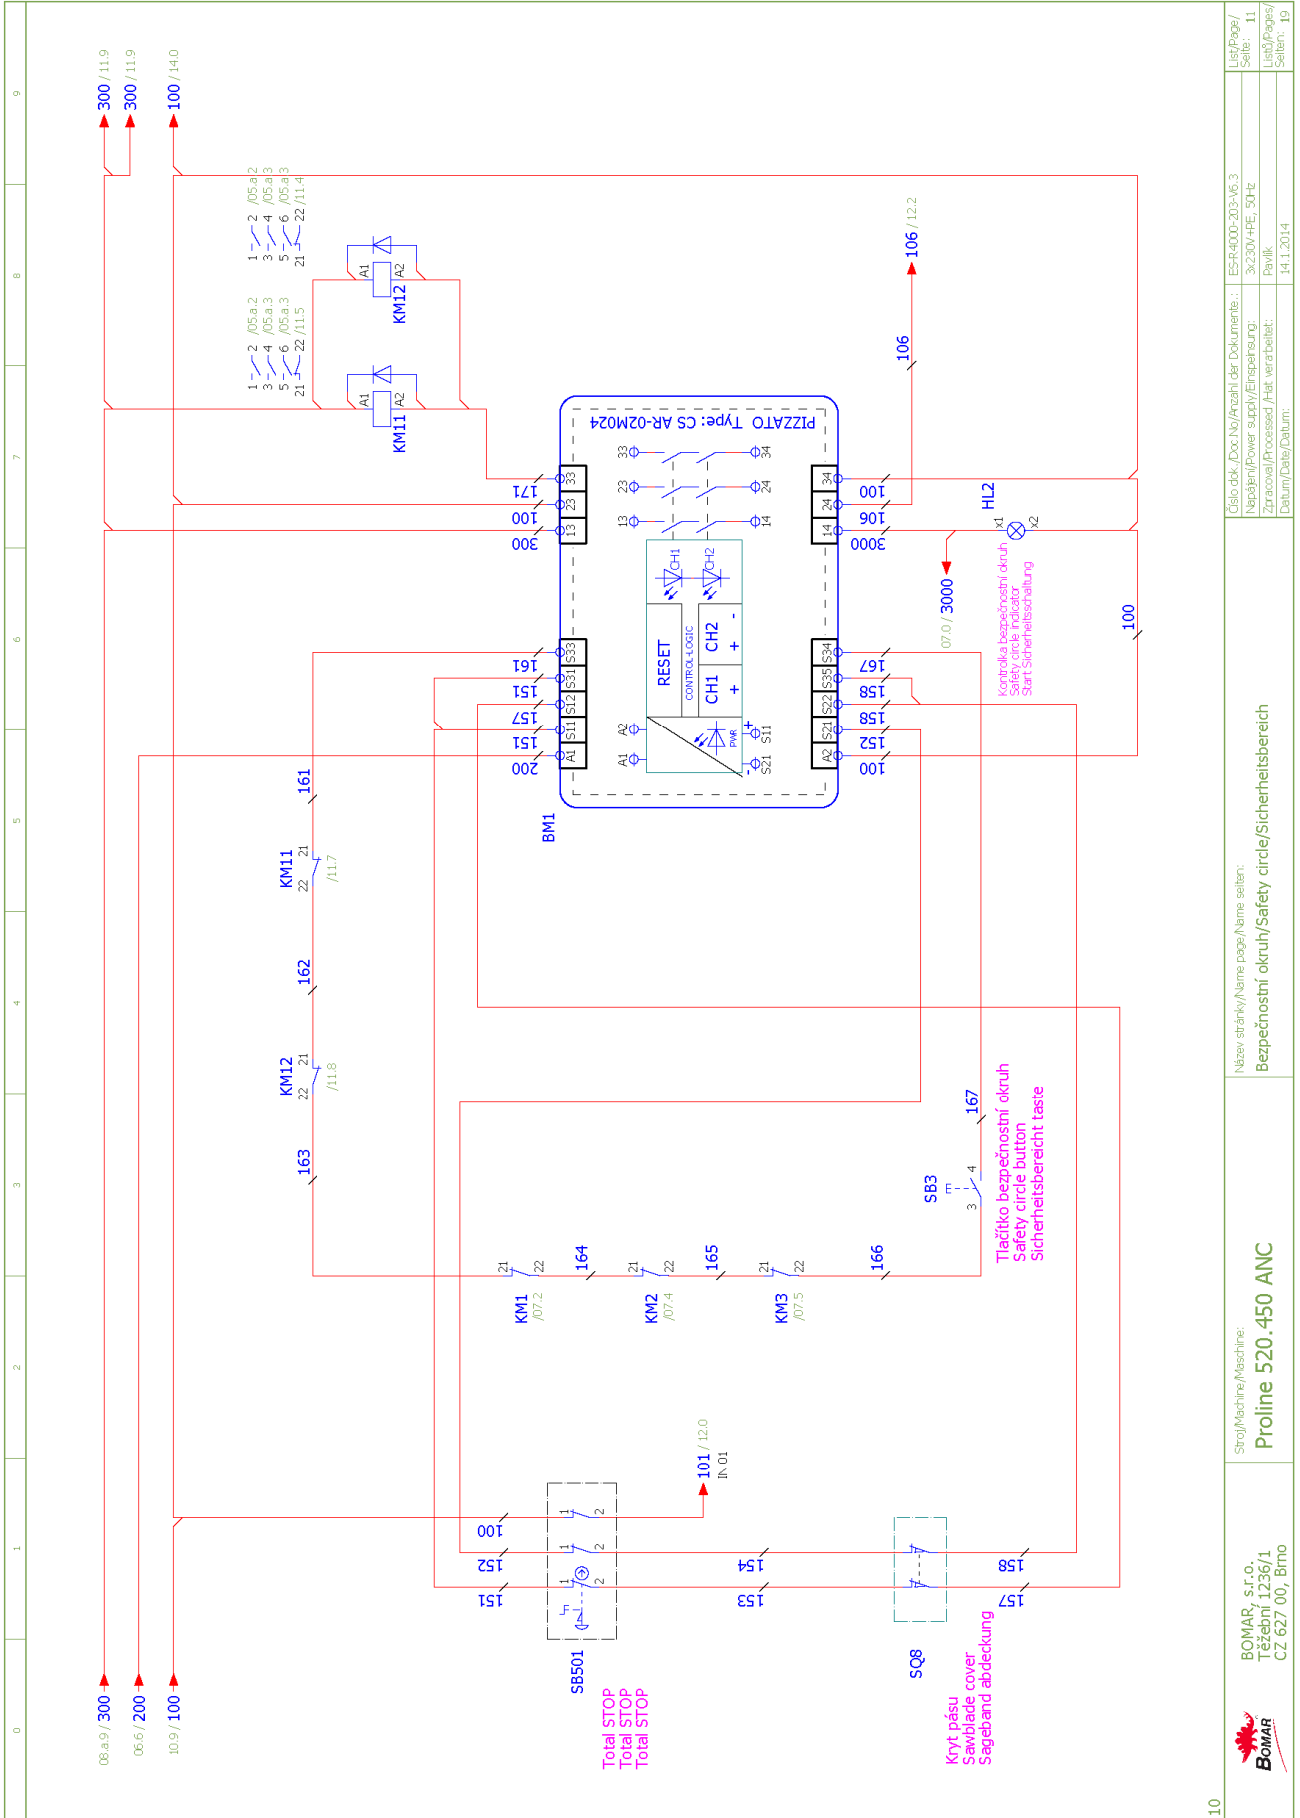


BOMAR, s.r.o. Třezbít 1236/1 CZ 627 00, Břmo	Stroj/Machine/Maschine: <b>Proline 520.450 ANC</b>	Název stránky/Name page/Name seiten: <b>Bezpečnostní okruh/Safety circle/Sicherheitsbereich</b>	Číslo dok./Doc.No./Anzahl der Dokumente.: ES4-400-203-V6.3	List/Page/ Seite: 11
			Napájení/Power supply/Einspeisung: 3x230V/4PE, 50Hz	List/Page/ Seite: 11
			Přírub./Flange/Flansch: 14.1.2014	List/Page/ Seite: 19
			Datum/Date/Datum:	List/Page/ Seite: 19



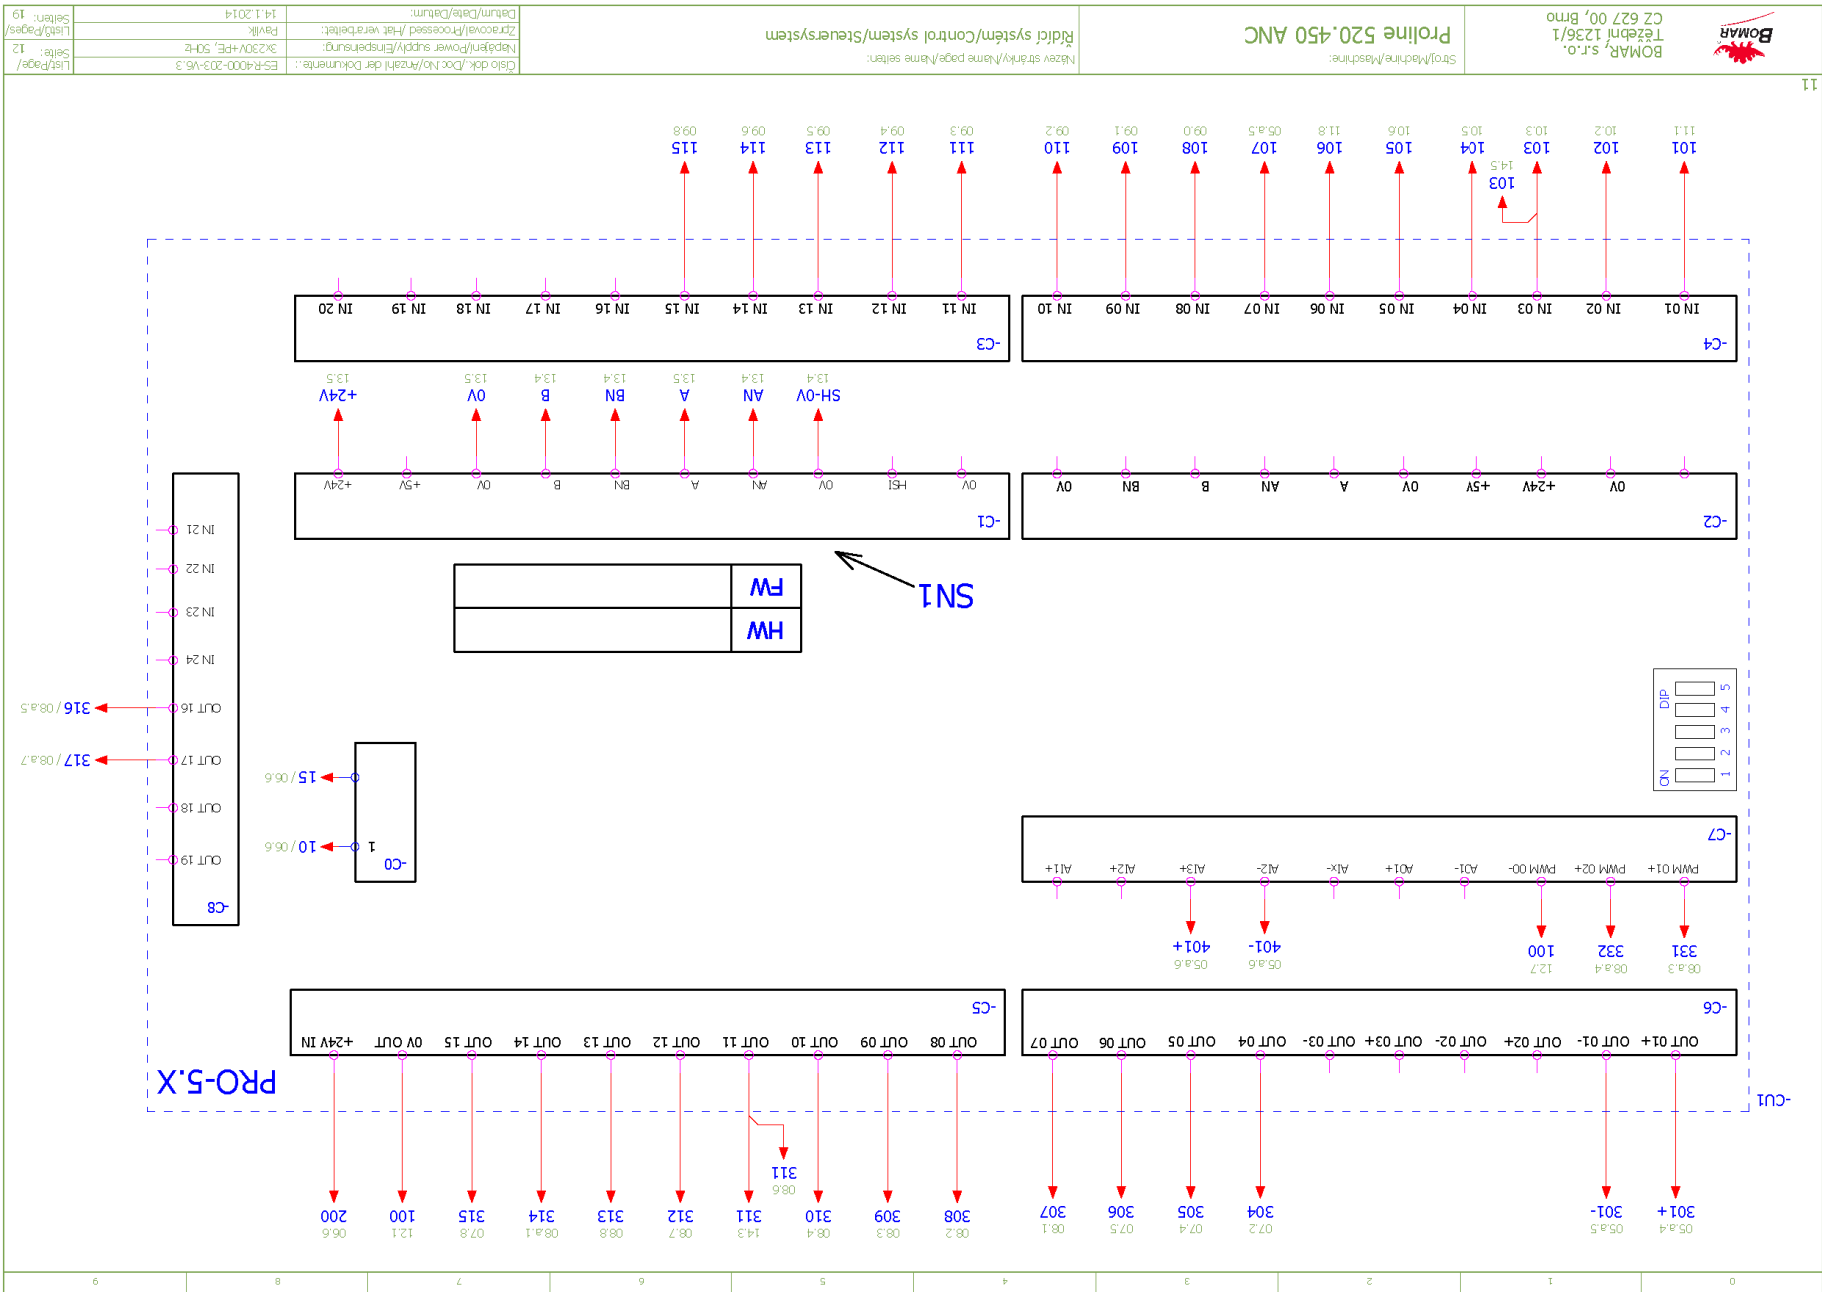


Strój/Machine/Maschine: Proline 520.450 ANC	Objekt/Projekt: CZ 627 00, Bmo
Název stránky/Name page/Name section: Řídicí systém/Control system/Steuersystem	BOMAR, s.r.o. Těšební 1236/1 672 00, Bmo
Dle dok./Doc No./Arzahl der Dokumente.: ES-R4000-20-3-05.3	
Název/Power supply/Einspeisung: 3x230V+PE, 50Hz	
Zpracovatel/Processed/Arbeit verfertigt: Pwilk	
Verf./Pages/Seiten: 12	
Datum/Dater/Datum: 14.1.2014	
Verf./Page/Seiten: 19	

0	1	2	3	4	5	6	7	8	9																															
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: left;">SN1</th> <th colspan="8" style="text-align: left;">Kabel HELU-Flexi 7x0.14</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;"><b>+</b></td> <td>HNĚDÁ BROWN BRAUN</td> <td>HNĚDÁ+MODRÁ BROWN+BLUE BRAU+BLAU</td> </tr> <tr> <td style="text-align: center;"><b>-</b></td> <td>BÍLÁ WHITE WEISS</td> <td>HNĚDÁ/BÍLÁ+MODRÁ/BÍLÁ BROWN/WHITE+BLUE/WHITE BRAUN/WEISS+BLAU/WEISS</td> </tr> <tr> <td style="text-align: center;"><b>A</b></td> <td>ZELENÁ GREEN GRÜN</td> <td>ZELENÁ GREEN GRÜN</td> </tr> <tr> <td style="text-align: center;"><b>AN</b></td> <td>FIALOVÁ VIOLET VIOLET</td> <td>ZELENÁ/BÍLÁ GREEN/WHITE GRÜN/WEISS</td> </tr> <tr> <td style="text-align: center;"><b>B</b></td> <td>ŽLUTÁ YELLOW GELB</td> <td>ORANŽOVÁ ORANGE ORANGE</td> </tr> <tr> <td style="text-align: center;"><b>BN</b></td> <td>ORANŽOVÁ ORANGE ORANGE</td> <td>ORANŽOVÁ/BÍLÁ ORANGE/WHITE ORANGE/WEISS</td> </tr> <tr> <td></td> <td>ČERNÁ BLACK SCHWARZ</td> <td>STÍNĚNÍ SHIELD LEITUNGSSCHIRM</td> </tr> </tbody> </table>										SN1		Kabel HELU-Flexi 7x0.14								<b>+</b>	HNĚDÁ BROWN BRAUN	HNĚDÁ+MODRÁ BROWN+BLUE BRAU+BLAU	<b>-</b>	BÍLÁ WHITE WEISS	HNĚDÁ/BÍLÁ+MODRÁ/BÍLÁ BROWN/WHITE+BLUE/WHITE BRAUN/WEISS+BLAU/WEISS	<b>A</b>	ZELENÁ GREEN GRÜN	ZELENÁ GREEN GRÜN	<b>AN</b>	FIALOVÁ VIOLET VIOLET	ZELENÁ/BÍLÁ GREEN/WHITE GRÜN/WEISS	<b>B</b>	ŽLUTÁ YELLOW GELB	ORANŽOVÁ ORANGE ORANGE	<b>BN</b>	ORANŽOVÁ ORANGE ORANGE	ORANŽOVÁ/BÍLÁ ORANGE/WHITE ORANGE/WEISS		ČERNÁ BLACK SCHWARZ	STÍNĚNÍ SHIELD LEITUNGSSCHIRM
SN1		Kabel HELU-Flexi 7x0.14																																						
<b>+</b>	HNĚDÁ BROWN BRAUN	HNĚDÁ+MODRÁ BROWN+BLUE BRAU+BLAU																																						
<b>-</b>	BÍLÁ WHITE WEISS	HNĚDÁ/BÍLÁ+MODRÁ/BÍLÁ BROWN/WHITE+BLUE/WHITE BRAUN/WEISS+BLAU/WEISS																																						
<b>A</b>	ZELENÁ GREEN GRÜN	ZELENÁ GREEN GRÜN																																						
<b>AN</b>	FIALOVÁ VIOLET VIOLET	ZELENÁ/BÍLÁ GREEN/WHITE GRÜN/WEISS																																						
<b>B</b>	ŽLUTÁ YELLOW GELB	ORANŽOVÁ ORANGE ORANGE																																						
<b>BN</b>	ORANŽOVÁ ORANGE ORANGE	ORANŽOVÁ/BÍLÁ ORANGE/WHITE ORANGE/WEISS																																						
	ČERNÁ BLACK SCHWARZ	STÍNĚNÍ SHIELD LEITUNGSSCHIRM																																						
			Stroj/Machine/Maschine: <b>Proline 520.450 ANC</b>			Název stránky/Name page/Name seiten: <b>Odměrování/Remuneration/Abmessung</b>			Cílová čísla/Doc.No./Anzahl der Dokumente: : ES4-400-203-V6.3 Název/Power supply/Einspeisung: : 3x230V/4PE, 50Hz Použití/Processed /Htt. verarbeitet: PA1.2014																															
BOMAR, s.r.o. Těšební 1236/1 CZ 627 007, Brno			12			List/Page/ Seite: 13		List/Page/ Seiten: 19																																

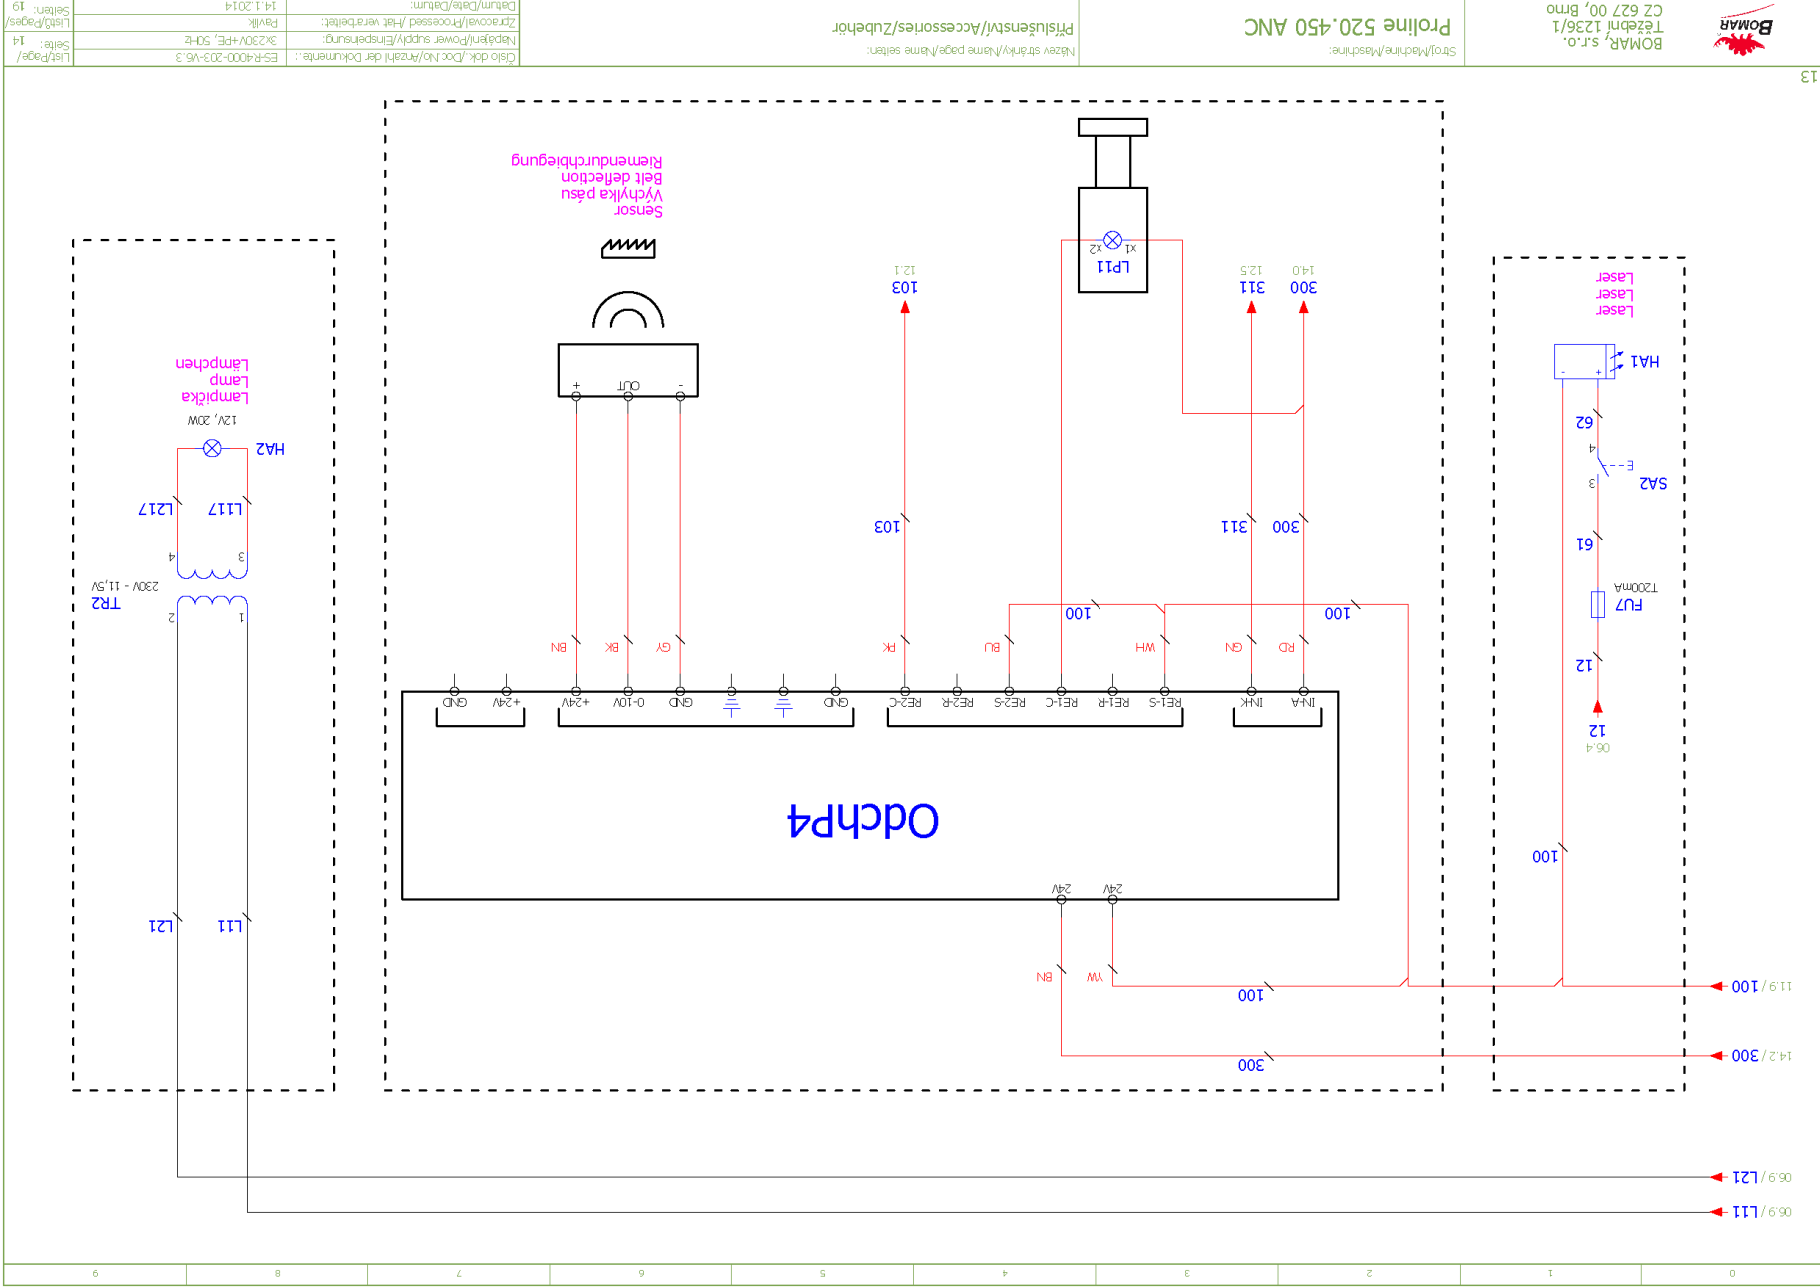

## 6.4. Hydraulické schéma / Hydraulikschema / Hydraulic diagram

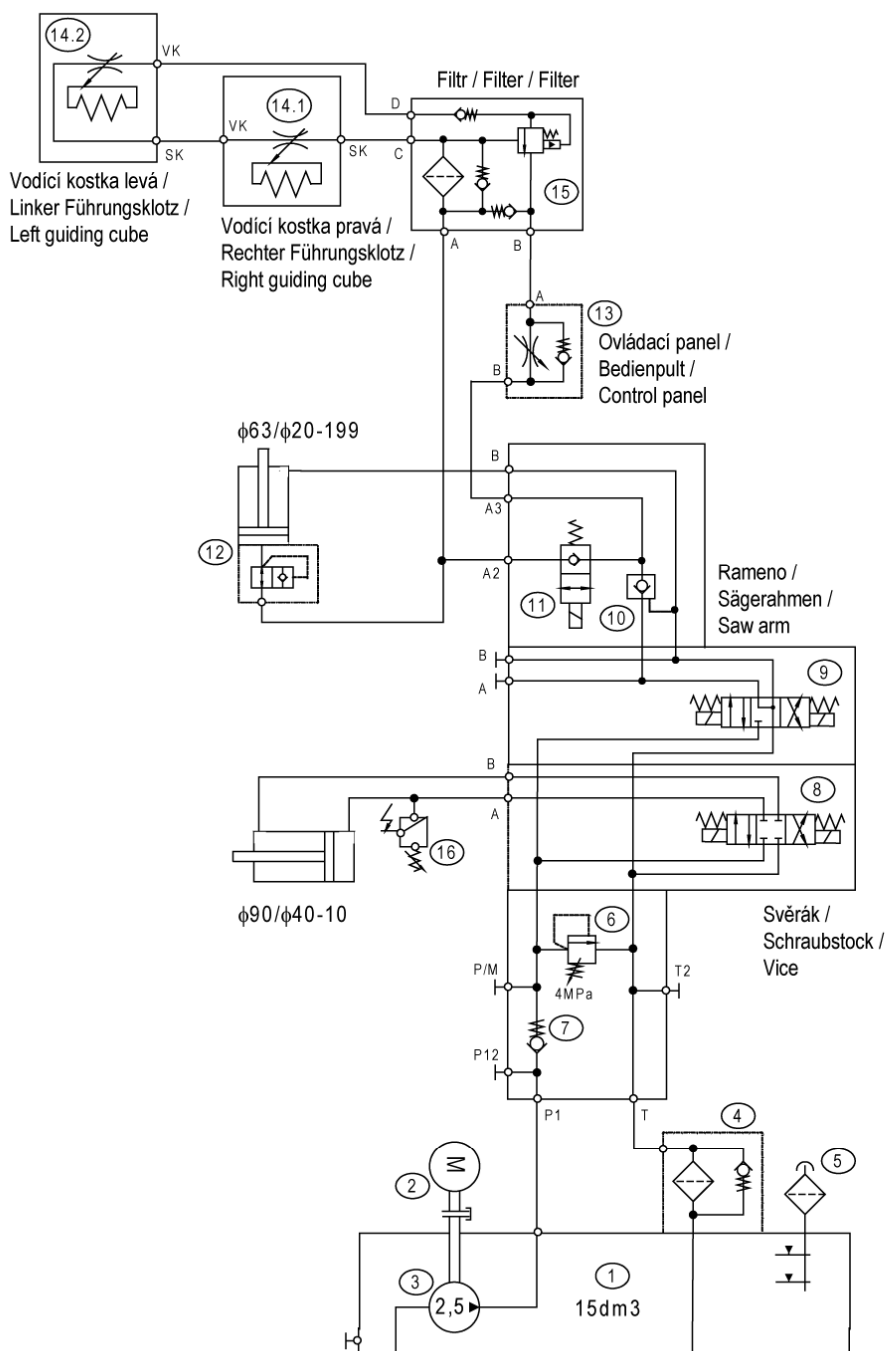

Základní technické parametry  
Technische Spezifikation  
Technical specification

205.M216-100

WORKLINE 280 var.: NH / GH / DGH

WORKLINE 350 var.: NH / GH / DGH

WORKLINE 450 var.: NH / GH / DGH

Typ / Type / Type	Workline 280, 350, 450 NH/GH/DGH
Hydraulický agregát / Hydroaggregat	205.M216-100
Hydro aggregat	
Neuvedené světlosti / Unerwähnt Lichtbreite	JS6
Unlisted inside diameters	
Výstupní šroubení / Ausgangsschraubung	G1/4"
Output screwing	
$P_{max}$	4 Mpa
Q	3,3 dm <sup>3</sup> /min
n	1400 ot./min
P	0,25 kW




Poz.	Název položky		ks
Pos.	Bezeichnung		Menge
Pos.	Item		Pcs.
1	Nádrž / Behälter / Tank	TM13,5/S 15 dm <sup>3</sup>	1
2	Elektromotor / Elektromotor / Electromotor	EM71 0,25kW/3B35 50 Hz, <1 A	1
3	Hydrogenerátor / Hydraulikgenerator / Hydrogenerator	10A2,5x053G 2,5 cm <sup>3</sup> /rpm	1
4	Ventil zpětný / Gegendruckventil / Clack-valve	MPF0301AG1	1
5	Nalévací zátka / Stopfen / Fill stopper	cPT-MD-FA/1	1
6	Přepouštěcí ventil / Bypašventil / By pass valve	SR1A-A/S10	1
7	Jednosměrný ventil / Einwegventil / One-way valve	SC1F-A2/H005	1
8	Rozváděč / Schaltschrank / Switchboard	RPEK1- 03G3Z11/02400E1K1	1
9	Rozváděč / Schaltschrank / Switchboard	RPEK1- 03G3Y11/02400E1K1	1
10	Hydraulický zámek / Hydraulisches Schloß / Hydraulic lock	RJV1-05-0	1
11	Rozváděč / Schaltschrank / Switchboard	SD3E- A2/S2L2+C13D- 02400E1K1	1
12	Pojistný ventil / Sicherungventil / Safety valve	VPNH ¼ 92.151.001	1
13	Škrťací ventil / Drosselventil / Throttle-valve	VS01-04/R2,5 92.152.001	1
14	Kostka regulace / Regulationklotz / Regulation cube	251.077	2/1
15	Block	92.153.005 729-0059	1/0
16	Tlakový spínač / Druckschalter / Pressure switch	0166415031059 20–50 bar	1




## **7. Výkresy sestav pro objednání náhradních dílů / Zeichnungen für Bestellung der Ersatzteile / Drawing assemblies for spare parts order**

- Při objednávání náhradních dílů vždy uvádějte: typ stroje (např. practix Proline 520.450 ANC) , výrobní číslo (např. 125) a rok výroby (např. 1999).
- In die Bestellung der Ersatzteile führen Sie immer an: Maschinentyp (z. B. Proline 520.450 ANC), Serien Nr. (z. B. 125) und Baujahr (z. B. 1999).
- For spare parts order, you must always to allege: type of machine (for example Proline 520.450 ANC), serial number (for example 125, see cover page) and year of construction (for example 1999).

## 7.1. Proline 520.450 ANC

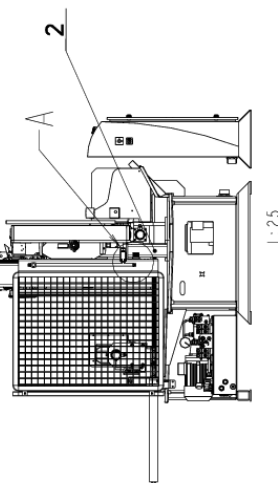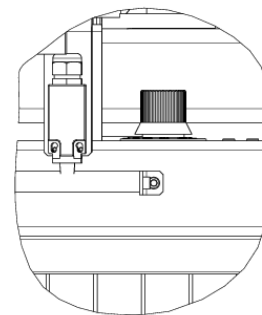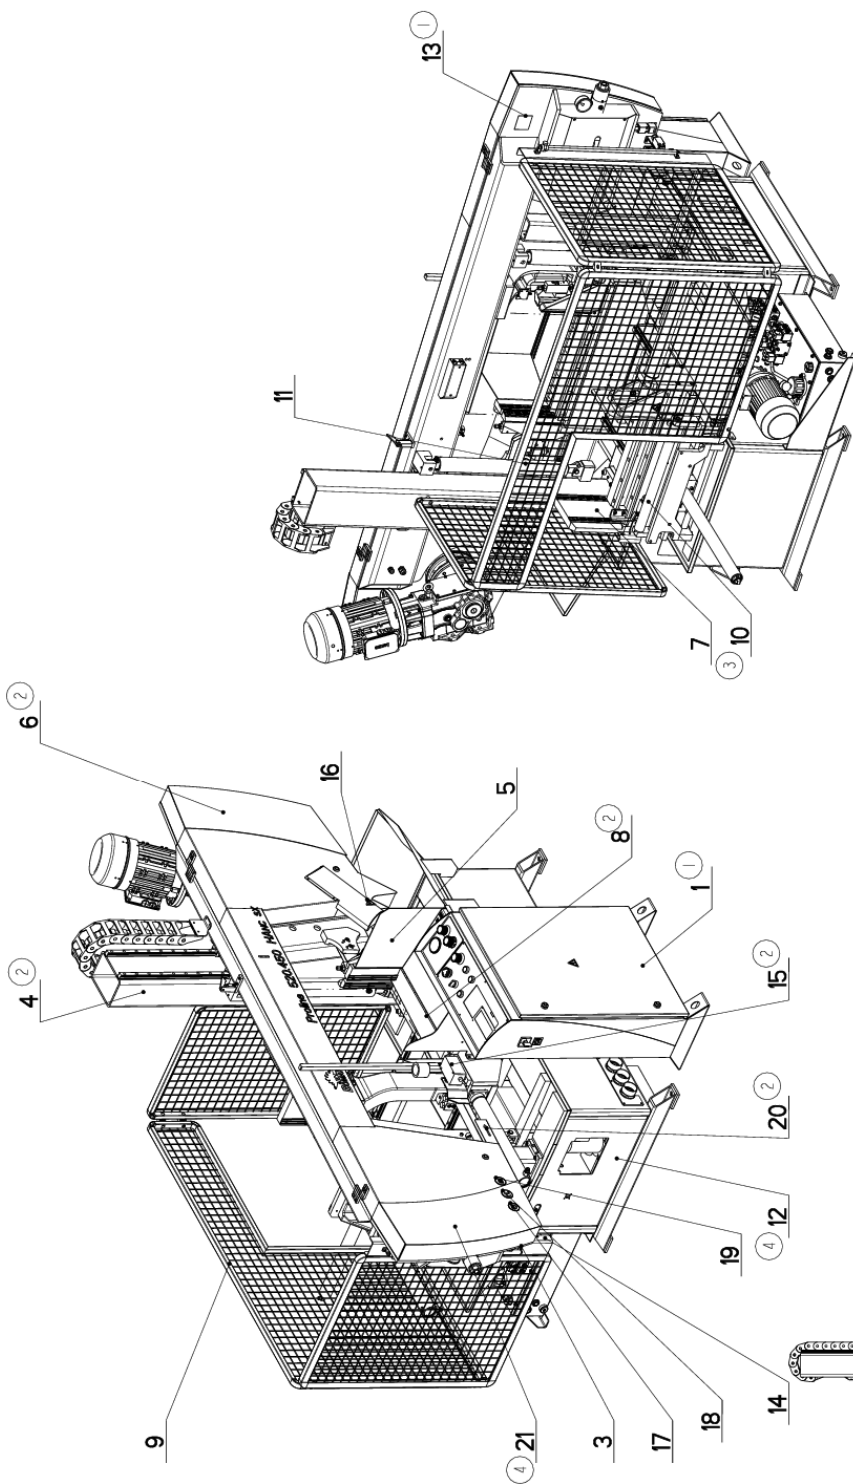

A  
3:10

NAZEV SESTAVY PILA PASOVA	CISLO SESTAVY 201.R400-000	STROJ PRL450
		Konstruoval: MUSIL
		Datum: 30. 03. 2012
		Meritko: 3:50



## 7.2. Kusovník / Piece list / Stückliste - Proline 520.450 ANC

Číslo Sestavy 201.R400-000		Ver. 4		Název sestavy PILA PASOVA/BAND SAW/BANDSÄGE	
Poz.	Objednací číslo	Ver.	Název položky	Rožmer	Ks
1	201.R230-200 (1)	2	OVĽADACÍ PANEL / CONTROL PANEL / BEDIENPULT		1
2	201.R402-020	0	SLOUP / POLE / SÄULE		1
3	201.R402-030	3	ODMEROVANI / POLE / SÄULE		1
4	201.R402-050 (2)	0	SLOUP / POLE / SÄULE		1
5	201.R403-000	3	SVERAK / VICE / SCHRAUBSTOCK		1
6	201.R404-100 (2)	3	RAMENO / SAW ARM / SÄGERARMEN		1
7	201.R411-000	3	PODAVAC / FEEDER / VORSCHUB		1
8	201.R412-050 (2)	0	TRAT / TRACK / BAHN		1
9	201.R414-020	1	PLOT / FENCE / ZAUN		1
10	201.R414-250 (3)	0	VALEC POMOCNY / AUXILIARY CYLINDER / HILFSZYLINDER		1
11	201.Y407-010	3	VALEC ZVEDACI / LIFTING CYLINDER / HEBEZYLINDER		2
12	221.R401-100 (4)	0	PODSTAVEC / BASE / UNTERSATZ		1
13	30.R499-001 (1)	0	STITEK TYPOVY / MACHINE LABEL / MASCHINE SCHILD	P 0.5x65	1
14	92.001.070	0	AGREGAT HYDRAULICKY / HYDRAULIC GENERATOR / HYDRAUL MAGGREGAT	FMV	1
15	99.900.039 (2)	0	SAMOLEPKA / STICKER / AUFLEBER	NEBEZP.-STLACENI	2
16	99.900.040	0	SAMOLEPKA / STICKER / AUFLEBER		1
17	99.900.047	0	SAMOLEPKA / STICKER / AUFLEBER		1
18	99.900.048	0	SAMOLEPKA / STICKER / AUFLEBER		1
19	99.900.049	0	SAMOLEPKA / STICKER / AUFLEBER		1
20	99.900.053 (2)	0	SAMOLEPKA / STICKER / AUFLEBER		1
21	99.901.048 (4)	1	SAMOLEPKA / STICKER / AUFLEBER		1


1.ZRUS.OVADACI PANEL 201.R230-000 A NAHR.201.R230-200,PRIDAN STITEK TYPOVY 30.R499-001. 198/ZM242 SLEZACKOVA

2.ZRUS.RAMENO 201.R404-000 A NAHR. 201.R404-100,ZRUS.PODSTAVEC 201.R401-000 A NAHR.201.R401-050,ZRUS.SLOUP 201.R402-010 A NAHR.201.R402-050,ZRUS.TRAT 201.R412-000 A NAHR.201.R412-050,PRID.SAMOLEPKY 2x99.900.039,1x99.900.053. 219,025/ZM301,029 7.2.2012 SLEZACKOVA

3.PRIDAN POMOCNY VALEC 201.R414-250. 074/ZM111 30.3.2012 SLEZACKOVA

4.ZRUS.PODSTAVEC 201.401-050 A NAHR.221.R401-100,ZRUS.SAMOLEPKA 99.901.039 A NAHR.99.901.048. 303,287/ZM006 26.9.2013 SLEZACKOVA

### 7.3. Ovladací panel / Control panel / Bedienpult

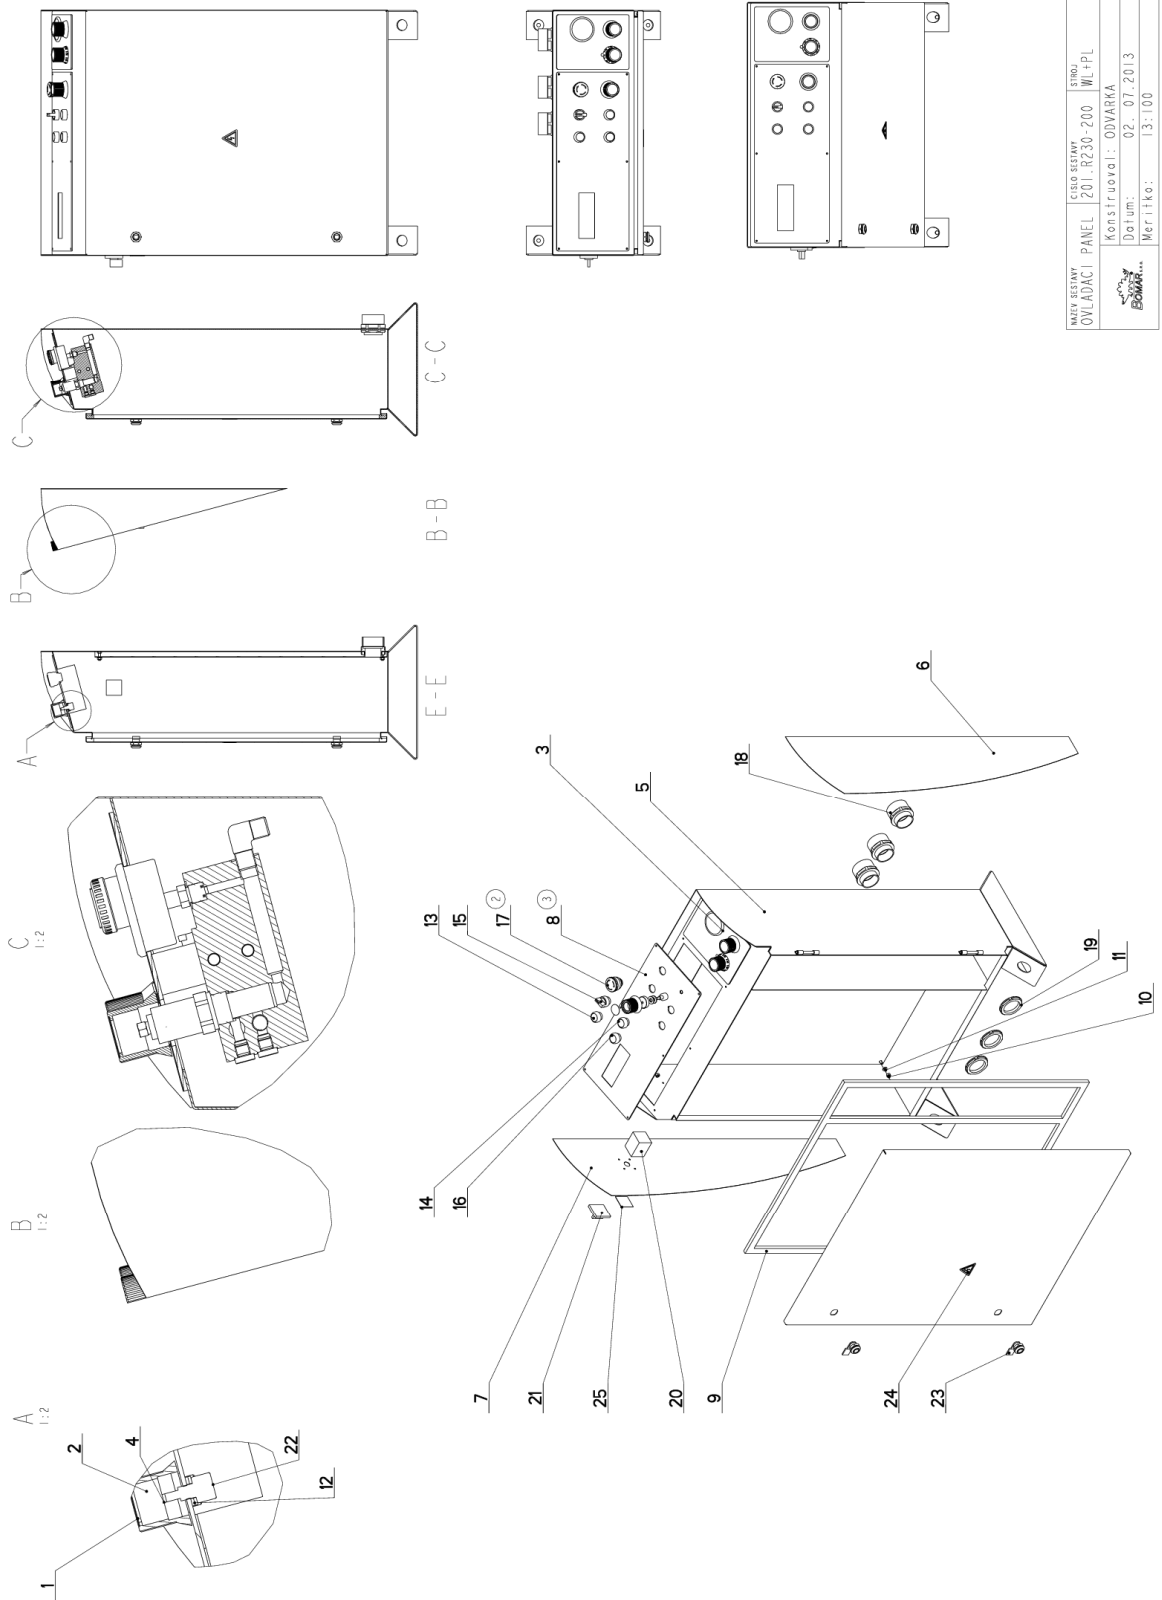

NAZEV STAVBY OVLADACÍ PANEĽ	ČÍSLO STAVBY 201.R230-200	STUPEŇ III+PL
Konstruoval: ODVARKA		Datum: 02. 07. 2013
Meriliko: 13:100		

## 7.4. Kusovník / Piece list / Stückliste - Ovladací panel / Control panel / Bedienpult

Císlo Sestavy 201.R230-200		Ver. 3		Název sestavy OVLADACÍ PANEL/CONTROL PANEL/BEDIENPULT	
Poz.	Objednací číslo	Ver.	Název položky	Rozebr	Ks
1	30.61.30-012	0	VÍKO / COVER / DECKEL	P 0.5x 30x30	3
2	31.61.30-008	0	HLAVICE / HEAD / KOPF		1
3	201.R230-220	1	OVLADACÍ PANEL / CONTROL PANEL / BEDIENPULT		1
4	30.R230-010	0	MEZIKUS / INTERMEDIATE PIECE / PASSSTÜCK	d 32	1
5	30.R230-201	3	SKRIN / BOX / KASTEN		1
6	30.R230-204	0	PLECH / PLATE / BLECH	P 1x220	1
7	30.R230-206	1	PLECH / PLATE / BLECH	P 1x220	1
8	31.R230-207 (2)	0	PANEL ELEKTRO / ELECTRO PANEL / PANEL	P 3x205	1
9	61.352.001	0	TESNENÍ / SEALING / DICHTUNG	TESNENÍ 19x10	1
10	90.100.55.004	0	MATICE / NUT / MUTTER	MATICE - M6	4
11	90.150.50.004	0	PODLOŽKA / WASHER / UNTERLEGSCHIEBE	PODLOŽKA 6,4	4
12	90.150.50.006	0	PODLOŽKA / WASHER / UNTERLEGSCHIEBE	PODLOŽKA 10,5	2
13	91.060.031	0	HLAVICE / HEAD / KOPF		1
14	91.060.035	0	HLAVICE / HEAD / KOPF		1
15	91.060.051	0	PREPINAC / SWITCH / UMSCHALTER		1
16	91.060.053	0	HLAVICE / HEAD / KOPF		1
17	91.060.084 (2)	0	HLAVICE TOTAL STOP / TOTAL STOP HEAD / TASTE TOTAL STOP		1
18	91.071.022	0	VYVODKA / BUSHING / TÜLLE		3
19	91.072.016	0	MATICE / NUT / MUTTER		3
20	91.170.003	0	SPINAC VAKOVY / CAM SWITCH / SCHALTER	LEZ-12-1763	1
21	91.180.001	0	DESKA SPINACE / ELECTRIC BOARD / PLATINE		1
22	91.283.015	0	POTENCIOMETR / POTENTIOMETER / POTENTIOMETER	TP 195 4K7/N 20A	1
23	99.104.002	0	ZAMEK / LOCK / SCHLOSS	ZAMEK CINSKY	2
24	99.900.045	0	SAMOLEPKA / STICKER / AUFLEBER		1
25	99.900.046	0	SAMOLEPKA / STICKER / AUFLEBER		1


1.-ZRUS.VÍKO 30.R230-203,PANEL 30.R230-202,2xCEP 30.7217-028,2XPOJ.KROUZEK 95.802.003 (PRIDANO DO SKRINE 30.R230-201).  
061/ZM110 29.3.2012 SLEZACKOVA


2.-ZRUS.HLAVICE TOTAL STOP 91.060.030 A NAHR.91.060.084 147/ZM184 2.7.2013 SLEZACKOVA

3.-ZRUS.SOUCASTI 30.R230-207 A 31.R330-003 A NAHR.31.R230-207. 007/ZM021 4.2.2014 SLEZACKOVA

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version); Název sestavy/Assembly title/Name der Baugruppe; Pozice (Pos./Position/Position);  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozebr/Stock size/Abmessung

## 7.5. Ovladací panel / Control panel / Bedienpult

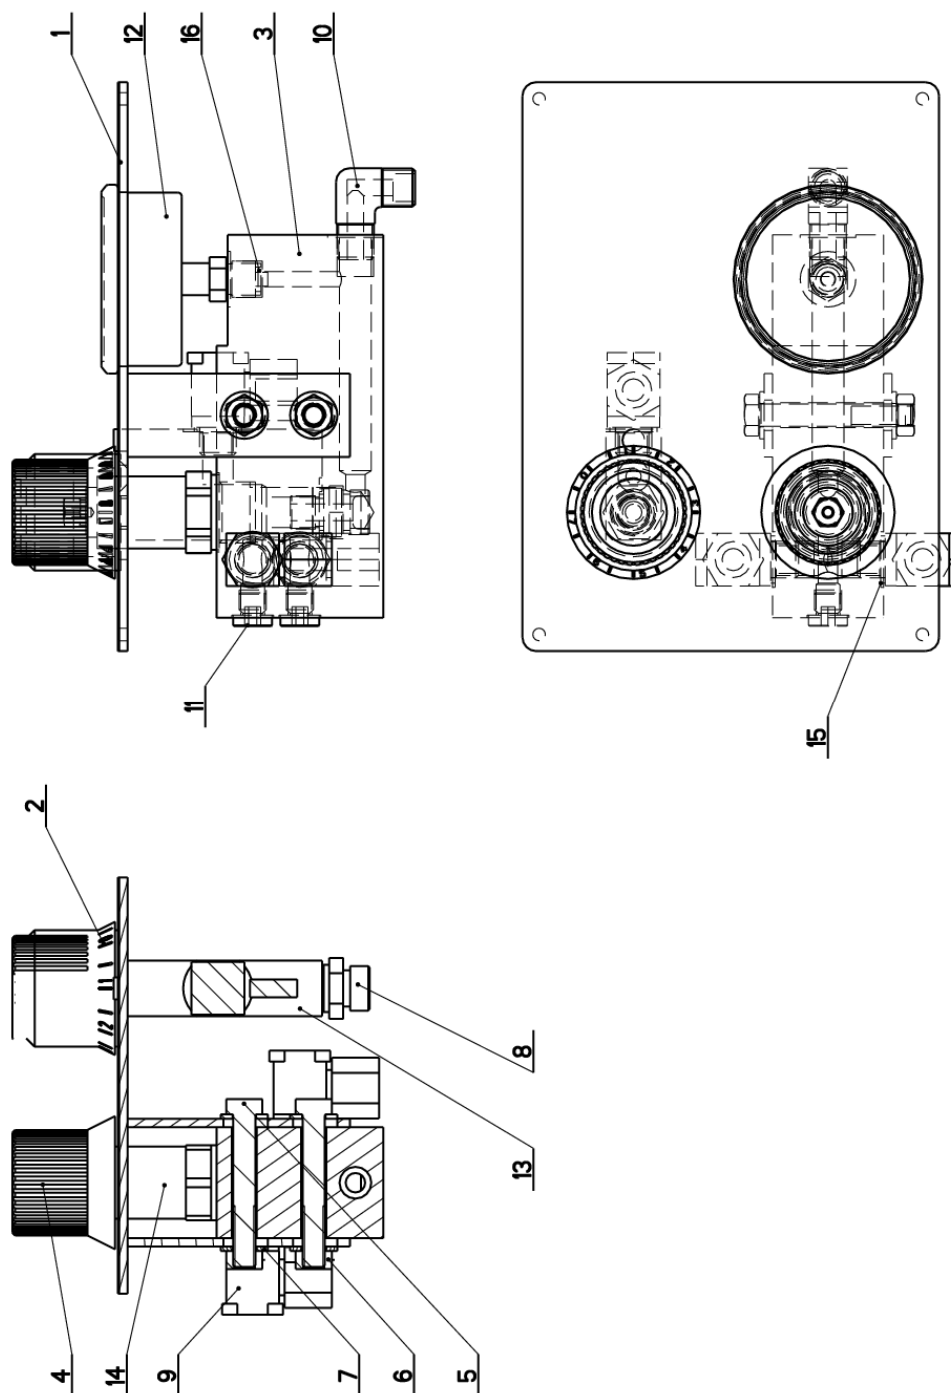


MAZEV SESTAVY OVLADACÍ PANEĽ	CÍSLO SESTAVY 201.R230-220	STROJ PL, EX, IN
	Konstruoval: ODVARKA	Datum: 05. 04. 2012
	Meritko: 7:10	

## 7.6. Kusovník / Piece list / Stückliste - Ovladačí panel / Control panel / Bedienpult

Císlo sestavy 201.R230-220		Ver. 1		Název sestavy OVLADACÍ PANEL/CONTROL PANEL/BEDIENPULT	
Poz.	Objednací číslo	Ver.	Název položky	Rozev	Ks
1	251.652	0	PANEL / PANEL / PANEL		1
2	30.6130-018	0	HLAVICE / HEAD / KOPF	VYLISEK	1
3	30.6130-103	2	KOSTKA REGULACE / REGULATION CUBE / REGULUNGSWÜRFEL	TYC 60x40	1
4	31.6130-008	0	HLAVICE / HEAD / KOPF		1
5	90.005.55.064	0	SROUB 6HRANNÝ / 6 SIDED BOLT / SECHSKANTSCHRAUBE	SROUB M8x55	2
6	90.100.55.005	0	MATICE / NUT / MUTTER	MATICE - M8	2
7	90.150.50.005	0	PODLOZKA / WASHER / UNTERLEGSCHIBE	PODLOZKA 8,4	4
8	92.002.103	0	SROUBENÍ PRÍME / DIRECT BOLTING / GERADE VERSCHRAUBUNG	G 1/4" 1r12	1
9	92.003.001	0	SROUBENÍ UHLÖVE / ANGLE BOLTING / WINKELVERSCHRAUBUNG	P-RSMS-08LR	3
10	92.004.001	0	SROUBENÍ UHLÖVE / ANGLE BOLTING / WINKELVERSCHRAUBUNG	37701	1
11	92.019.003	0	ZATKA / PLUG / STOPFEN	G1/4" VNITRNI IMBUS	2
12	92.080.002	0	MANOMETR / MANOMETER / MANOMETER	d 63 - 60bar	1
13	92.152.001	0	VENTIL SKRTICI / CHOKE VALVE / DROSSELVENTIL	VS01-04/R 2.5-0	1
14	92.154.001	0	VENTIL REDUKCNI / REDUCTION VALVE / DRUCKMINDERUNGSVENTIL		1
15	96.082.002	0	TESNENI / SEALING / DICHTUNG	KROUZEK CU 13/17	4
16	96.082.005	0	KROUZEK TESNICI / SEAL RING / DICHTUNGSRING	5x8.8x1	2

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position;  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozev/Stock size/Abmessung

## 7.7. Sloup / Pole / Säule

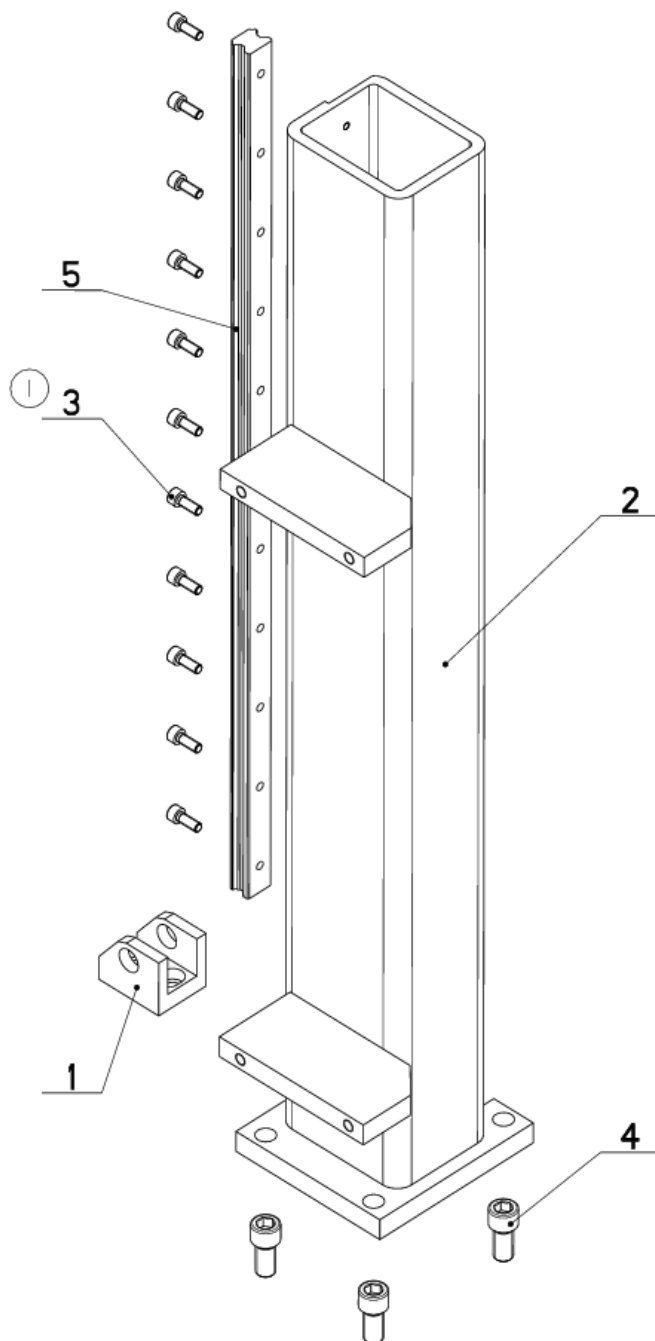

NAZEV SESTAVY SLOUP	CISLO SESTAVY 201.R402-020	STROJ PRL 450
	Konstruoval: MUSIL	
	Datum: 23. 01.2015	
	Meritko: 3:10	


## 7.8. Kusovník / Piece list / Stückliste - Sloup / Pole / Säule


Císlo Sestavy 201.R402-020		Ver. 1		Název sestavy SLOUP/POLE/SÄULE	
Poz.	Objednací číslo	Ver.	Název položky	Rozeřer	Ks
1	30.0807-008	3	DRZAK / HOLDER / HALTER	HR 40x40	1
2	30.R402-021	3	SLOUP / POLE / SÄULE		1
3	90.001.25.017 (1)	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M6x16	11
4	90.001.25.057	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M12x25	4
5	99.200.207	0	VEDENÍ LINEARNI / LINEAR GUIDE / LINEARE FUHRUNG	MSA20R 640-20/20 N	1

1...PRIDAN 11xSROUB M6x16(90.001.25.017). 236/ZM010 23.1.2015 SLEZACKOVA

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Pos./Position/Position;  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozeřer/Stock size/Abmessung

## 7.9. Odměrování / Pole / Säule

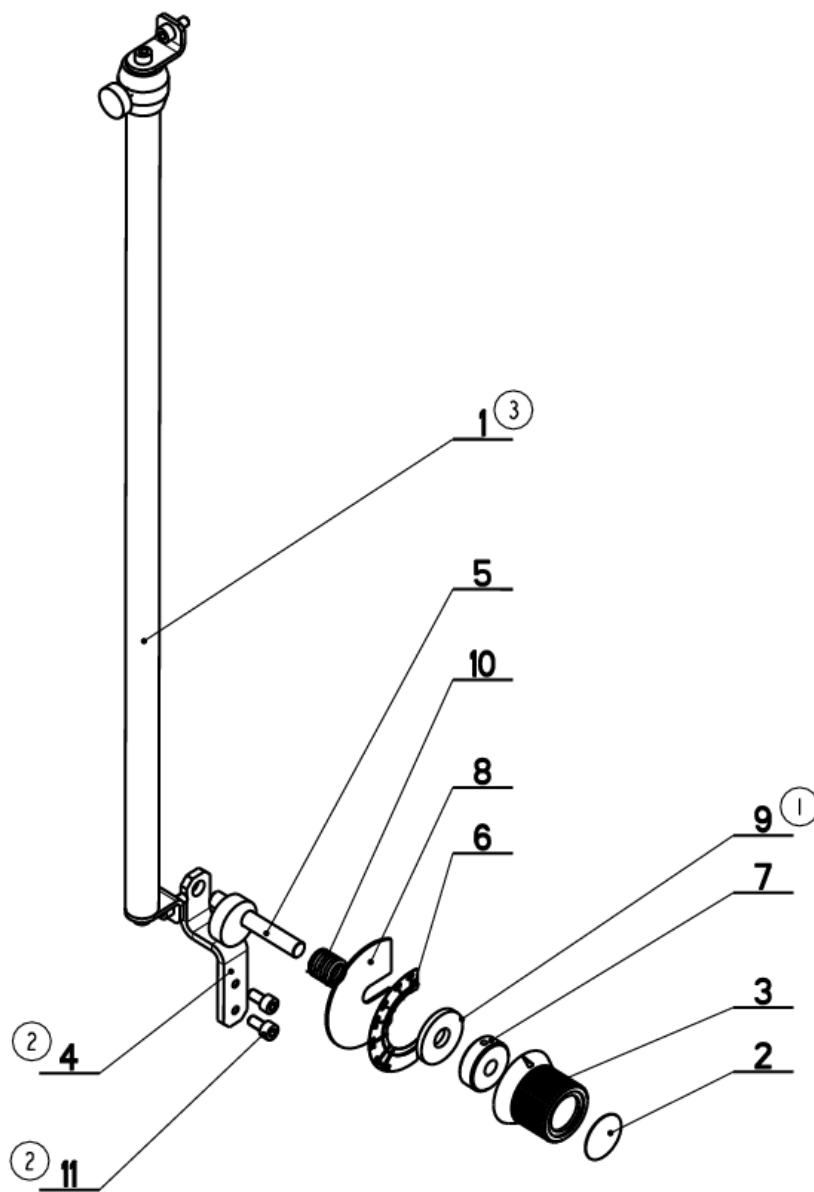

NAZEV SESTAVY ODMEROVANI	CISLO SESTAVY 201.R402-030	STROJ PR450
	Konstruoval: VINOHRADSKY	
	Datum: 18. 09.2012	
	Meritko: 3:10	



## 7.10. Kusovník / Piece list / Stückliste - Odměrování / Pole / Säule

Císlo Sestavy 201.R402-030		Ver. 3		Název sestavy ODMEROVÁNÍ / POLE / SÄULE	
Poz.	Objednací číslo	Ver.	Název položky	Rozebr	Ks
1	201.Y502-070 (3)	1	ODMEROVÁNÍ / MEASURING / GEHRUNGSMESSUNG	SESTAVA	1
2	30.6130-012	0	VÍKO / COVER / DECKEL	P 0.5x 30x30	1
3	30.6130-020	0	OVLADÁNÍ / CONTROLS / STEUERUNG	VYLÍSEK	1
4	30.R202-031 (2)	0	DRŽÁK / HOLDER / HALTER	HR 20x5	1
5	30.R202-033	1	OSA / AXLE / Achse	SVARENO	1
6	30.R402-034	0	STUPNICE / SCALE / SKALA	PIx41	1
7	30.Y302-058	1	VLOŽKA / INSERT / EINLAGE	d 32	1
8	30.Y302-153	0	PODLOŽKA / WASHER / UNTERLEGSCHIBE	PI.5-72	1
9	31.K107-006 (1)	1	GUMA / RUBBER / GUMMI	d35	1
10	31.T302-054	0	PRUŽINA / SPRING / FEDER	d 2.24	1
11	90.001.25.016 (2)	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M6x12	2


1. ZRUS.GUMA 30.Y302-157 A NAHR.31.K107-006. 125/ZMI41 10.6.2011 SLEZACKOVA  
 2. PRIDAN DRZAK 30.R202-031 A 2xSROUB M6x12 (90.001.25.016) . 168/ZM229 29.8.2011 SLEZACKOVA  
 3. ODMEROVANI 201.Y402-070 NAHRAZENO 201.Y502-070,196/ZM246,25.8.2012,KUDLACEK

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Pos./Position/Position;  
 Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

## 7.11. Odměrování / Measuring / Gehungsmessung

Cislo Sestavy 201.Y502-070		Ver. 0		Název sestavy ODMĚROVÁNÍ / MEASURING / GEHRUNGSMESSUNG	
Poz.	Objednací číslo	Ver.	Název položky	Rozev.	Ks
1	30.2014-001	0	OBJIMKA / CLAMP / KLAMMERSTÜCK	Ø 30-32	1
2	30.6114-023	0	DRŽAK / HOLDER / HALTER	P 3x20	2
3	30.Y502-071	1	TYC ODMER. / /	d 20	1
4	90.001.25.092	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M6x14	4
5	94.007.001	0	SROUB / BOLT / SCHRAUBE	M5x10	1
6	99.120.002	0	PRAVITKO / RULER / SKALENBANDMAß		1

I. PRIDANO PRAVITKO 99.120.002 . 138/ZMI44 19.5.2010 SLEZACKOVA

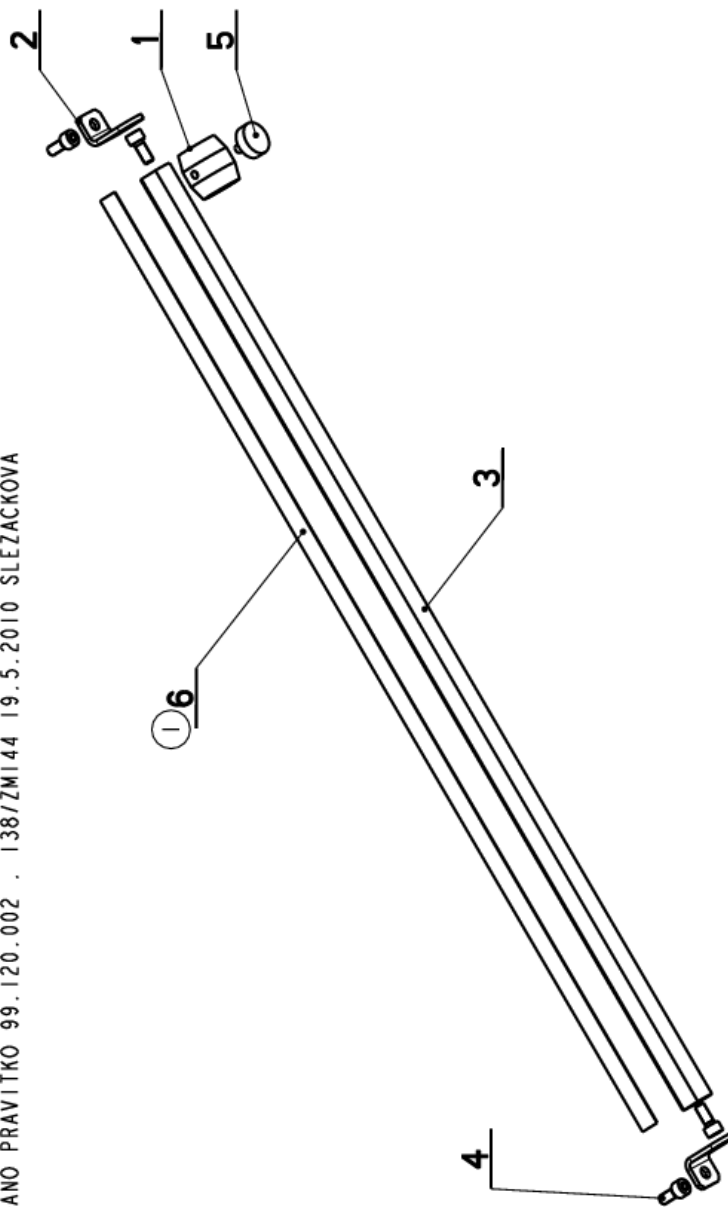


3:10

Cislo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position;  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozev./Stock size/Abmessung



## 7.12. Sloup / Pole / Säule

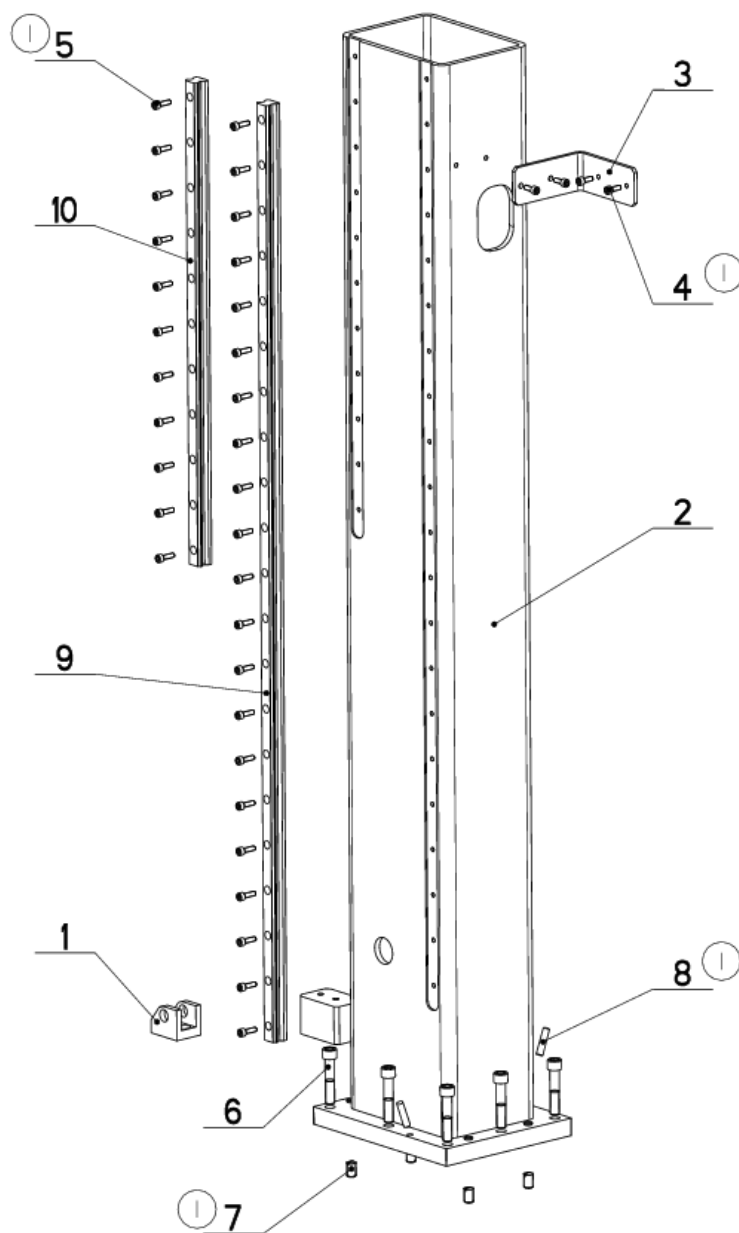

NAZEV SESTAVY SLOUP	CISLO SESTAVY 201.R402-050	STROJ PRL 450
	Konstruoval: MUSIL	
	Datum: 26. 01.2015	
	Meritko: 7:50	


### 7.13. Kusovník / Piece list / Stückliste - Sloup / Pole / Säule


Císlo sestavy 201.R402-050		Ver. 1		Název sestavy SLOUP/POLE/SÄULE	
Poz.	Objednací číslo	Ver.	Název položky	Rozev	Ks
1	30.0807-008	3	DRZAK / HOLDER / HALTER	HR 40x40	1
2	30.R402-051	2	SLOUP / POLE / SÄULE		1
3	30.Y404-005	0	DRZAK / HOLDER / HALTER	P. 5x50	1
4	90.001.25.017 (1)	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M6x16	4
5	90.001.25.018 (1)	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M6x20	32
6	90.001.25.063	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M12x60	8
7	90.002.20.018 (1)	0	SROUB STAVECI / ADJUSTMENT BOLT / STELLSCHRAUBE	SROUB M12x20	4
8	90.302.02.003 (1)	0	KUZEL. KOLIK S ZAV. / TAPER PIN + THREAD / KEGELBOLZEN + GEWINDE	KOLIK 8x36	2
9	99.200.205	0	VEDENÍ LINEARNÍ / LINEAR GUIDE / LINEARE FÜHRUNG	MSA25R 1240-20/20 N	1
10	99.200.206	0	VEDENÍ LINEARNÍ / LINEAR GUIDE / LINEARE FÜHRUNG	MSA25R 640-20/20 N	1

1.PRID.4xSROUB M6x16(90.001.25.017).32xSROUB M6x20(90.001.25.018),4xSROUB STAVECI M12x20(90.002.20.018),  
2xKOLIK 8x36(90.302.02.003). 236/ZM010 26.1.2015 SLEZACKOVA

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Pos./Position/Position;  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozev/Stock size/Abmessung

## 7.14. Svěrák / Vice / Schraubstock

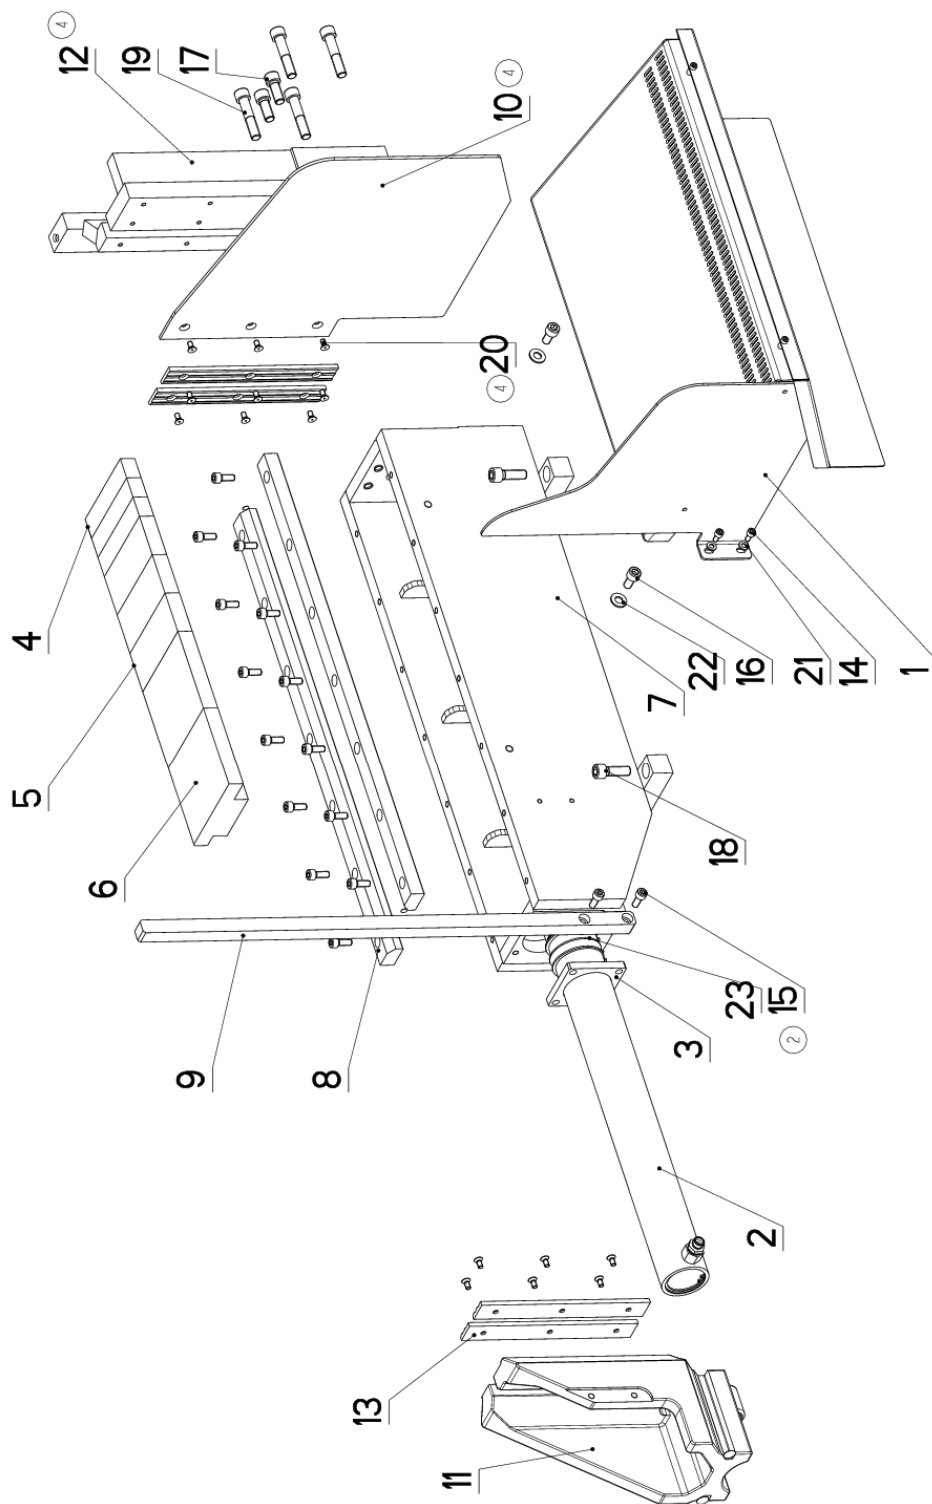

NAZEV SESTAVY SVĚRÁK	CÍSLO SESTAVY 201.R403-000	STROJ PRL450
		Konstruoval: MUSIL
		Datum: 08. 12. 2014
		Meritko: 1:5

## 7.15. Kusovník / Piece list / Stückliste - Svěrák / Vice / Schraubstock

Císlo Sestavy 201. R403-000		Ver. 4		Název sestavy SVĚRÁK / VICE / SCHRAUBSTOCK	
Poz.	Objednací číslo	Ver.	Název položky	Rožmer	Ks
1	201. R403-050	1	SKLUZ / SLIDE / RUTSCH		1
2	201. R407-030	0	VALEC SVĚRÁKU / VICE CYLINDER / SCHRAUBSTOCKZYLINDER		1
3	30. 2011-010	0	PRÍLOŽKA / STRAP / LASCHE	HR 80x10	1
4	30. R303-016	1	VLOŽKA / INSERT / EINLAGE	HR 40x30	3
5	30. R303-017	1	VLOŽKA / INSERT / EINLAGE	TYC 60x40	3
6	30. R303-018	1	VLOŽKA / INSERT / EINLAGE	HR 120x40	2
7	30. R403-001	6	SVĚRÁK / VICE / SCHRAUBSTOCK		1
8	30. R403-004	1	VEDENÍ / GUIDE / BACKENFÜHRUNG	HR 40x25	2
9	30. R403-005	0	LISTA / TRIM / LEISTE	HR 20x20	1
10	30. R403-007	0	BOČNICE / /	P 4x380	1
11	30. R403-014	4	CELIST POHYBLIVÁ / MOVING JAW / BEWEGLICHE BACKE	ODLITEK	1
12	30. R403-018	4	CELIST PEVNA / /		1
13	30. R411-035	2	LISTA CELISTI / JAW TRIM / BACKENLEISTE	HR 30x10	4
14	90.001.25.016	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M6x12	2
15	90.001.25.032	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	8x20	16
16	90.001.25.046	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M10x20	2
17	90.001.25.058	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M12x30	2
18	90.001.25.059	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M12x35	4
19	90.001.25.063	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M12x60	4
20	90.011.21.005	0	ZAPUSTNÝ IMBUS / COUNTERSINK BOLT / SENKSCHRAUBE	SROUB M6x12	15
21	90.150.50.004	0	PODLOŽKA / WASHER / UNTERLEGSCHIEBE	PODLOŽKA 6,4	2
22	90.150.50.006	0	PODLOŽKA / WASHER / UNTERLEGSCHIEBE	PODLOŽKA 10,5	2
23	95.800.021	0	SEGR HRÍDEL. / OUTSIDE SAFETY RING / SICHERUNGSRING AUSSEN	POJISTNÝ KROUZEK 62	1

1. ZRUS.CELIST 30. R403-012 A NAHR. 30. R403-015, ZRUS.CELIST 30. R403-013 A NAHR. 30. R403-016. 107/ZM110 19.5.2011 SLEZACKOVA

2. PRIDANO LISTA 30. R403-005, 2xSROUB M8x20 (90.001.25.032). 165/ZM194 20.7.2011 SLEZACKOVA

3. CELIST 30. R403-015 A 30. R403-016 NAHR. 30. R403-017, ZRUS.BOCNICE 30.5503-14 NAHR. 30. R403-006. 196/ZM246  
25.8.2012, ODVARKA


4. ZRUS.CELIST 30. R403-017 A NAHR. 30. R403-018, ZRUS.BOCNICE 30. R303-015 A NAHR. 30. R203-007, ZRUS.2xSROUB M6x16(90.001.25.017  
A NAHR.2xM6x12(90.011.27.005). 192/ZM226 30.10.2014 SLEZACKOVA

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version); Název sestavy/Assembly title/Name der Baugruppe; Pozice (Pos./Position/Position);  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rožmer/Stock size/Abmessung

## 7.16. Skluz / Slide / Rutsch

Cislo sestavy 201.R403-050		Nazev sestavy SKLUZ/SLIDE/RUTSCH			
Poz.	Objednací číslo	Ver.	Nazev položky	Rozeber	Ks
1	30.3509-015	1	KROUZEK DISTANČNÍ / DISTANCE RING / DISTANZRING	TR 8x1	2
2	30.R403-051	0	STUL / TABLE / TISCH		1
3	30.R403-052	1	SKLUZ / SLIDE / RUTSCH	P 1.5x317	1
4	30.R403-053	1	BOČNICE / SIDE PLATE / SEITENTEIL	P 3x376	1
5	90.001.25.009 (1)	0	SROUB IMBUS ČERNÝ / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M5X16	2


1. ZRUS. SROUB M6x16 (90.001.25.017) A NAHR. M5X16 (90.001.25.009). 1917ZM204 19.8.2011 SLEZACKOVA

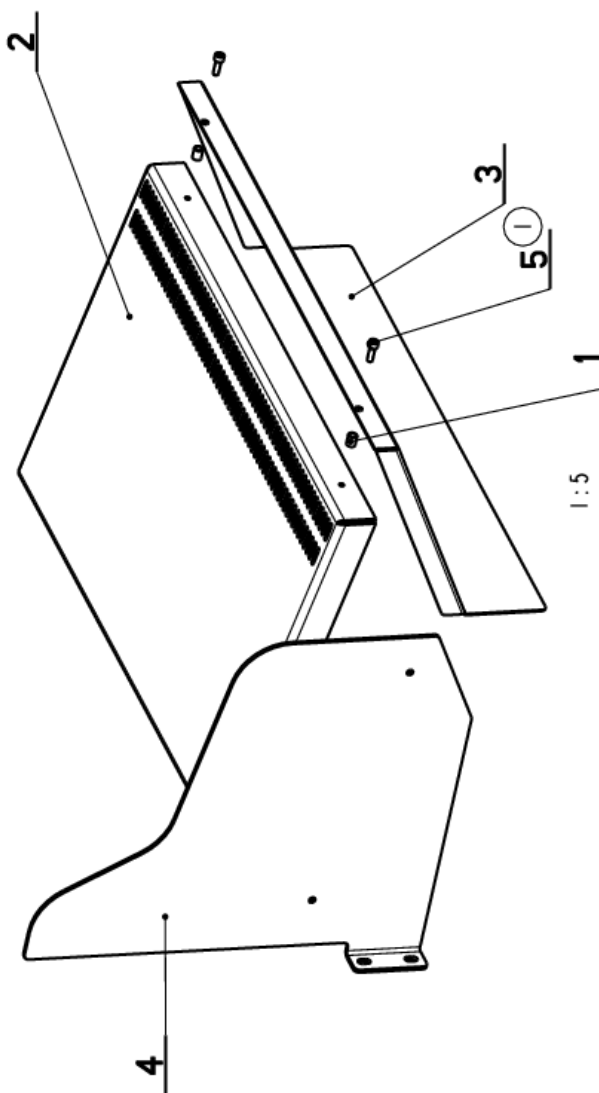





## 7.17. Válec svěráku / Vice cylinder / Schraubstockzylinder

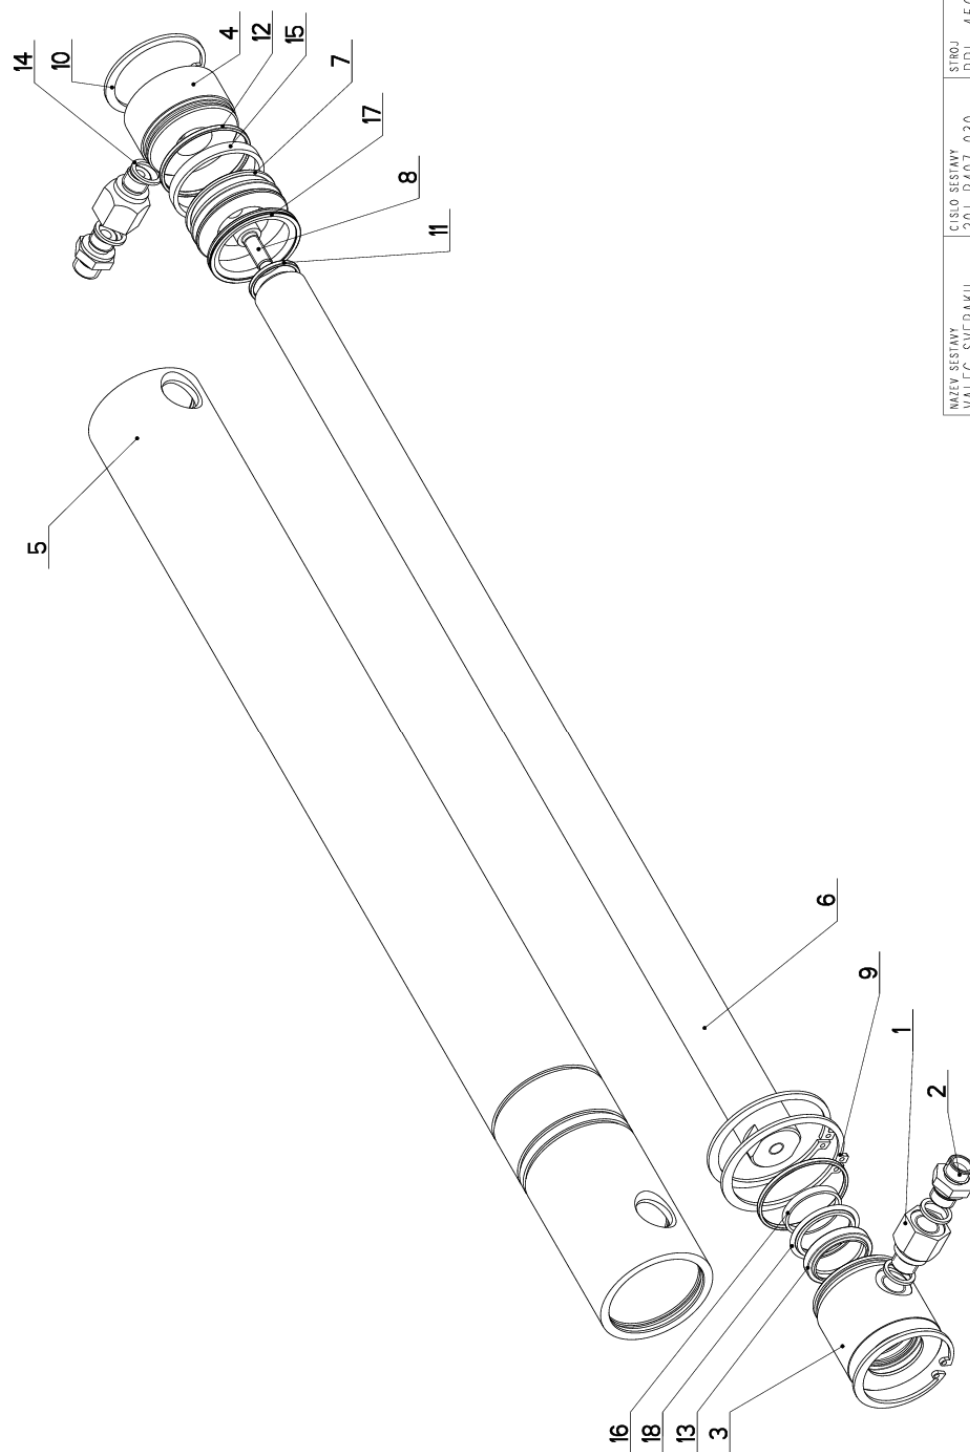


NAZEV SESTAVY VÁLEC SVĚRAKU	CÍSLO SESTAVY 201.R407-030	STROJ PRL 450
Konstruoval: MUSIL		Datum: 22. 07.2015
Meritko: 1:2		

## 7.18. Kusovník / Piece list / Stückliste - Válec svěráku / Vice cylinder / Schraubstockzylinder

Císlo Sestavy 201.R407-030		Ver. 0		Název sestavy VALEC SVĚRÁKU/VICE CYLINDER/SCHRAUBSTOCKZYLINDER	
Poz.	Objednací číslo	Ver.	Název položky	Rozebr	Ks
1	30.1807-005	3	SROUBENÍ / BOLTING / VERSCHRAUBUNG	6-HR 22	2
2	30.2807-109	0	SROUBENÍ PRÍME / DIRECT BOLTING / GERADE VERSCHRAUBUNG		2
3	30.C407-012	2	VÍKO / COVER / DECKEL	d 55	1
4	30.C407-111	0	VÍKO / COVER / DECKEL	d 55	1
5	30.R407-033	1	VALEC SVĚRÁKU / VICE CYLINDER / SCHRAUBSTOCKZYLINDER	TR 62/50	1
6	30.R407-034	0	PISTNICE / PISTON ROD / KOLBENSTANGE	d 28 f8	1
7	30.Y307-035	0	PIST / PISTON / KOLBEN	d 55	1
8	90.001.25.032	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	8x20	1
9	95.800.021	0	SEGR HRÍDEL. / OUTSIDE SAFETY RING / SICHERUNGSRING AUSSEN	POJISTNY KROUZEK 62	2
10	95.801.009	0	SEGR DIRA / OUTSIDE SAFETY RING / SICHERUNGSRING AUSSEN	POJISTNY KROUZEK 52	2
11	96.002.011	0	KROUZEK O DYNAMICKÝ / DYNAMIC O RING / O-RING DYNAMISCH	24X2	1
12	96.002.019	0	KROUZEK O DYNAMICKÝ / DYNAMIC O RING / O-RING DYNAMISCH	46x2 NBR 70SH	2
13	96.061.009	0	KROUZEK STÍRAČI / SCRAPER RING / ABSTREIFRING	WD2200280 Z201	1
14	96.082.002	0	TESNEVI / SEAL RING / DICHTUNGSRING	13/17x1.5 CU	4
15	96.084.001	0	KROUZEK VODICI / LEAD RING / FÜHRUNGSRING	GP6500500-T47	1
16	96.084.006	0	KROUZEK VODICI / LEAD RING / FÜHRUNGSRING	GR4300280-T47	1
17	96.900.001	0	TESNEVI KOMBINOVANE / COMBINATION SEALING / KOMBIDICHTUNG	PW4200500-Z20N	1
18	96.900.021	0	TESNEVI KOMBINOVANE / COMBINATION SEALING / KOMBIDICHTUNG	RSK200280-46N	1

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Pos./Position/Position;  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozebr/Stock size/Abmessung

## 7.19. Rameno / Saw arm / Sagerahmen

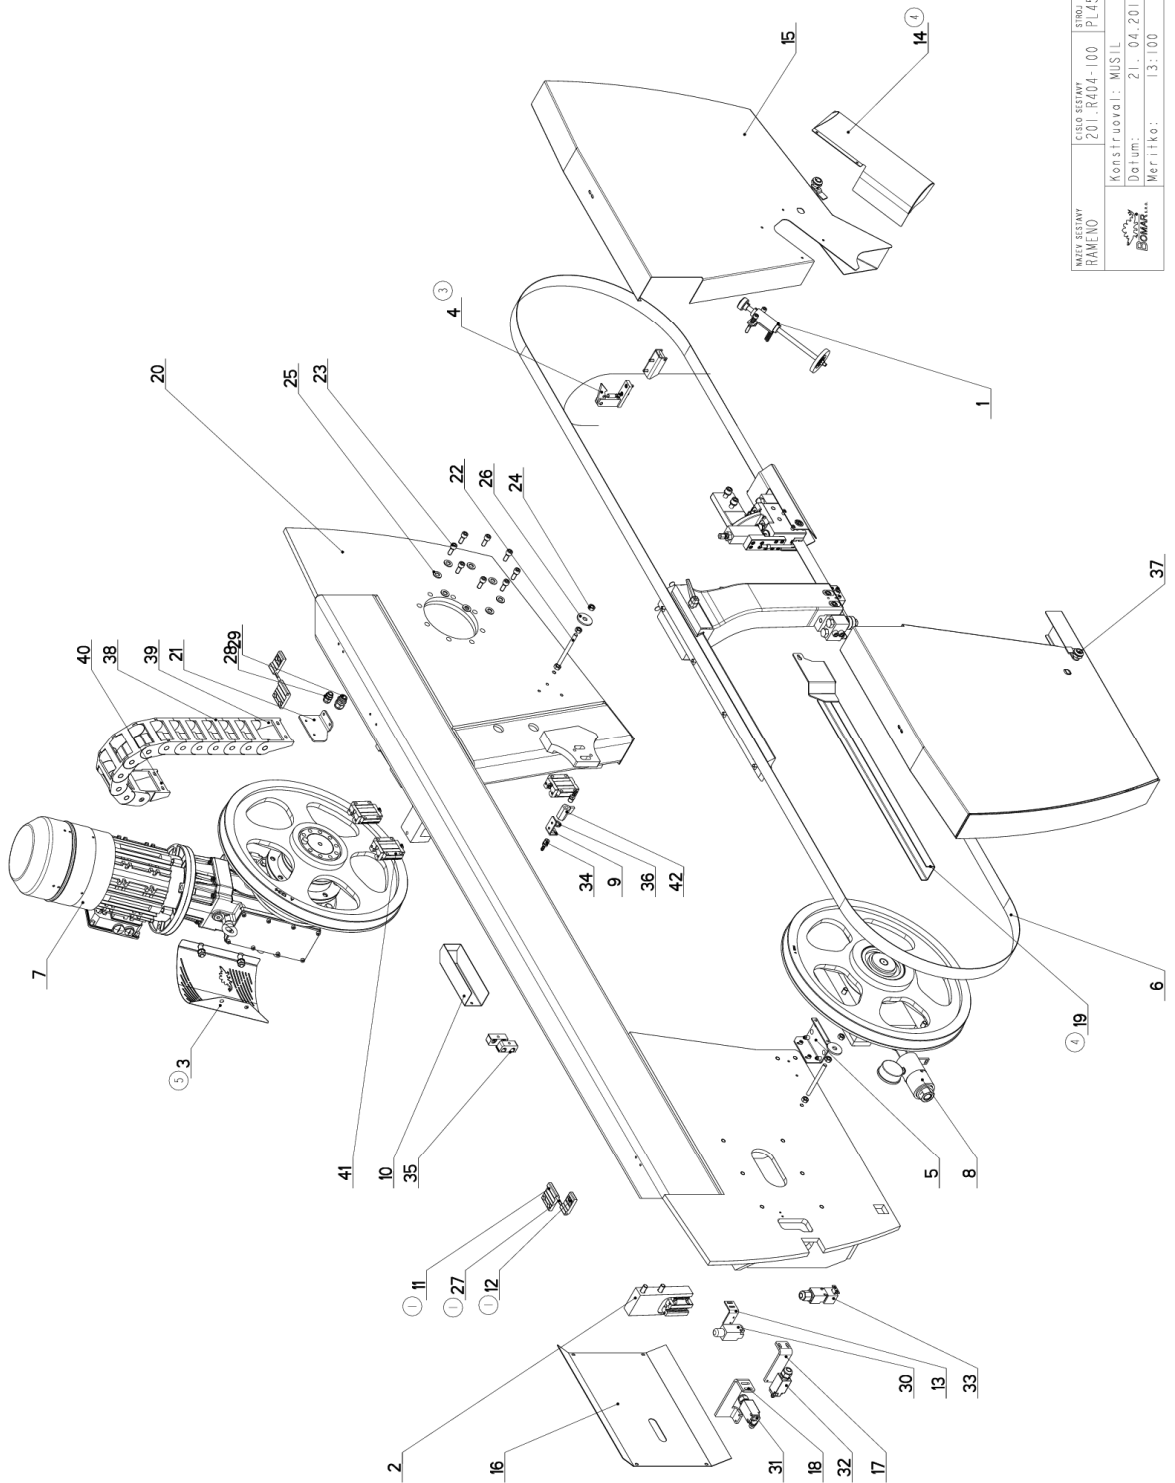


NAZIV SESTAVI RAMENO	ČÍSLO SESTAVI 201.R404-100	STUPEŇ PL450
Konstruoval: MUSTIL		
Datum: 21. 04. 2015		
Měřilko: 1:3:100		

## 7.20. Kusovník / Piece list / Stückliste - Rameno / Saw arm / Sagerahmen

Císlo Sestavy 201.R404-100		Název sestavy RAMENO/SAW ARM/SAGERAHMEN		
Verf.	Verf.	Název položky	Rožmer	Ks
5	0	KARTAC / BRUSH / BÜRSTE		1
	0	KONZOLA / CONSOLE / KONSOLE		1
	0	KRYT / COVER / ABDECKUNG		1
	0	ZAMEK / LOCK / SCHLOSS		1
	0	DRZAK / HOLDER / HALTER		1
	1	VEDENÍ PASU / BELT GUIDE / SÄGEBANDFÜHRUNG		1
	3	POHON / DRIVE / ANTRIEB		1
	0	NAPINANI / TENSIONING / SPANNUNG		1
	2	DRZAK / HOLDER / HALTER	P 3x16	1
	1	KRYT / COVER / ABDECKUNG	P 1.5x153	1
	3	PANT / BOARD / PLATTE	PROFIL	2
	2	PANT / BOARD / PLATTE	PROFIL	2
	0	DRZAK / HOLDER / HALTER	P 3x30	1
	0	KRYT KARTACKU / BRUSH COVER / BÜRSTENABDECKUNG		1
	2	KRYT / COVER / ABDECKUNG		1
	1	KRYT NAPINANI / TENSIONING COVER / BANDSPANNUNGSABDECKUNG	P 1.5x381	1
	0	DRZAK / HOLDER / HALTER	HR 40x6	1
	1	DRZAK / HOLDER / HALTER	P 6x85	1
	0	KRYT PASU / BELT COVER / BANDABDECKUNG		1
	1	RAMENO / SAW ARM / SÄGERAHMEN		1
	0	DRZAK / HOLDER / HALTER	P 4x100	1
	0	TYC ZAVITOVA / THREADED POLE / GEWINDESTANGE	M10	2
	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M10x25	8
	0	MATICE / NUT / MUTTER	MATICE - M10	6
	0	PODLOZKA / WASHER / UNTERLEGSCHEIBE	PODLOZKA 13	8
	0	PODLOZKA / WASHER / UNTERLEGSCHEIBE	PODLOZKA 12	2
	0	KOLIK / PIN / BOLZEN	D6	2
	0	VYVODKA / BUSHING / TÜLLE	M16x1.5	1
	0	VYVODKA / BUSHING / TÜLLE	M20x1.5	1
	0	SPINAC KONCOVY / END SWITCH / ENDSCHALTER		1
	0	SPINAC KONCOVY / END SWITCH / ENDSCHALTER		1
	0	SPINAC KONC.S KLADK. / END SWITCH WITH PULLEY / ENDSCHALTER MIT ROLLE	FR 615 (PIZZATO)	1
	0	SPINAC KONCOVY / END SWITCH / ENDSCHALTER		1
	0	REDUCE / REDUCTION / ADAPTOR / REDUKTION	REDUCE 6/RI/4"	2

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Pos./Position/Position;  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rožmer/Stock size/Abmessung

## 7.21. Rameno / Saw arm / Sagerahmen

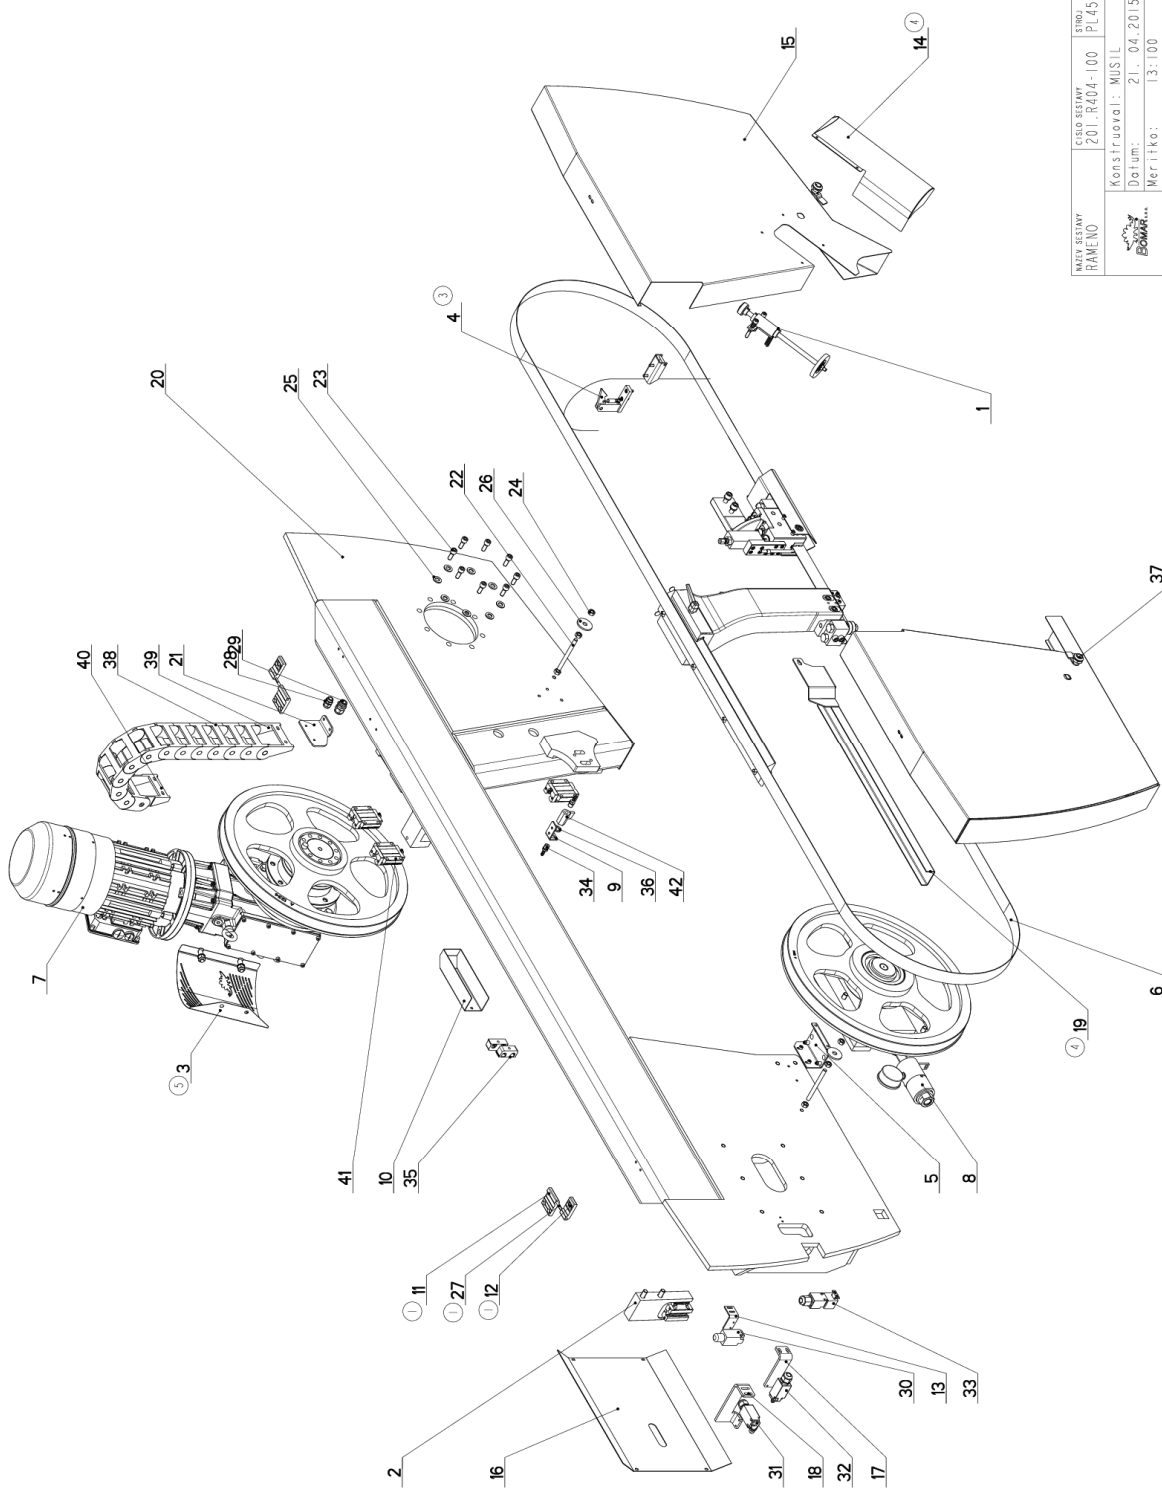

NAZIV SESTAVI RAMENO	ČÍSLO SESTAVI 201.R404-100	STUPEŇ PL450
Konstruoval: MUSTIL		
Datum: 21. 04. 2015		
Měřilko: 1:3:100		

## 7.22. Kusovník / Piece list / Stückliste - Rameno / Saw arm / Sagerahmen

35	94.204.005	0	DRZAK / HOLDER / HALTER	LBG 14/14-PP	2
36	96.081.001	0	KROUZEK TESNIVCI / SEAL RING / DICHTUNGSRING	23x15x3	1
37	99.104.002	0	ZAMEK / LOCK / SCHLOSS	ZAMEK C.INSKY	2
38	99.170.001	0	RETEZ ENERGI / ENERGY BELT / ENERGIEKETTE	0555.030.075.100	12
39	99.173.001	0	RETEZ ENERGI / ENERGY BELT / ENERGIEKETTE	KONCOVKA VNEJ	1
40	99.173.002	0	RETEZ ENERGI / ENERGY BELT / ENERGIEKETTE	KONCOVKA VNIT	1
41	99.201.046	0	VEDENI LINEARNI / LINEAR GUIDE / LINEARE FÜHRUNG	MSA25E SS FO N	3
42	99.260.003	0	VENTIL / VALVE / VENTIL	1/4"	1

1. ZRUS.PANT 99.101.007 A NAHR.PANTEM 30.R304-006,30.R304-007,KOLIKEM 90.307.OZ.001. 009/ZM019 25.1.2012 SLEZACKOVA

2. ZRUS.KRYT KARTACKU 30.Y404-009 A NAHR.30.R404-012. 002/ZM048 1.3.2013 SLEZACKOVA


3. PRID.ZAMEK 201.R404-050. 067/ZM081 15.3.2013 SLEZACKOVA


4. ZRUS.KRYT PASU 30.R404-012 A NAHR.30.R404-066,ZRUS.KRYT KARTACKU 30.M404-009 A NAHR.30.R404-009. 090/ZM110 19.5.2014 SLEZACKOVA

5. PRIDAN KRYT PREVODOVKY 201.R404-022. 005/ZM073 21.4.2015 SLEZACKOVA

Cislo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version; Nazev sestavy/Assembly title/Name der Baugruppe; Pozice (Poř./Position/Position;  
Objednací číslo/Purchase order number./Bestellnummer; Mzery polozky/Volume title/Name der Position; Rozmer/Stock size/Abmessung

### 7.23. Kartáč / Brush / Bürste

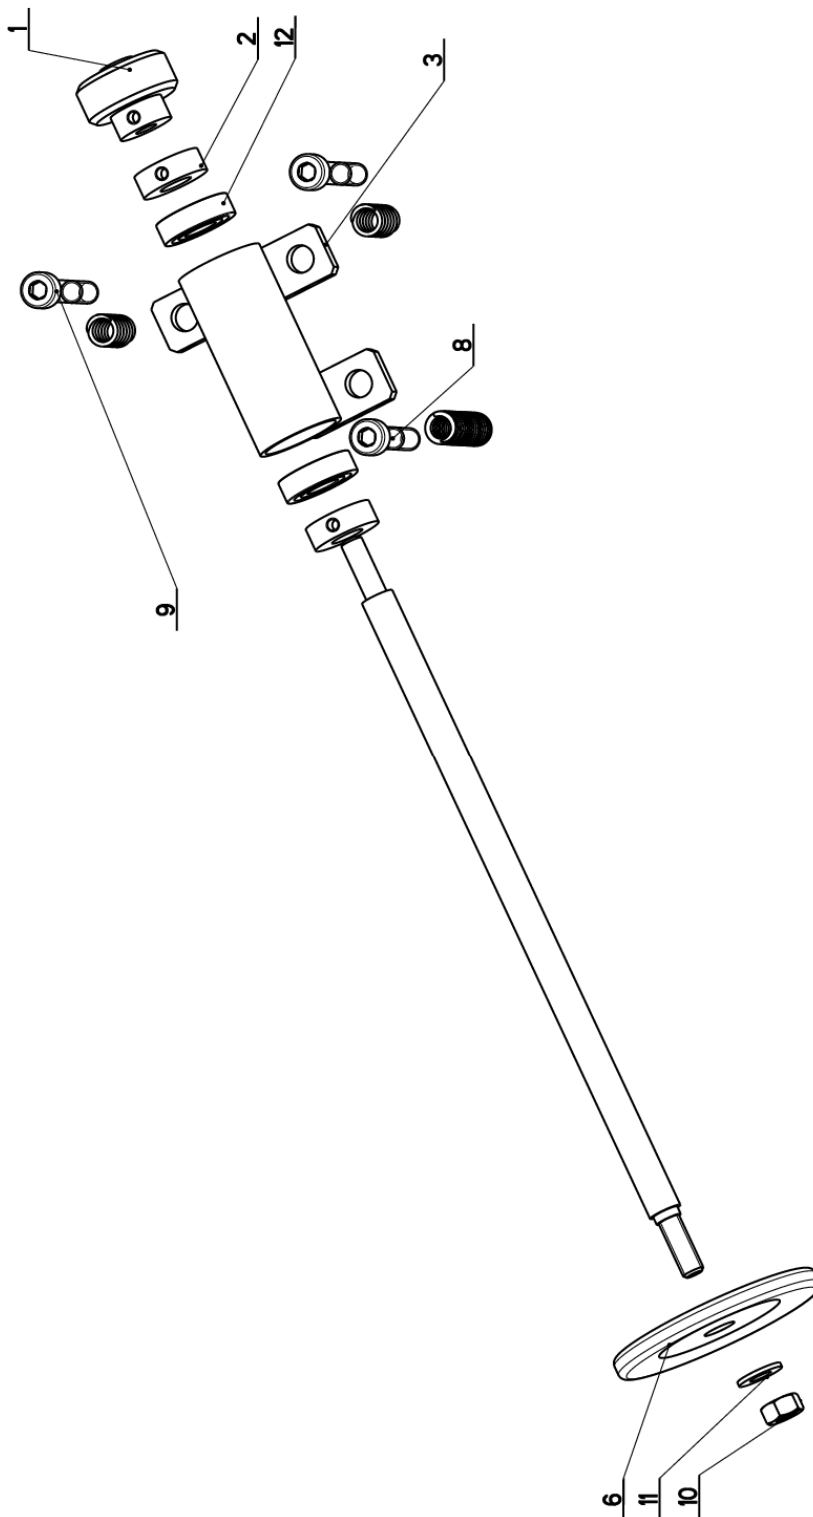

NAZEV SESTAVY KARTAC	CISLO SESTAVY 201.9214-300	STROJ ECO 320
		Konstruoval: VINOHRADSKY
		Datum: 19. 01. 2010
		Meritko: 7:10




## 7.24. Kusovník / Piece list / Stückliste - Kartáč / Brush / Bürste

Císlo Sestavy 201.9214-300		Ver. 0		Název sestavy KARTAC/BRUSH/BÜRSTE	
Poz.	Objednací číslo	Ver.	Název položky	Rozev	Ks
1	201.0814-204	0	KOLECKO / WHEEL / ROLLE	SESTAVA	1
2	30.0814-207	0	KROUZEK / RING / RING	d 25	2
3	30.9214-301	2	DRZAK / HOLDER / HALTER		1
4	30.9214-302	1	HRDEL / SHAFT / WELLE	D 12	1
5	31.0305-211	0	PRUŽINA / SPRING / FEDER	2x12x50x15,5	1
6	31.0814-208	0	KARTAC / BRUSH / BÜRSTE		1
7	31.1506-115	0	PRUŽINA / SPRING / FEDER	1.6x12x25x7.5	2
8	90.001.25.038	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M8x50	1
9	90.001.25.040	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M8x60	2
10	90.100.55.005	0	MATICE / NUT / MUTTER	MATICE - M8	1
11	90.150.50.005	0	PODLOZKA / WASHER / UNTERLEGSCHIBE	PODLOZKA 8,4	1
12	95.001.005	0	LOŽISKO / BEARING / LAGER	6001 2RS	2

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Pos./Position/Position;  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozev/Stock size/Abmessung

## 7.25. Kolečko / Wheel / Rolle


Císlo Sestavy 201.0814-204		Ver. 0	Název sestavy KOLEČKO/WHEEL/ROLLE		
Poz.	Objednací číslo	Ver.	Název položky	Rozměr	Ks
1	30.0814-204.1	0	KOLEČKO / /	d 35	1
2	30.0814-204.2	0	NABOJ / /	d 20	1

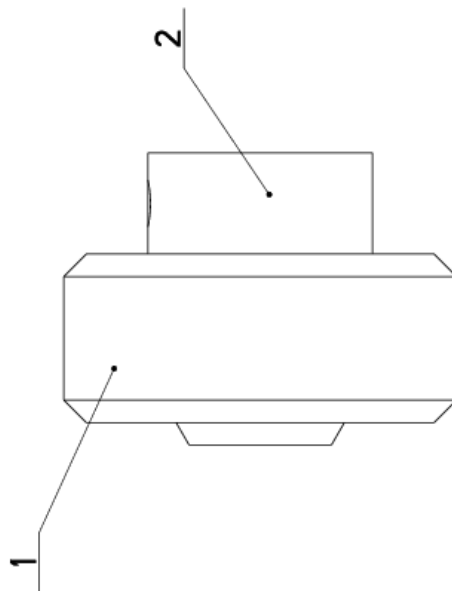

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Pos.)/Position/Position;  
 Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

## 7.26. Konzola / Console / Konsole


Cislo sestavy 201.R404-020		Ver. 0		Název sestavy KONZOLA / CONSOLE / KONSOLE	
Poz.	Objednací číslo	Ver.	Název položky	Rozevřer	Ks
1	30.R404-021	0	KONZOLA / CONSOLE / KONSOLE	HR 80x30	1
2	90.001.25.063	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M12X60	2
3	99.201.045	0	VOZÍK LINEÁRNÍHO VEDENÍ / LINEAR GUIDE CART / LINEARFÜHRUNGSWAGEN	MSA20A SS FI N	1

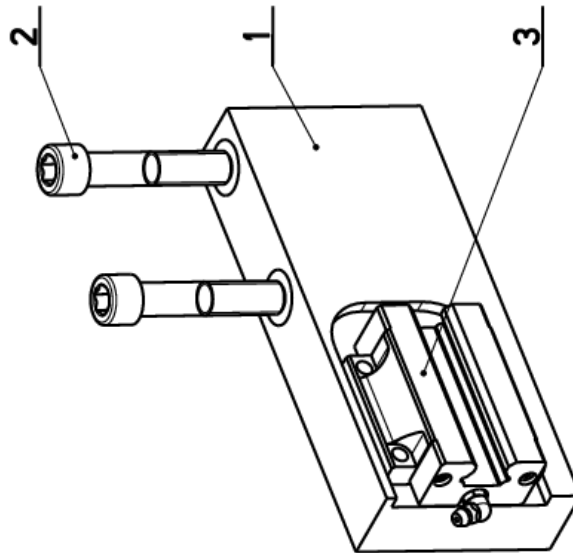

Cislo sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position;  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozevřer/Stock size/Abmessung

## 7.27. Kryt / Cover / Abdeckung


Císlo Sestavy 201.R404-022		Ver. 0		Název sestavy KRYT/COVER/ABDECKUNG	
Poz.	Objednací číslo	Ver.	Název položky	Rozměr	Ks
1	30.R404-023	0	PLECH / PLATE / BLECH	P1x238	1
2	90.01.3.21.29	0	SROUB / BOLT / SCHRAUBE	M12X40 - ISO.7380	2
3	90.100.55.007	0	MATICE / NUT / MUTTER	MATICE - M12	2
4	90.152.50.006	0	PODLOŽKA / WASHER / UNTERLEGSCHIBE	M12 DIN6798	2

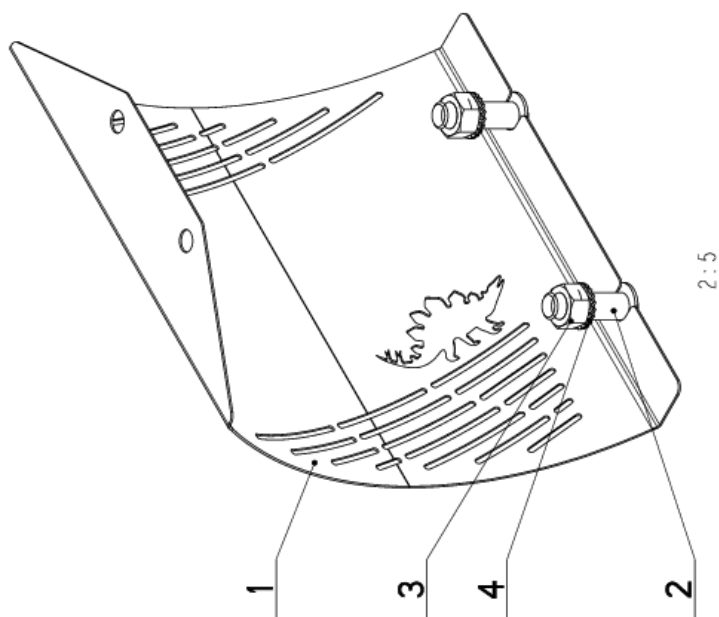

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Pos./Position/Position;  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

## 7.28. Zámek / Lock / Schloss


Cislo Sestavy 201.R404-050		Ver. 0		Nazev sestavy ZAMEK/LOCK/SCHLOSS	
Poz.	Objednaci cislo	Ver.	Nazev polozky	Rozeber	Ks
1	30.R404-051	0	DRZAK / HOLDER / HALTER		1
2	30.R404-052	0	KONZOLA / CONSOLE / KONSOLE		1
3	30.R404-053	0	PAKA / LEVER / HEBEL	P. 6x39,2	1
4	31.1605-128		PRUZHINA TAZNA / /	1x10x50x22	1
5	90.001.25.009	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M5X16	1
6	90.001.25.017	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M6X16	4
7	90.100.55.003	0	MATICE / NUT / MUTTER	MATICE - M5	1
8	90.301.02.007	0	KOLIK VALCOVY / CYLINDRICAL PIN SOFT / ZYL.INDERSTIFT WEICH	KOLIK 8X16	1

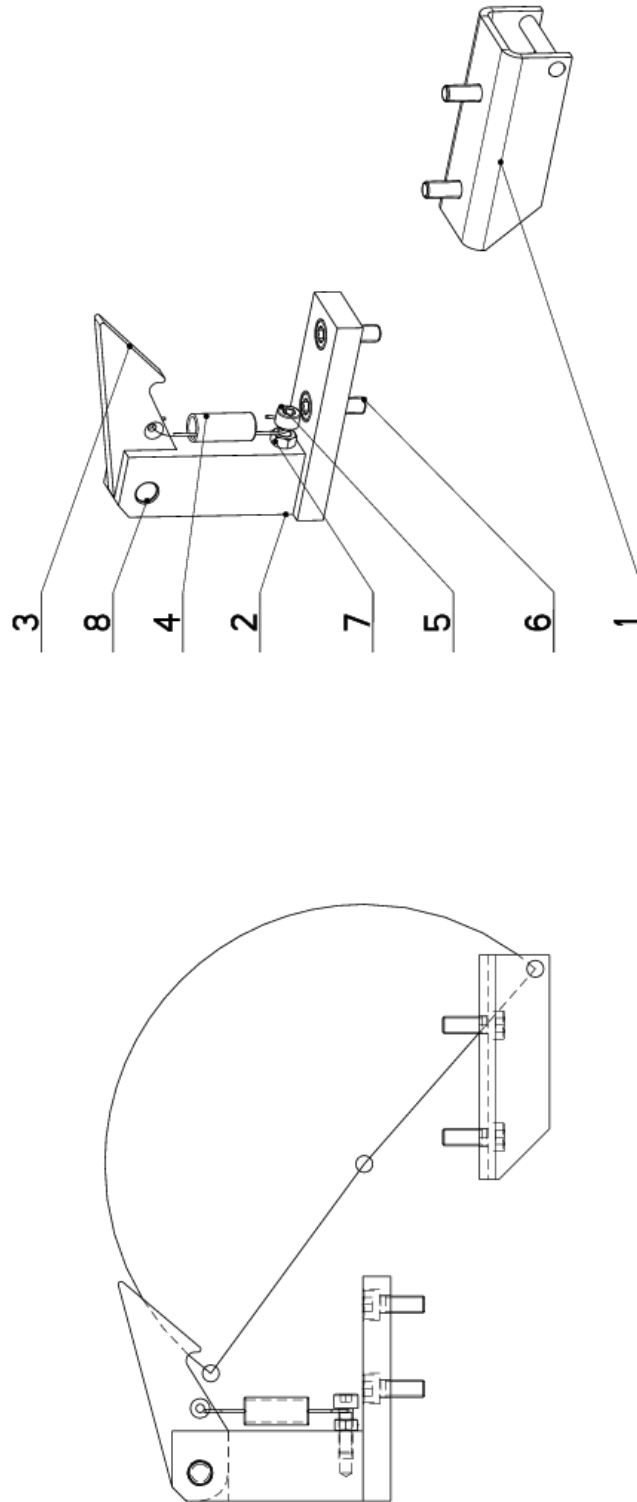

Cislo Sestavy/Number of assembly/Nummer der Baugruppe, Verze (Ver.)/Version/Version; Nazev sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position;  
Objednaci cislo/Purchase order number/Bestellnummer; Nazev polozky/Volume title/Name der Position; Rozeber/Stock size/Abmessung


## 7.29. Držák / Holder / Halter

Císlo Sestavy 201.R404-070		Ver. 0		Název sestavy DRŽÁK / HOLDER / HALTER	
Poz.	Objednací číslo	Ver.	Název položky	Rozev.	Ks
1	30.R404-071	0	DRŽÁK / HOLDER / HALTER	P3 - 100	1
2	90.001.25.016	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M6X12	2
3	90.011.27.024	0	SROUB ZAPUSTNÝ / COUNTERSINK BOLT / SENKSCHRAUBE	SROUB M5X20	2
4	90.100.55.003	0	MATICE / NUT / MUTTER	MATICE - M5	2
5	90.163.00.006	0	DISTANČ / DISTANCE / DISTANZ	TR 10/5.3	2
6	94.101.029	0	ZATKA / PLUG / STOPFEN	PRO IMBUS M6	6

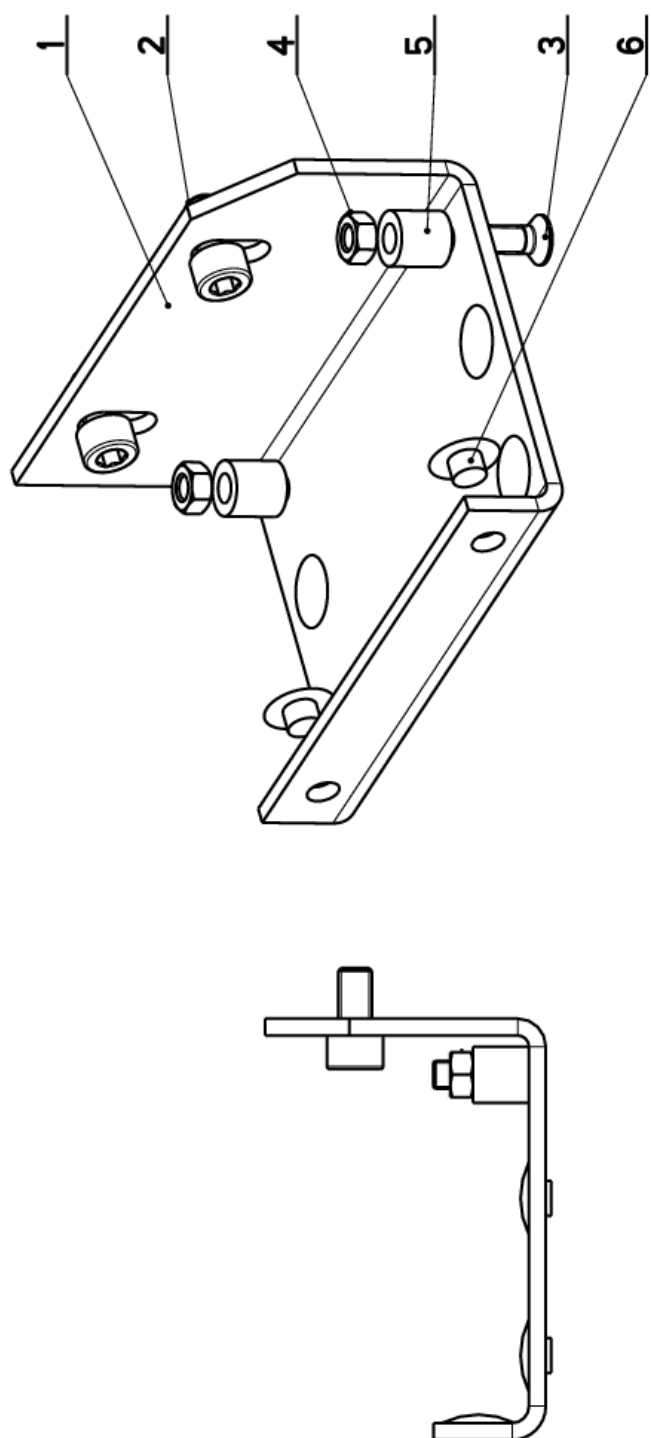

## 7.30. Vedení pásu / Belt guide / Sägebandführung

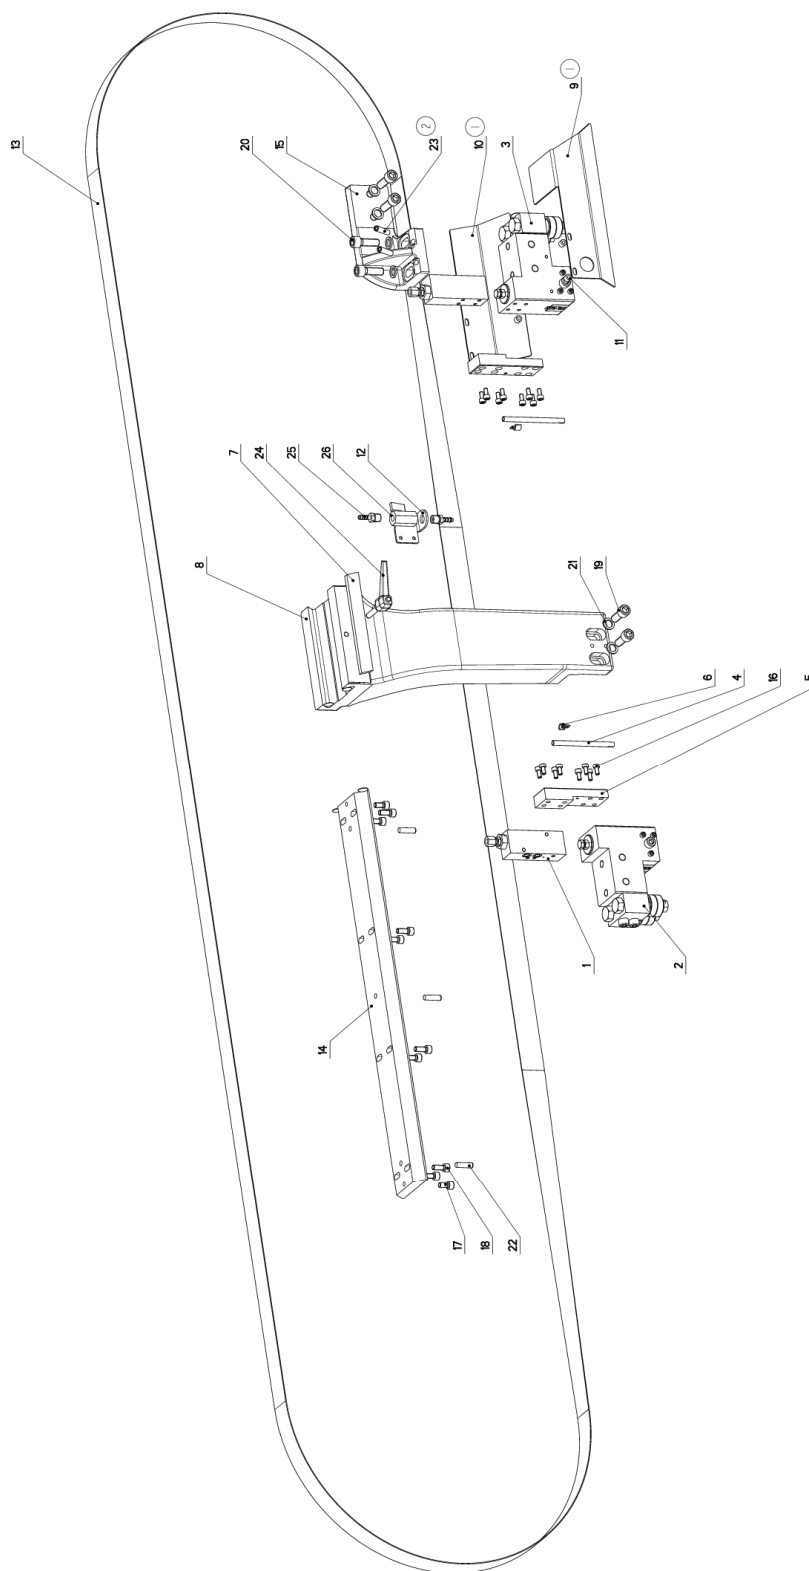

NAZEV ŠESTAVY VEDENÍ PÁSU	ČÍSLO ŠESTAVY 201.R410-000	ŠTÚD. PL450
Konstruoval: MUSIL		Datum: 13. 01. 2016
Merilko:		11:50



### 7.31. Kusovník / Piece list / Stückliste - Vedení pásu / Belt guide / Sägebandführung

Císlo Sestavy 201.R410-000		Název sestavy VEDENÍ PASU/BELT GUIDE/SÄGEBANDFÜHRUNG		
Verf.	Verf.	Název položky	Rozeřmer	Ks
2	0	KOSTKA REGULACE / REGULATION CUBE / REGULINGSWÜRFEL		2
	1	KOSTKA VODICI / LEAD CUBE / FÜHRUNGSKLOTZ		1
	1	KOSTKA VODICI / LEAD CUBE / FÜHRUNGSKLOTZ		1
	0	TRUBKA / TUBE / ROHR	TR 8x1	2
	0	DESKA / BOARD / PLATTE	HR 40x20	2
	0	DRZAK / HOLDER / HALTER	PI.5x10	2
	0	LISTA / TRIM / LEISTE	HR 25x6	1
	1	KONZOLA / CONSOLE / KONSOLE		1
	0	KRYT PASU / BELT COVER / BANDABDECKUNG	P 2x192	1
	0	KRYT PASU / BELT COVER / BANDABDECKUNG	P 2x108	1
	0	KROUZEK / RING / RING	TR 10x2,5	4
	0	DRZAK / HOLDER / HALTER	P3-50	1
	0	PAS PÍLOVY / SAW BELT / SÄGEBAND	41x1,3	1
	0	LISTA VODICI / LEAD TRIM / FÜHRUNGSLEISTE	HR 90x20	1
	3	DRZAK / HOLDER / HALTER		1
	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M6x12	16
	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	8x16	2
	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	8x20	8
	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M12x30	2
	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M12x35	4
	0	PODLOZKA / WASHER / UNTERLEGSCHLEIBE	NORD-LOCK	6
	0	KUZEL, KOLIK S ZAV. / TAPER PIN + THREAD / KEGELBOLZEN + GEWINDE	KOLIK 8x30	3
	0	KUZEL, KOLIK S ZAV. / TAPER PIN + THREAD / KEGELBOLZEN + GEWINDE	KOLIK 8x36	2
	0	PAKA UPINACI / ATTACHMENT LEVER / SPANNHEBEL	M8x40	1
	0	REDUKCE / REDUCTION / ADAPTOR / REDUKTION	REDUKCE 6/RI/4"	2
	0	VENTIL / VALVE / VENTIL	1/4"	1


1. ZRUS. KRYT PASU 30.Y410-006 A NAHR. 30.R410-006, PRIDAN KRYT PASU 30.R410-007. 0907ZM110 16.5.2014 SLEZACKOVA

2. PRIDAN 2xKOLIK 8x36(90.302.OZ.003. 0041ZM009 12.1.2016 SLEZACKOVA

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Pos./Position/Position;  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozeřmer/Stock size/Abmessung


### 7.32. Kostka regulace / Regulation cube / Regelungswürfel

Císlo Sestavy 201.6816-100		Název sestavy KOSTKA REGULACE/REGULATION CUBE/REGELUNGSWÜRFEL			
Poz.	Objednací číslo	Ver.	Název položky	Rozebr	Ks
1	30.6816-101	1	KOSTKA REGULACE / REGULATION CUBE / REGELUNGSWÜRFEL	TYC 40x40	1
2	30.6816-104	2	VÍKO / COVER / DECKEL	TYC 16	1
3	30.6816-103	0	PIST / PISTON / KOLBEN	TYC 12	1
4	30.6816-108	1	JEHLA / NEEDLE / NADEL	TYC 8	1
5	95.690.001	0	JEHLA / NEEDLE / NADEL	1.5x11.8	1
6	30.6816-106	3	PIST / PISTON / KOLBEN	TYC 12	1
7	30.6816-107	0	VÍKO / COVER / DECKEL	TYC 22	1
8	92.002.102	0	SROUBENÍ / BOLTING / VERSCHRAUBUNG	S-GEY-8LLR	1
9	96.002.003	0	KROUZEK O DYNAMICKY / DYNAMIC O RING / O-RING DYNAMISCH	6X2	1
10	96.002.041	0	KROUZEK O DYNAMICKY / DYNAMIC O RING / O-RING DYNAMISCH	10x1	1
11	96.001.001	0	KROUZEK O STATICKY / STATIC O RING / O-RING STATISCH	4X1.8	2
12	96.001.003	0	KROUZEK O STATICKY / STATIC O RING / O-RING STATISCH	8X2	1

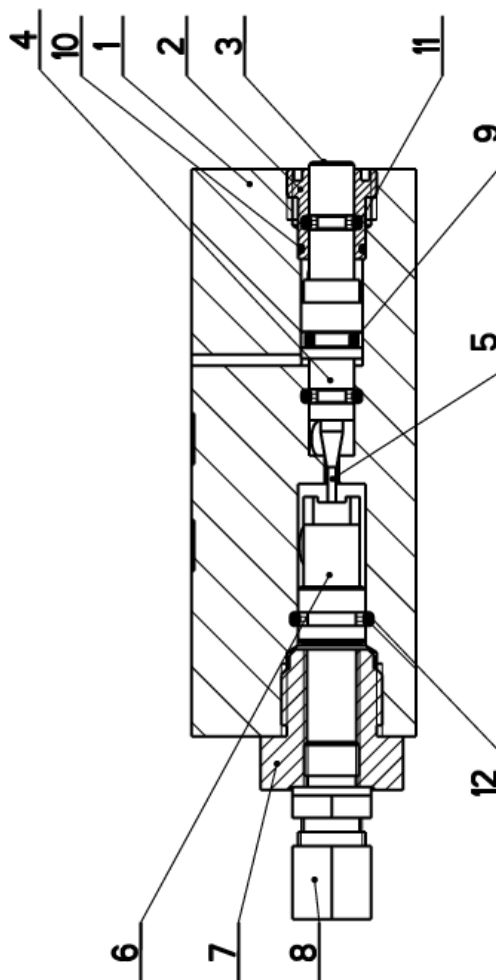



### 7.33. Kostka vodící / Lead cube / Führungsklotz

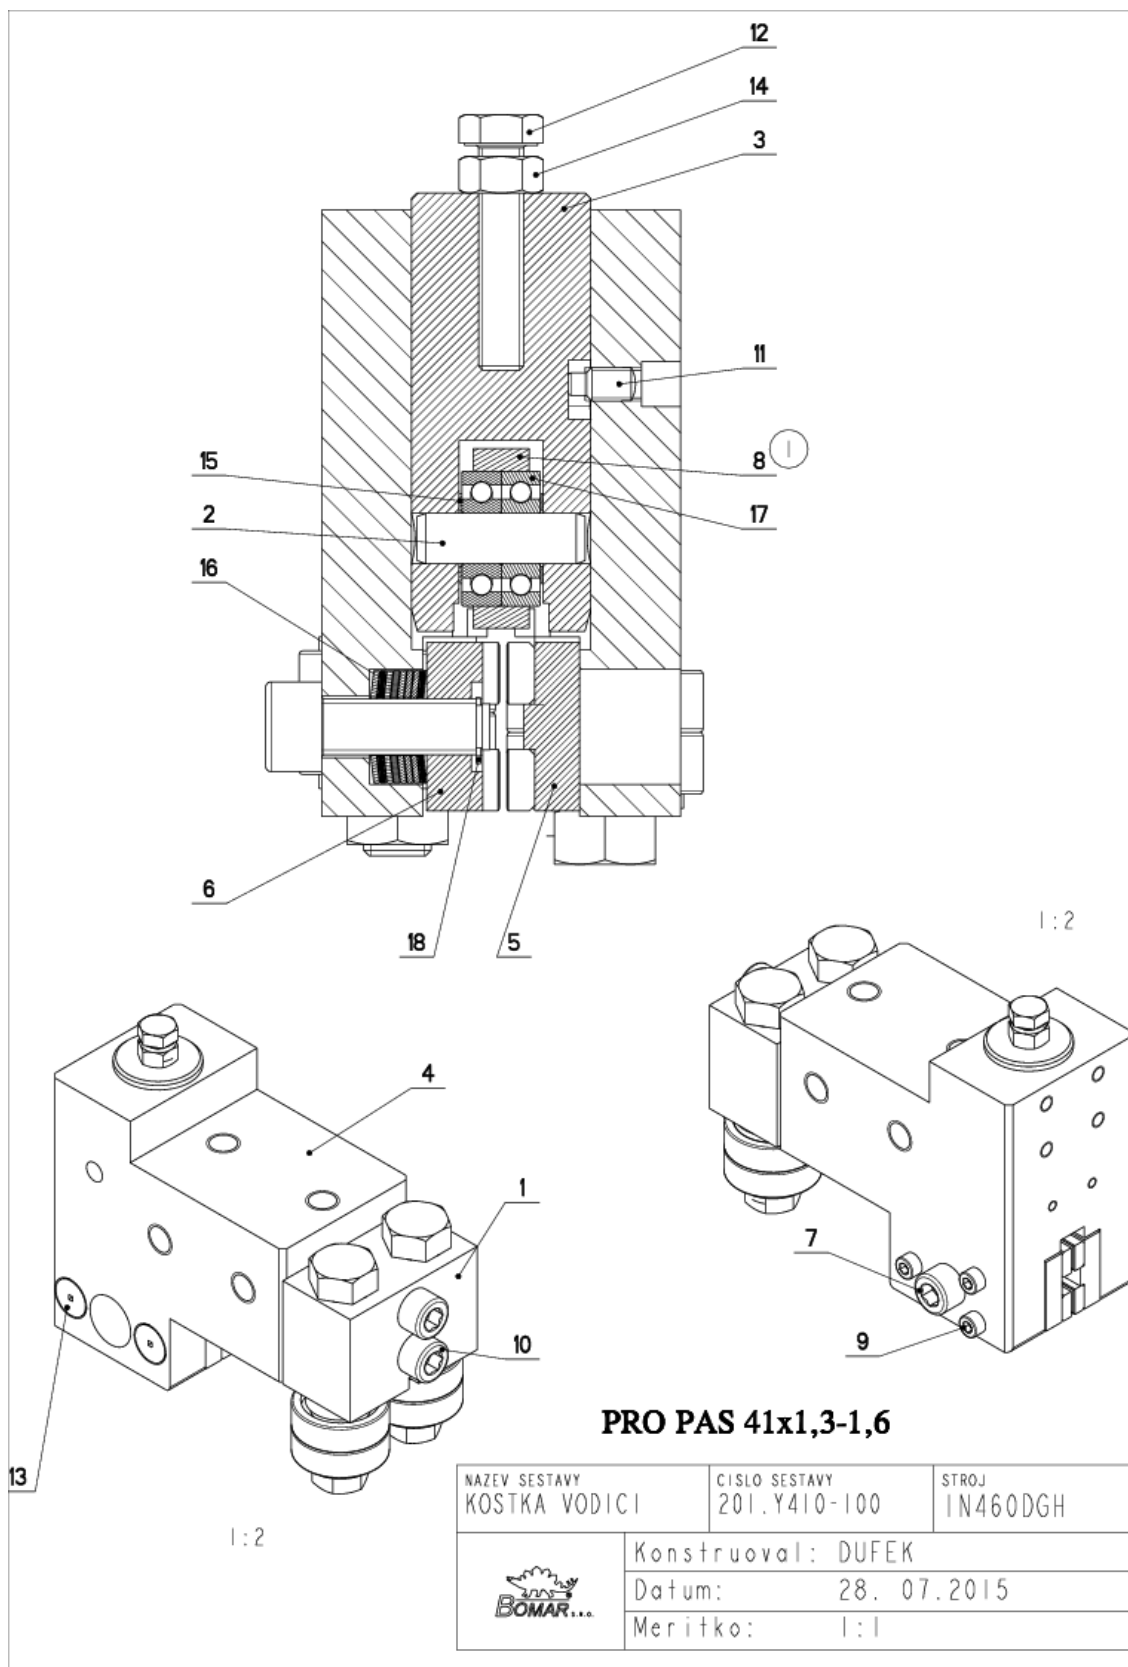

### 7.34. Kusovník / Piece list / Stückliste - Kostka vodící / Lead cube / Führungsklotz


Císlo Sestavy 201.7410-100		Ver. 1		Název sestavy KOSTKA VODICÍ / LEAD CUBE / FÜHRUNGSKLOTZ		Ver. 1		Ks	
Poz.	Objednací číslo	Ver.	Název položky	Ver.	Název položky	Ver.	Rozev	Ver.	Ks
1	201.6110-510	0	VEDENÍ / GUIDE / BACKENFÜHRUNG	0	VEDENÍ / GUIDE / BACKENFÜHRUNG	0	TYC 10	1	1
2	30.6710-108	1	KOLÍK / PIN / BOLZEN	1	KOLÍK / PIN / BOLZEN	1	d 32	1	1
3	30.6710-109	0	PIST / PISTON / KOLBEN	0	PIST / PISTON / KOLBEN	0	HR 110x70	1	1
4	30.7410-101	1	KOSTKA VODICÍ / LEAD CUBE / FÜHRUNGSKLOTZ	1	KOSTKA VODICÍ / LEAD CUBE / FÜHRUNGSKLOTZ	1		1	1
5	30.7410-110	0	DRŽÁK TVRDOKOVU / POA HOLDER / HM-HALTER	0	DRŽÁK TVRDOKOVU / POA HOLDER / HM-HALTER	0		1	1
6	30.7410-120	0	DRŽÁK TVRDOKOVU / POA HOLDER / HM-HALTER	0	DRŽÁK TVRDOKOVU / POA HOLDER / HM-HALTER	0		1	1
7	30.7610-503	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	0	M10X30	1	1
8	31.6710-110	1	KROUZEK / RING / RING	1	KROUZEK / RING / RING	1	LH 2403210	1	1
9	90.001.25.011	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	0	M5X25	3	3
10	90.001.25.054	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	0	M10X60	2	2
11	90.004.20.002	0	SROUB STAVECÍ / ADJUSTMENT BOLT / STELLSCHRAUBE	0	SROUB STAVECÍ / ADJUSTMENT BOLT / STELLSCHRAUBE	0	SROUB M6X12	1	1
12	90.005.55.019	0	SROUB 6HRANNÝ / 6 SIDED BOLT / SECHSKANTSCHRAUBE	0	SROUB 6HRANNÝ / 6 SIDED BOLT / SECHSKANTSCHRAUBE	0	SROUB M8X40	1	1
13	90.011.27.016	0	ZAPUSTNÝ IMBUS / COUNTERSINK BOLT / SENKTSCHRAUBE	0	ZAPUSTNÝ IMBUS / COUNTERSINK BOLT / SENKTSCHRAUBE	0	SROUB M8X25	2	2
14	90.100.55.005	0	MATICE / NUT / MUTTER	0	MATICE / NUT / MUTTER	0	MATICE - M8	1	1
15	90.154.50.003	0	PODLOŽKA / WASHER / UNTERLEGSCHIEBE	0	PODLOŽKA / WASHER / UNTERLEGSCHIEBE	0	10x16x0.50	2	2
16	90.350.07.005	0	PRŮŽINA TALÍŘOVÁ / DISC SPRING / TELLERFEDER	0	PRŮŽINA TALÍŘOVÁ / DISC SPRING / TELLERFEDER	0	20X10.2X1	8	8
17	95.001.044	0	LOŽISKO / BEARING / LAGER	0	LOŽISKO / BEARING / LAGER	0	609 ZRS	2	2
18	95.900.002	0	SEGR HRÍDEL. / OUTSIDE SAFETY RING / SICHERUNGSRING AUSSEN	0	SEGR HRÍDEL. / OUTSIDE SAFETY RING / SICHERUNGSRING AUSSEN	0	POJISTNÝ KROUZEK 8	1	1

I. ZRUS.SOUČ.30.6710-110 A MAHR.31.6710-110. 175/ZM178 28.7.2015 SLEZACKOVA

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version); Název sestavy/Assembly title/Name der Baugruppe; Pozice (Pos./Position/Position);  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung


### 7.35. Vedení / Guide / Backenführung


Cislo sestavy 201.6110-510		Název sestavy VEDENÍ / GUIDE / BACKENFÜHRUNG			
Poz.	Objednací číslo	Ver.	Název položky	Rozeber	Ks
1	30.6010-104	1	EXCENTR / CAM / EXZENTER	SK 22	2
2	30.6010-108	0	KROUZEK DISTANČNÍ / DISTANCE RING / DISTANZRING	Tr 25x5	1
3	30.6110-502	0	KOSTKA VODÍČI / LEAD CUBE / FÜHRUNGSKLOTZ	HR 80x50	1
4	90.100.55.007	0	MATICE / NUT / MUTTER	MATICE - M12	2
5	90.150.50.008	0	PODLOŽKA / WASHER / UNTERLEGSCHIBE	PODLOŽKA 15	3
6	95.001.015	0	LOŽISKO / BEARING / LAGER	6202 2RS	4

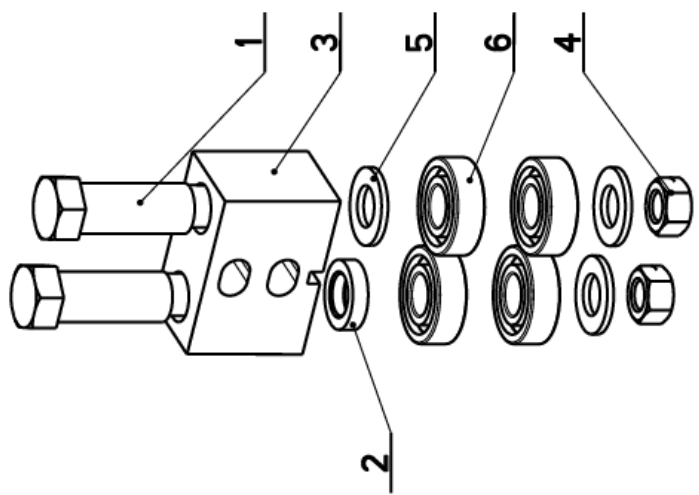

### 7.36. Kostka vodící / Lead cube / Führungsklotz

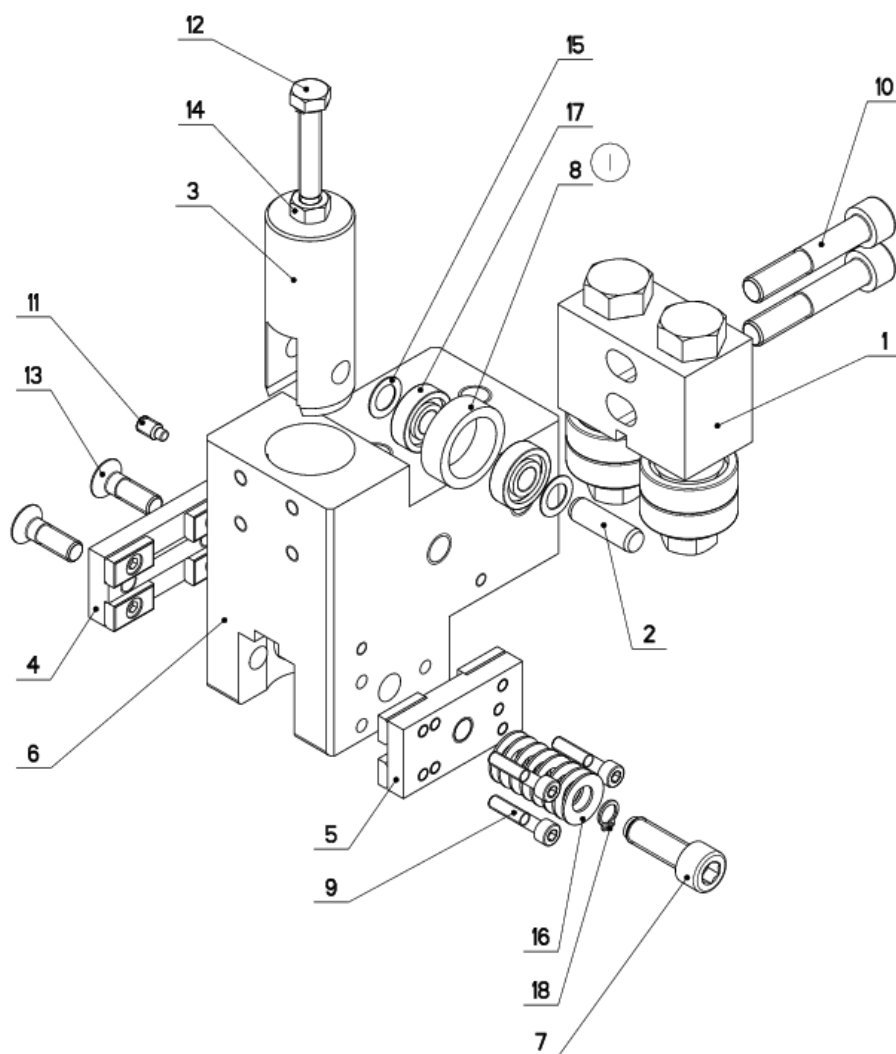

NAZEV SESTAVY KOSTKA VODICI	CISLO SESTAVY 201.Y410-200	STROJ IN460DGH
	Konstruoval: MUSIL	
	Datum: 28. 07.2015	
	Meritko: 1:2	



### 7.37. Kusovník / Piece list / Stückliste - Kostka vodící / Lead cube / Führungsklotz


Císlo Sestavy 201.7410-200		Ver. 1		Název sestavy KOSTKA VODÍCÍ / LEAD CUBE / FÜHRUNGSKLOTZ		Ver. 1		Název položky		Rozměr		Ks	
Poz.	Objednací číslo	Ver.	Název sestavy	Název položky	Rozměr	Ks	Poz.	Objednací číslo	Ver.	Název sestavy	Název položky	Rozměr	Ks
1	201.6110-510	0	VEDENÍ / GUIDE / BACKENFÜHRUNG	VEDENÍ / GUIDE / BACKENFÜHRUNG		1	1	201.6110-510	0	VEDENÍ / GUIDE / BACKENFÜHRUNG	VEDENÍ / GUIDE / BACKENFÜHRUNG		1
2	30.6710-108	1	KOLÍK / PIN / BOLZEN	KOLÍK / PIN / BOLZEN	TYC 10	1	2	30.6710-108	1	KOLÍK / PIN / BOLZEN	KOLÍK / PIN / BOLZEN	TYC 10	1
3	30.6710-109	0	PIST / PISTON / KOLBEN	PIST / PISTON / KOLBEN	d 32	1	3	30.6710-109	0	PIST / PISTON / KOLBEN	PIST / PISTON / KOLBEN	d 32	1
4	30.7410-110	0	DRŽAK TVRDOKOVU / POA HOLDER / HM-HALTER	DRŽAK TVRDOKOVU / POA HOLDER / HM-HALTER		1	4	30.7410-110	0	DRŽAK TVRDOKOVU / POA HOLDER / HM-HALTER	DRŽAK TVRDOKOVU / POA HOLDER / HM-HALTER		1
5	30.7410-120	0	DRŽAK TVRDOKOVU / POA HOLDER / HM-HALTER	DRŽAK TVRDOKOVU / POA HOLDER / HM-HALTER		1	5	30.7410-120	0	DRŽAK TVRDOKOVU / POA HOLDER / HM-HALTER	DRŽAK TVRDOKOVU / POA HOLDER / HM-HALTER		1
6	30.7410-201	1	KOSTKA VODÍCÍ LEVA / LEAD CUBE / FÜHRUNGSKLOTZ	KOSTKA VODÍCÍ LEVA / LEAD CUBE / FÜHRUNGSKLOTZ	HR 110x70	1	6	30.7410-201	1	KOSTKA VODÍCÍ LEVA / LEAD CUBE / FÜHRUNGSKLOTZ	KOSTKA VODÍCÍ LEVA / LEAD CUBE / FÜHRUNGSKLOTZ	HR 110x70	1
7	30.7610-503	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M10X30	1	7	30.7610-503	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M10X30	1
8	31.6710-110	1	KROUZEK / RING / RING	KROUZEK / RING / RING	LH 2403210	1	8	31.6710-110	1	KROUZEK / RING / RING	KROUZEK / RING / RING	LH 2403210	1
9	90.001.25.011	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M5X25	3	9	90.001.25.011	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M5X25	3
10	90.001.25.053	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M10X55	2	10	90.001.25.053	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M10X55	2
11	90.004.20.002	0	SROUB STAVEČI / ADJUSTMENT BOLT / STELLSCHRAUBE	SROUB STAVEČI / ADJUSTMENT BOLT / STELLSCHRAUBE	SROUB M6X12	1	11	90.004.20.002	0	SROUB STAVEČI / ADJUSTMENT BOLT / STELLSCHRAUBE	SROUB STAVEČI / ADJUSTMENT BOLT / STELLSCHRAUBE	SROUB M6X12	1
12	90.005.55.019	0	SROUB 6HRANNÝ / 6 SIDED BOLT / SECHSKANTSCHRAUBE	SROUB 6HRANNÝ / 6 SIDED BOLT / SECHSKANTSCHRAUBE	SROUB M8X40	1	12	90.005.55.019	0	SROUB 6HRANNÝ / 6 SIDED BOLT / SECHSKANTSCHRAUBE	SROUB 6HRANNÝ / 6 SIDED BOLT / SECHSKANTSCHRAUBE	SROUB M8X40	1
13	90.011.27.016	0	ZAPUSTNÝ IMBUS / COUNTERSINK BOLT / SENKSCHRAUBE	ZAPUSTNÝ IMBUS / COUNTERSINK BOLT / SENKSCHRAUBE	SROUB M8X25	2	13	90.011.27.016	0	ZAPUSTNÝ IMBUS / COUNTERSINK BOLT / SENKSCHRAUBE	ZAPUSTNÝ IMBUS / COUNTERSINK BOLT / SENKSCHRAUBE	SROUB M8X25	2
14	90.100.55.005	0	MATICE / NUT / MÜTTER	MATICE / NUT / MÜTTER	MATICE - M8	1	14	90.100.55.005	0	MATICE / NUT / MÜTTER	MATICE / NUT / MÜTTER	MATICE - M8	1
15	90.154.50.003	0	PODLOŽKA / WASHER / UNTERLEGSCHIEBE	PODLOŽKA / WASHER / UNTERLEGSCHIEBE	10x16x0.50	2	15	90.154.50.003	0	PODLOŽKA / WASHER / UNTERLEGSCHIEBE	PODLOŽKA / WASHER / UNTERLEGSCHIEBE	10x16x0.50	2
16	90.350.07.005	0	PRUŽINA TALIROVA / DISC SPRING / TELLERFEDER	PRUŽINA TALIROVA / DISC SPRING / TELLERFEDER	20X10.2X1	8	16	90.350.07.005	0	PRUŽINA TALIROVA / DISC SPRING / TELLERFEDER	PRUŽINA TALIROVA / DISC SPRING / TELLERFEDER	20X10.2X1	8
17	95.001.044	0	LOŽISKO / BEARING / LAGER	LOŽISKO / BEARING / LAGER	609 ZRS	2	17	95.001.044	0	LOŽISKO / BEARING / LAGER	LOŽISKO / BEARING / LAGER	609 ZRS	2
18	95.800.002	0	SEGR HRIDEL. / OUTSIDE SAFETY RING / SICHERUNGSRING AUSSEN	SEGR HRIDEL. / OUTSIDE SAFETY RING / SICHERUNGSRING AUSSEN	POJISTNÝ KROUZEK 8	1	18	95.800.002	0	SEGR HRIDEL. / OUTSIDE SAFETY RING / SICHERUNGSRING AUSSEN	SEGR HRIDEL. / OUTSIDE SAFETY RING / SICHERUNGSRING AUSSEN	POJISTNÝ KROUZEK 8	1

I.ZRUS.SOUC.30.6710-110 A NAHR.31.6710-110. 175/ZM178 28.7.2015 SLEZACKOVA

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz./Position/Position;  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung


### 7.38. Vedení / Guide / Backenführung

Císlo sestavy 201.6110-510		Název sestavy VEDENÍ / GUIDE / BACKENFÜHRUNG			
Poz.	Objednací číslo	Ver.	Název položky	Rozeber	Ks
1	30.6010-104	1	EXCENTR / CAM / EXZENTER	SK 22	2
2	30.6010-108	0	KROUZEK DISTANČNÍ / DISTANCE RING / DISTANZRING	Tr 25x5	1
3	30.6110-502	0	KOSTKA VODÍČI / LEAD CUBE / FÜHRUNGSKLOTZ	HR 80x50	1
4	90.100.55.007	0	MATICE / NUT / MUTTER	MATICE - M12	2
5	90.150.50.008	0	PODLOŽKA / WASHER / UNTERLEGSCHIBE	PODLOŽKA 15	3
6	95.001.015	0	LOŽISKO / BEARING / LAGER	6202 2RS	4

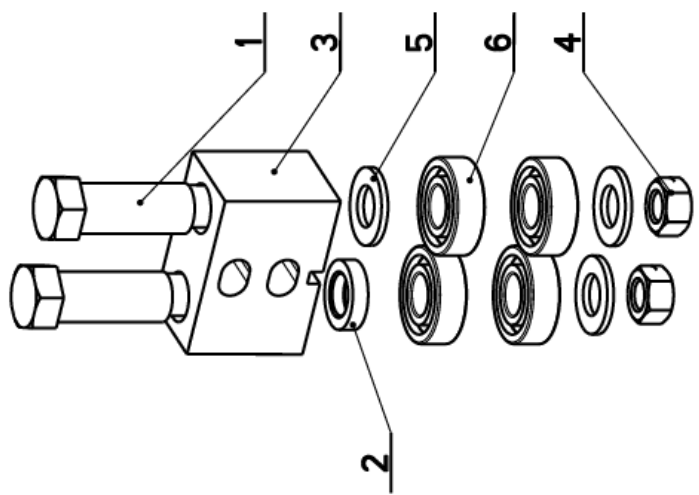

### 7.39. Pohon / Drive / Antrieb

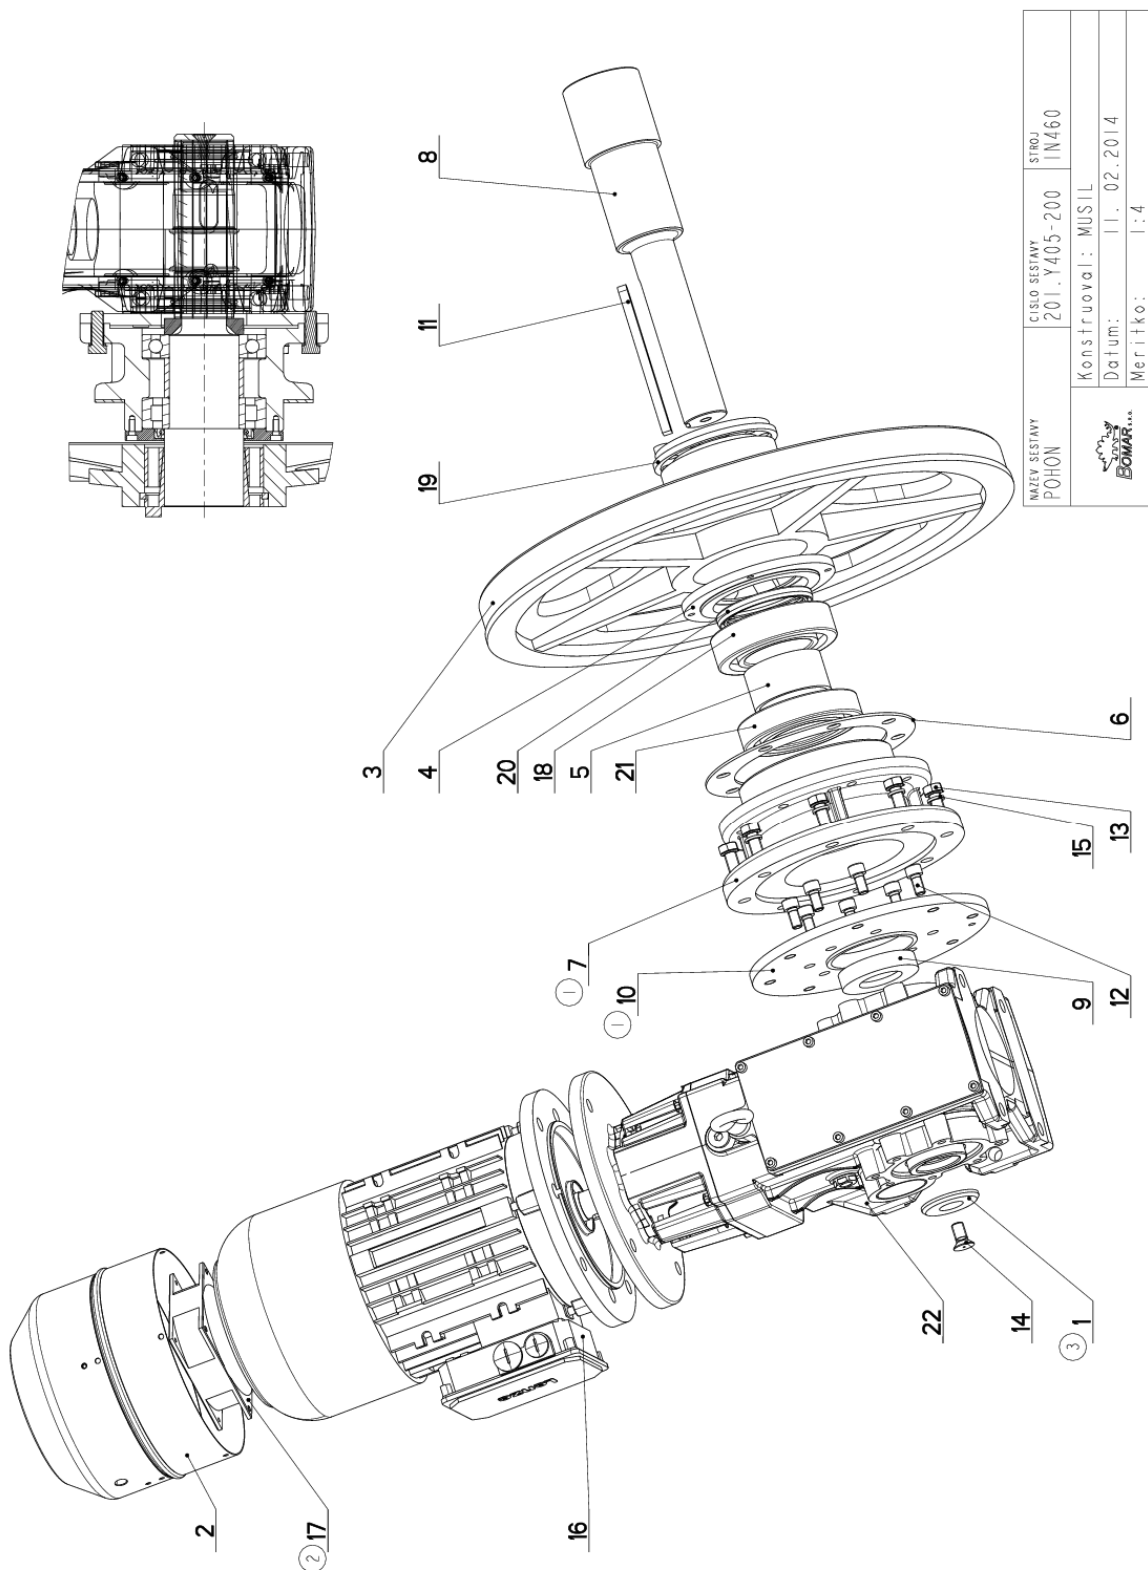

## 7.40. Kusovník / Piece list / Stückliste - Pohon / Drive / Antrieb

Císlo Sestavy 201.Y405-200		Ver. 3		Název sestavy POHON/DRIVE / ANTRIEB	
Poz.	Objednací číslo	Ver.	Název položky	Rozměr	Ks
1	30.0804-009 (3)	2	PODLOŽKA / WASHER / UNTERLEGSCHIEBE	d 60	1
2	30.4304-018	4	VENTILATOR / VENTILATOR / VENTILATOR		1
3	30.6005-001	4	KOLO HNACÍ / DRIVE WHEEL / ANTRIEBSRAD	ODLITEK	1
4	30.6105-604	1	VÍKO / COVER / DECKEL	P 12x159	1
5	30.6105-605	0	KROUZEK DISTANČNÍ / DISTANCE RING / DISTANZRING	TR 80x5	1
6	30.6105-607	0	KROUZEK DISTANČNÍ / DISTANCE RING / DISTANZRING	P 4x220	1
7	30.Y405-505 (1)	0	PŘÍRUBA / FLANGE / FLANSCH	ODLITEK	1
8	30.Y405-202	0	HRDEL / SHAFT / WELLE	d 90	1
9	30.Y405-203	0	KROUZEK DISTANČNÍ / DISTANCE RING / DISTANZRING	d 80	1
10	30.Y405-205 (1)	0	PŘÍRUBA / FLANGE / FLANSCH	P 15x250	1
11	30.Y605-002	0	PERO / SPRING / FEDER	HR. 14x9	1
12	90.001.25.046	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M10X20	7
13	90.005.55.033	0	SROUB 6HRANNÝ / 6 SIDED BOLT / SECHSKANTSCHRAUBE	SROUB M12X35	8
14	90.011.27.025	0	ZAPUSTNÝ IMBUS / COUNTERSINK BOLT / SENKSCHRAUBE	SROUB M12X25	1
15	90.158.50.009	0	PODLOŽKA PŘÍZNA / SPRING WASHER / FEDERSCHIEBE	PODLOŽKA 12	8
16	91.001.117	0	ELEKTROMOTOR / ELECTRIC MOTOR / ELEKTROMOTOR	4kW 4P B5 112	1
17	91.015.126 (2)	0	VENTILATOR / VENTILATOR / VENTILATOR	VENTILATOR RDH1238.B2	1
18	95.201.007	0	LOŽISKO / BEARING / LAGER	VALEČKOVÁ L. 1RADA	1
19	95.825.001	0	POUZDRO UPÍNAČÍ / FIXING SLEEVE / SPANNHÜLSE	KTR210 - 80x120	1
20	95.830.052	0	GUFERO / GIT SEAL / DICHTUNG	GUFERO 80X100X10	1
21	95.001.XXX	0	KUL. LOŽ. 1 RADE / /	6214A	1
22	99.003.020	0	PŘEVODOVKA KUZELOCEL / CONICAL TRANSMISSION / KEGLRADGETRIEBE	MBH80C PAM112	1


1. ZRUS.PŘÍRUBA 30.6105-608,30.Y405-201 A NAHR.30.R405-505,30.Y405-205. 025/ZM029 8.2.2012 SLEZACKOVA


2. ZRUS.VENTILATOR 91.015.100 A NAHR.91.015.126. 074/ZM018 11.2.2014 SLEZACKOVA

3. ZRUS.PODLOŽKA 30.1804-010 A NAHR.30.0804-009. 100/ZM123 30.5.2014 SLEZACKOVA

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version); Název sestavy/Assembly title/Name der Baugruppe; Pozice (Pos./Position/Position);  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

## 7.41. Napínání / Tensioning / Spannung

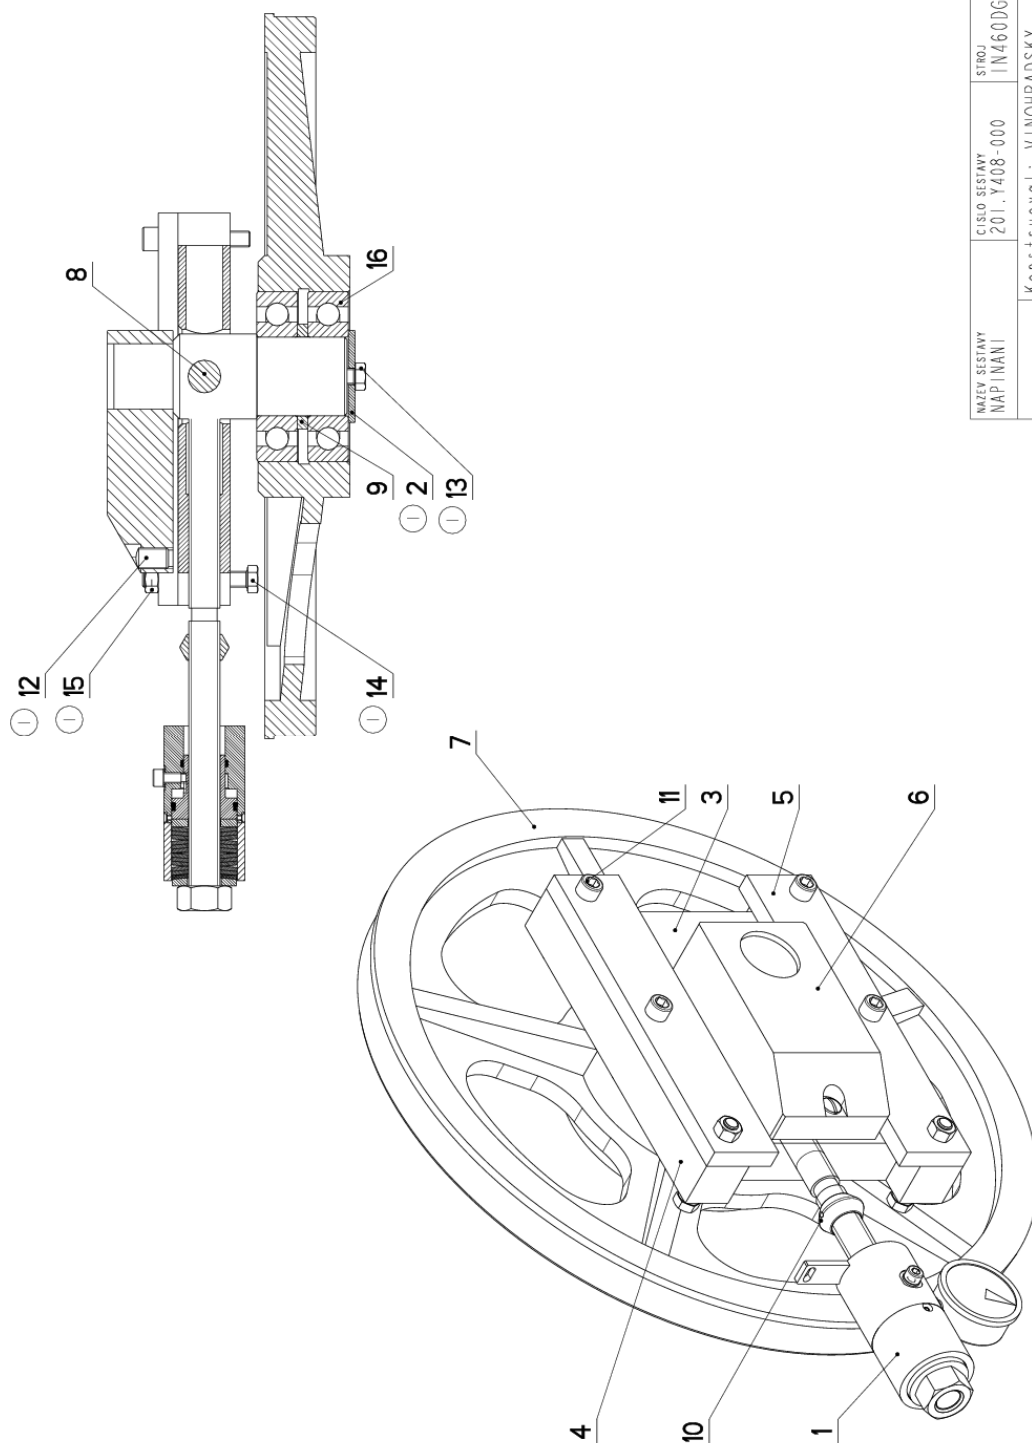

NAZEV SESTAVY NAPÍNÁNÍ	CÍSLO SESTAVY 201.Y408-000	STROJ IN460DGH
		Konstruoval: VINOHRADSKY
		Datum: 24. 08. 2015
		Meritko: 33:100


## 7.42. Kusovník / Piece list / Stückliste - Napínání / Tensioning / Spannung


Císlo Sestavy 201. Y408-000		Ver. 1		Název sestavy NAPINANI / TENSIONING / SPANNUNG	
Poz.	Objednací číslo	Ver.	Název položky	Rozev	Ks
1	201.6107-350	2	VALEC / ROLLER / ZYLINDER	SESTAVA	1
2	30.1804-014 (1)	0	PODLOZKA / WASHER / UNTERLEGSCHIBE	P 5x70	1
3	30.6008-001	1	KOSTKA NAPINANI / TENSIONING CUBE / BANDSPANNUNGSWÜRFEL	HR 160x40	1
4	30.6008-002	0	LISTA VODICI / LEAD TRIM / FÜHRUNGSELEISTE	HR 40x40	2
5	30.6008-003	0	LISTA VODICI / LEAD TRIM / FÜHRUNGSELEISTE	HR 60x15	2
6	30.6008-004	2	NAPINANI / TENSIONING / SPANNUNG		1
7	30.6008-006	5	KOLO NAPINACI / TENSIONING WHEEL / UMLENKRAD		1
8	30.6008-014	1	CEP NAPINANI / TENSIONING LUG / SPANNUNGSBOLZEN	d 25 h6	1
9	30.6708-002	1	KROUZEK DISTANCI / DISTANCE RING / DISTANZRING	TRUBKA 82.5x12.5	1
10	30.7208-006	0	DORAZ / STOP PIECE / ANSCHLAG	TYC 38	1
11	90.001.25.064	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M12x70	5
12	90.002.20.028 (1)	0	SROUB STAVECI / ADJUSTMENT BOLT / STELLSCHRAUBE	SROUB M16x1.5x25	1
13	90.005.55.030 (1)	0	SROUB 6HRANNY / 6 SIDED BOLT / SECHSKANTSCHRAUBE	SROUB M12x20	1
14	90.005.55.036 (1)	0	SROUB 6HRANNY / 6 SIDED BOLT / SECHSKANTSCHRAUBE	SROUB M12x80	2
15	90.100.55.007 (1)	0	MATICE / NUT / MUTTER	MATICE - M12	2
16	95.001.041	0	LOZISKO / BEARING / LAGER	6312A	2

1. ZRUS. 2xSROUB IMBUS M12x70(90.0001.25.064) A NAHR. 2xSROUB 6HR M12x80(90.005.55.036), PRID. 2xMATICE M12(90.100.55.007),  
1xSTAVECI SROUB M16x25(90.002.20.028), ZRUS. PODLOZKA 30.1804-010 A NAHR. 30.1804-014, ZRUS. SROUB ZAPUSTNY M12x20  
(90.011.27.009) A NAHR. SROUB 6HR M12x20(90.005.55.030 164/ZM187 24.8.2015 SLEZACKOVA

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz./Position/Position;  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozev/Stock size/Abmessung

## 7.43. Válec / Roller / Zylinder

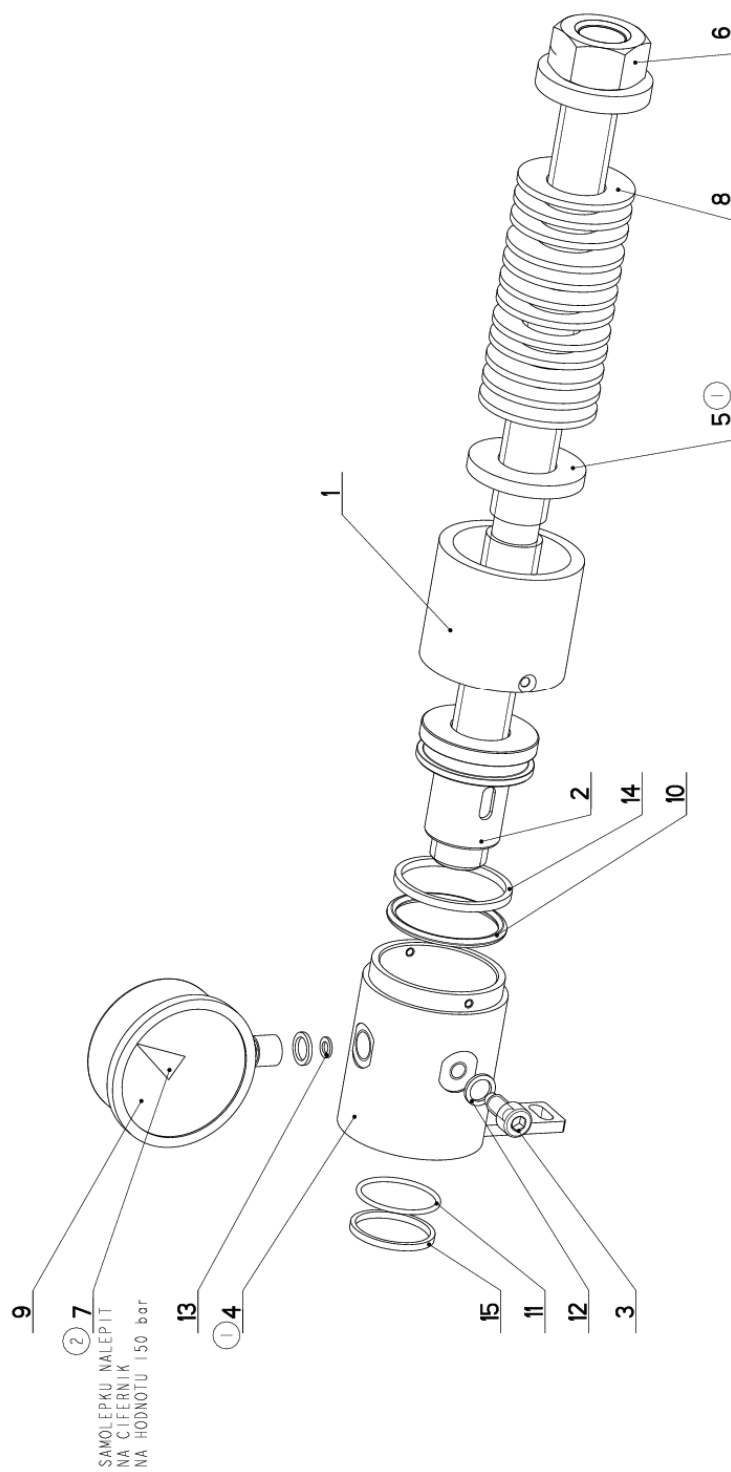

NAZEV SESTAVY VALEC	CISLO SESTAVY 201.6107-350	STROJ EX-620
		Konstruoval: MAJZNER
		Datum: 08. 02. 2016
		Meritko: 3:5



## 7.44. Kusovník / Piece list / Stückliste - Válec / Roller / Zylinder


Císlo Sestavy 201.6107-350		Ver. 2		Název sestavy VALEC/ROLLER/ZYLINDER	
Poz.	Objednací číslo	Ver.	Název položky	Rozev	Ks
1	30.6008-013	0	TRUBKA / TUBE / ROHR	TR 62x10	1
2	30.6107-352	0	PIST / PISTON / KOLBEN	d 55	1
3	30.6107-354	1	SROUB / BOLT / SCHRAUBE	M8x20	1
4	30.6107-358 (1)	0	VALEC / ROLLER / ZYLINDER		1
5	30.6107-359 (1)	1	DISTANC / DISTANCE / DISTANZ	P 8x50	1
6	30.6108-008	2	SROUB / BOLT / SCHRAUBE		1
7	31.0899-004 (2)	0	SAMOLEPKA / STICKER / AUFLEBER		1
8	90.350.02.004	0	TAL. PRUŽINA DIN 2093 A / DISC SPRING / TELLERFEDER	50x25.4x3	12
9	92.080.004	0	MANOMETR / MANOMETER / MANOMETER	d 63 - 250bar	1
10	96.001.033	0	KROUZEK O STATICKY / STATIC O RING / O-RING STATISCH	ORAR00224-N70	1
11	96.002.063	0	KROUZEK O STATICKY / STATIC O RING / O-RING STATISCH	ORAR00125-N70	1
12	96.082.001	0	KROUZEK TESNICI / SEAL RING / DICHUNGSRING	10/14x1.5 CU	2
13	96.082.005	0	KROUZEK TESNICI / SEAL RING / DICHUNGSRING	5x8.8x1	1
14	96.083.010	0	KROUZEK / RING / RING	B62700446-PT00	1
15	96.083.011	0	KROUZEK / RING / RING	BU2000320-PT00	1

1. ZRUSENY SOUCASTI 30.6008-355, 30.6008-351, 95.750.003, 30.6008-352, 90100.55.010, NOVA SOUCAST 30.6107-358,  
30.6107-359, 29.3.2007 RYSAVY ZM 133

2. PRIDANA SAMOLEPKA SÍPKA 31.0899-004. 101/ZM131 29.5.2009 SLEZACKOVA -

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version); Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz./Position/Position);  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozev/Stock size/Abmessung

## 7.45. Podavač / Feeder / Vorschub

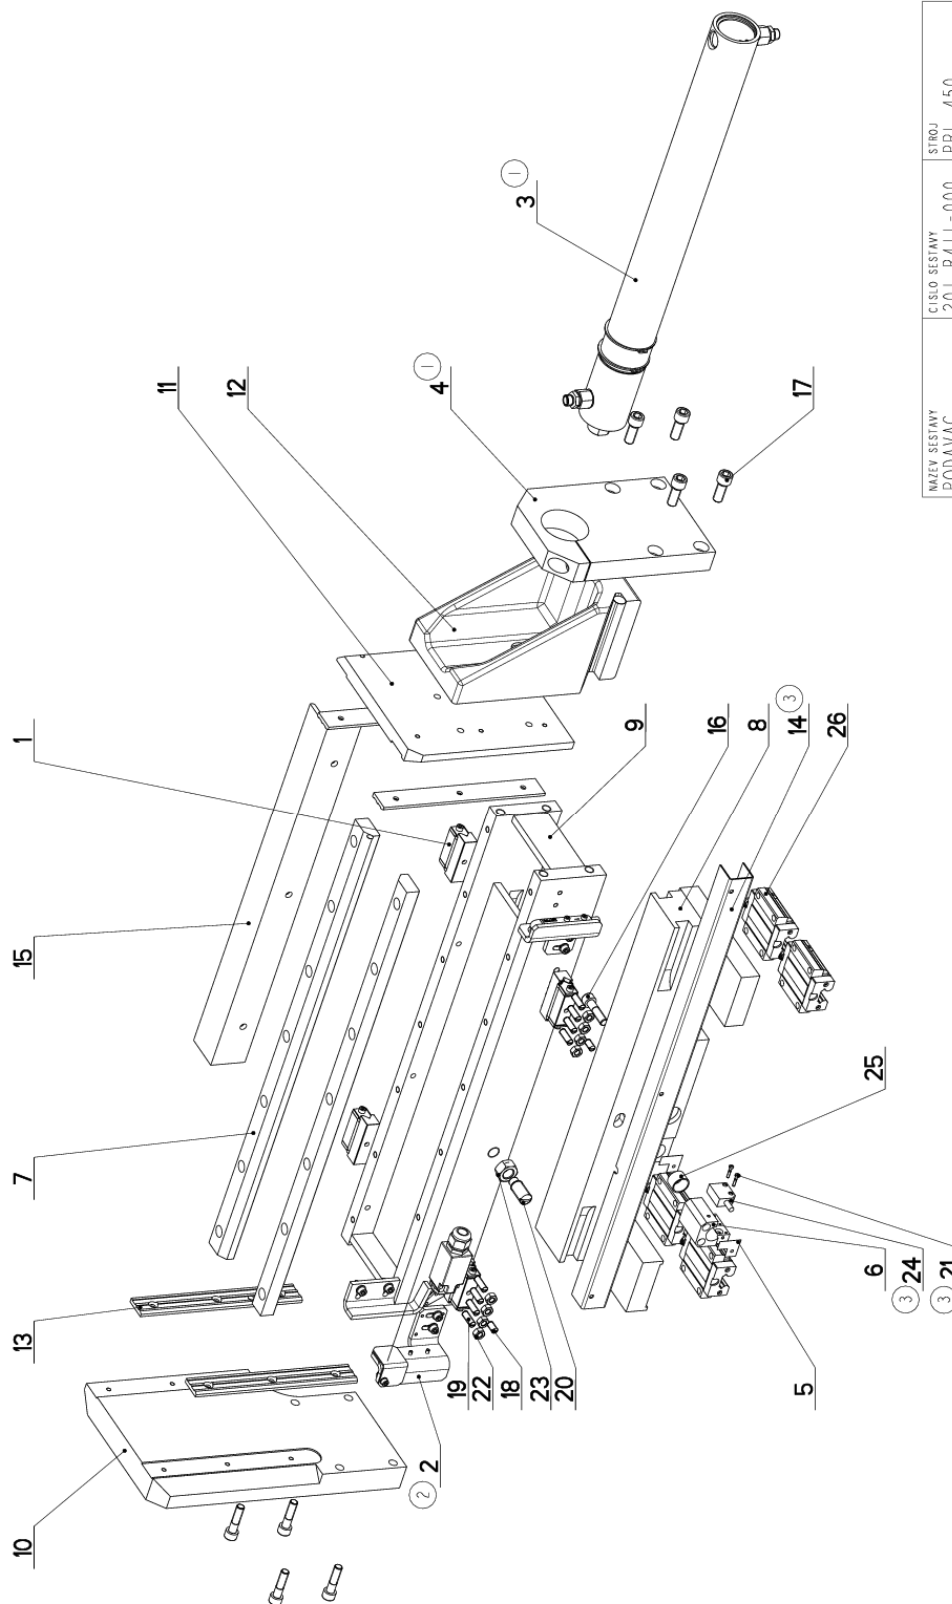

NAZEV SESTAVY PODAVAC	CISLO SESTAVY 201.R411-000	STROJ PRL 450
Konstruoval: MUSIL		Datum: 15. 10. 2012
Meritko: 1:5		

## 7.46. Kusovník / Piece list / Stückliste - Podavač / Feeder / Vorschub

Císlo Sestavy 201.R411-000		Ver. 3		Název sestavy PODAVAC/FEEDER/VORSCHUB	
Poz.	Objednací číslo	Ver.	Název položky	Rozebr	Ks
1	201.9311-200	0	VAL. ELEMENT / /		4
2	201.R311-030 (2)	1	ZAVORA OPTICKA / OPTICAL GATE / LICHTSCHRANKE		1
3	201.R407-030 (1)	0	VALEC SVERAHU / VICE CYLINDER / SCHRAUBSTOCKZYLINDER		1
4	30.0603-006 (1)	0	CELO / HEAD / STIRN	HR 150x 30	1
5	30.2911-030	0	STERAC / WIPER / ABSTREIFER	P 0.2-26.5	2
6	30.K511-110	2	DRZAK / HOLDER / HALTER	HR 50x50	1
7	30.R403-004	1	VEDENÍ / GUIDE / BACKENFÜHRUNG	HR 40x25	2
8	30.R411-001	1	PODAVAC / FEEDER / VORSCHUB		1
9	30.R411-002	3	PODAVAC / FEEDER / VORSCHUB		1
10	30.R411-003	2	CELIST / BOARD / PLATTE		1
11	30.R411-009	1	CELIST / JAW / BÄCKE	P 35x213	1
12	30.R411-014	0	CELIST PORYBLIVA / MOVING JAW / BEWEGLICHE BÄCKE	P 20x213	1
13	30.R411-035	2	LISTA CELISTI / JAW TRIM / BACKENLEISTE	ODLITEK	1
14	30.R411-036 (3)	0	KRYT / COVER / ABDECKUNG	HR 30x10	4
15	30.R411-038	0	STUL / TABLE / TISCH	P 1.5x89	1
16	90.001.25.050	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	L 50X6	1
17	90.001.25.058	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M10X40	5
18	90.002.20.012	0	SROUB STAVECI / ADJUSTMENT BOLT / STELLSCHRAUBE	M12X30	4
19	90.002.20.013	0	SROUB STAVECI / ADJUSTMENT BOLT / STELLSCHRAUBE	SROUB M8X16	2
20	90.004.20.019	0	SROUB STAVECI / ADJUSTMENT BOLT / STELLSCHRAUBE	SROUB M8X25	8
21	90.012.50.001 (3)	0	SROUB VALCOVY / ROLLER BOLT / ZYLINDERSCHRAUBE	SROUB M16X40	1
22	90.100.55.005	0	MATICE / NUT / MUTTER	SROUB M3X16	2
23	90.100.55.008	0	MATICE / NUT / MUTTER	MATICE _ M8	8
24	91.270.006 (3)	0	SNIMAC MAGNET. / MAGNETIC SENSOR / MAGNETSENSOR	MATICE _ M16	1
25	95.700.003	0	POUZDRO / SLEEVE / BÜCHSE	20X15	1
26	99.201.046	0	VEDENÍ LINEARNÍ / LINEAR GUIDE / LINEARE FÜHRUNG	MSA25E SS FO N	4

1. ZRUS.DESKA 30.R411-006,ZRUS.VALEC 201.R407-040 A NAHR.201.R407-030,ZRUS.CELO 30.R411-005 A NAHR.30.0603-006.


132/ZM157 23.6.2011 SLEZACKOVA

2.PRIDANA OPTICKA ZAVORA 201.R311-030. 155/ZM207 9.8.2011 SLEZACKOVA

3.PRIDAN KRYT 30.R411-036,SNIMAC 91.270.006,2XSROUB M3x16(90.012.50.001).1967ZM246,25.8.2012,KUDLACEK

## 7.47. Element válečkový / Roller element / Rollenelement

Číslo Sestavy 201.9311-200		Název sestavy ELEMENT VALEČKOVY/ROLLER ELEMENT/ROLLELEMENT	
Verf.	0		
Poz.	Objednací číslo	Název položky	Rozměr
1	30.2911-206	PŘILOŽKA / STRAP / LASCHE	P 2x20
2	30.4311-203	VALEČEK / CYLINDER / ROLLE	d 10
3	30.9311-201	LISTA / /	HR 20x20
4	30.9311-202	LISTA / /	HR 20x20
5	31.2911-204	STERAC / WIPER / ABSTREIFER	PLAST. VYLISEK
6	31.9311-205	PRACHOVKA / DUST COVER / STAUBSCHUTZ	VYLISEK PLAST
7	90.001.25.008	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M5X12

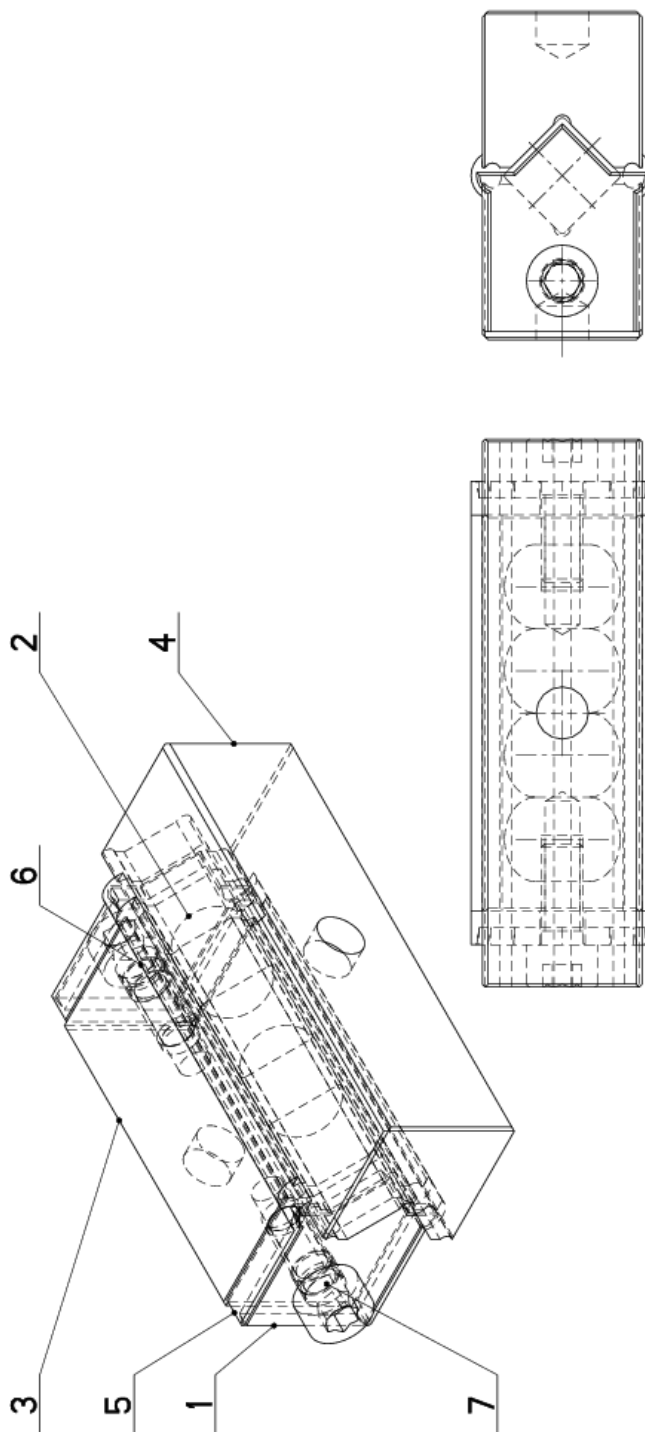


Číslo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz./Position/Position;  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

## 7.48. Závora optická / Optical gate / Lichtschanke


Císlo Sestavy		Verz.		Název sestavy	
201.R311-030		2		ZÁVORA OPTICKÁ/OPTICAL GATE/LICHTSCHANKE	
Verz.	Objednací číslo	Verz.	Název položky	Rozevner	Ks
0	30.R311-033	0	DORAZ / HOLDER / HALTER	P 6x56	1
0	30.R311-034 (1)	0	KRYT / HOLDER / HALTER	P 2x35	1
0	30.R311-035 (2)	0	DRZAK / HOLDER / HALTER		1
0	30.R311-037 (2)	0	DRZAK / HOLDER / HALTER		1
0	90.001.25.009 (1)	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M5x16	1
0	90.001.25.017	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M6x16	6
0	90.100.55.003 (1)	0	MATICE / NUT / MUTTER	MATICE - M5	1
0	90.150.50.003 (1)	0	PODLOZKA / WASHER / UNTERLEGSCHIEBE	PODLOZKA 5,3	2
0	90.150.50.004	0	PODLOZKA / WASHER / UNTERLEGSCHIEBE	PODLOZKA 6,4	6
0	91.173.010	0	SPINAC KONC.S KLADK. / END SWITCH WITH PULLEY / ENDSCHALTER MIT ROLLE	PZ-FR605-M2	1
0	91.400.059 (2)	0	SNIMAC OPTICKY / OPTICAL SENSOR / OPTISCHER SENSOR	PRIJIMAC	1
0	91.400.060 (2)	0	SNIMAC OPTICKY / OPTICAL SENSOR / OPTISCHER SENSOR	VYSILAC	1
0	91.400.061 (2)	0	SNIMAC OPTICKY / OPTICAL SENSOR / OPTISCHER SENSOR	L-US 418.1	2

1. PRIDANO - KRYTKA 30.R311-034, 1xSROUB M5x16(90.001.25.009), 1xMATICE M5(90.100.55.003), 2xPODLOZKA 5.3(90.150.003), 293/ZM267 6.11.2013 SLEZACKOVA  
 2. ZRUS.DRZAK 30.R311-031 A NAHR.30.R311-032 A NAHR.30.R311-035,ZRUS.SNIMAC 91.400.003, 91.400.004 A NAHR.91.400.059,91.400.060,30.91.400.061. 198/ZM017 22.12016 SLEZACKOVA

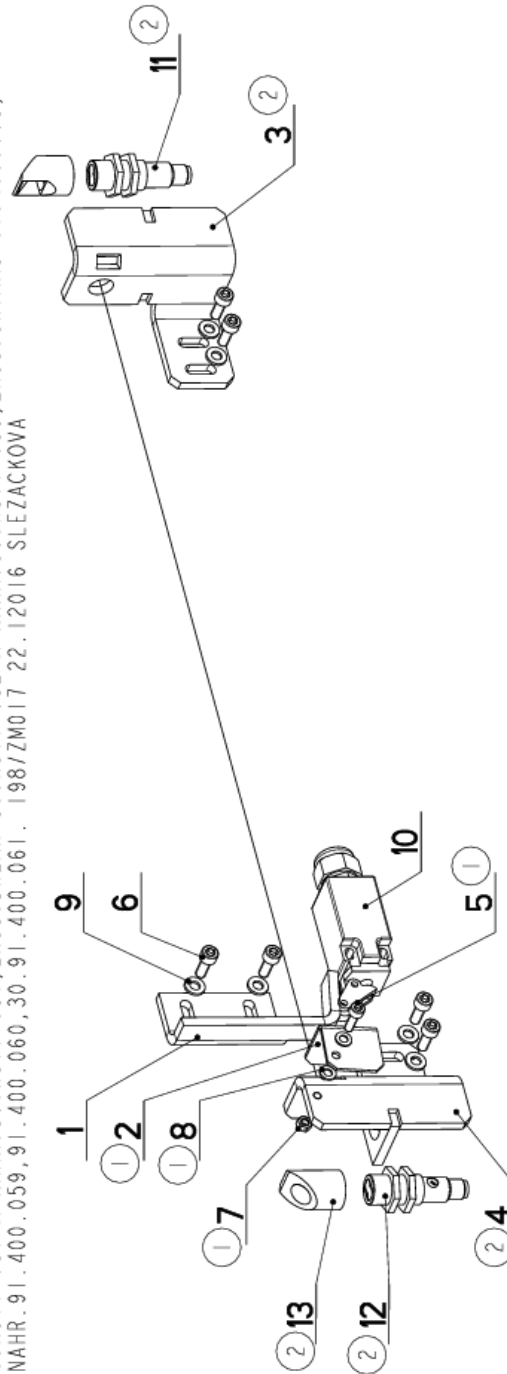

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verz (Ver./Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Pos./Position/Position;  
 Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

## 7.49. Válec svěráku / Vice cylinder / Schraubstockzylinder

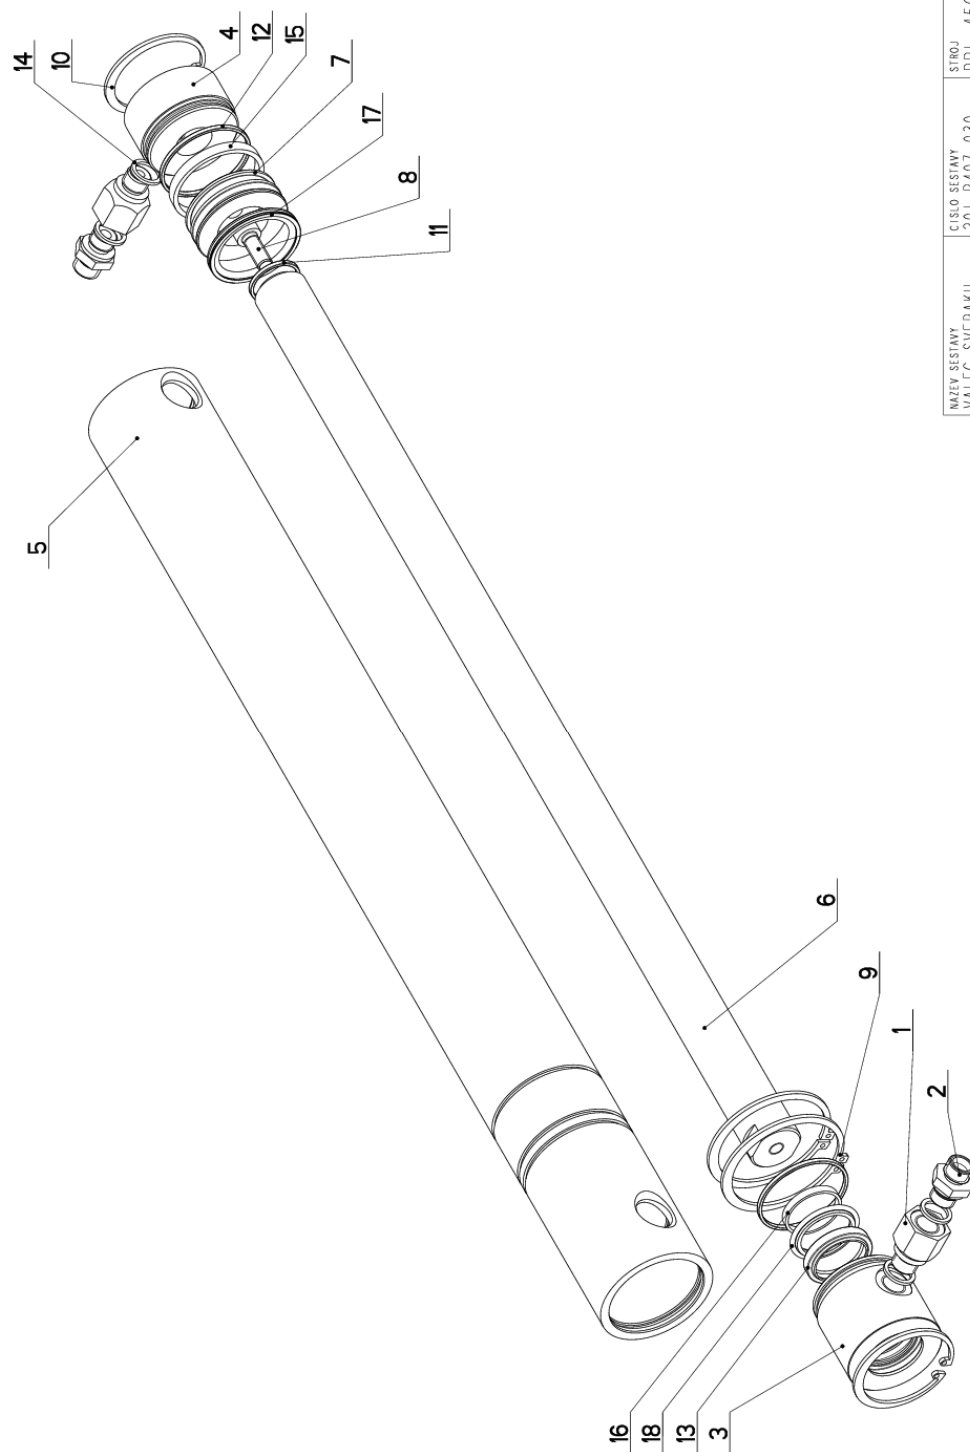


NAZEV SESTAVY VÁLEC SVĚŘÁKU	CÍSLO SESTAVY 201.R407-030	STROJ PRL 450
Konstruoval: MUSIL		Datum: 22. 07.2015
Meritko: 1:2		


## 7.50. Kusovník / Piece list / Stückliste - Válec svěráku / Vice cylinder / Schraubstockzylinder

Císlo Sestavy 201.R407-030		Ver. 0		Název sestavy VALEC SVĚRÁKU/VICE CYLINDER/SCHRAUBSTOCKZYLINDER	
Poz.	Objednací číslo	Ver.	Název položky	Rozebr	Ks
1	30.1807-005	3	SROUBENÍ / BOLTING / VERSCHRAUBUNG	6-HR 22	2
2	30.2807-109	0	SROUBENÍ PRÍME / DIRECT BOLTING / GERADE VERSCHRAUBUNG		2
3	30.C407-012	2	VÍKO / COVER / DECKEL	d 55	1
4	30.C407-111	0	VÍKO / COVER / DECKEL	d 55	1
5	30.R407-033	1	VALEC SVĚRÁKU / VICE CYLINDER / SCHRAUBSTOCKZYLINDER	TR 62/50	1
6	30.R407-034	0	PISTNICE / PISTON ROD / KOLBENSTANGE	d 28 f8	1
7	30.Y307-035	0	PIST / PISTON / KOLBEN	d 55	1
8	90.001.25.032	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	8x20	1
9	95.800.021	0	SEGR HRÍDEL. / OUTSIDE SAFETY RING / SICHERUNGSRING AUSSEN	POJISTNY KROUZEK 62	2
10	95.801.009	0	SEGR DIRA / OUTSIDE SAFETY RING / SICHERUNGSRING AUSSEN	POJISTNY KROUZEK 52	2
11	96.002.011	0	KROUZEK O DYNAMICKY / DYNAMIC O RING / O-RING DYNAMISCH	24X2	1
12	96.002.019	0	KROUZEK O DYNAMICKY / DYNAMIC O RING / O-RING DYNAMISCH	46x2 NBR 70SH	2
13	96.061.009	0	KROUZEK STÍRAČI / SCRAPER RING / ABSTREIFRING	WD2200280 Z201	1
14	96.082.002	0	TESNEVÍ / SEAL RING / DICHTUNGSRING	13/17x1.5 CU	4
15	96.084.001	0	KROUZEK VODICI / LEAD RING / FÜHRUNGSRING	GP6500500-T47	1
16	96.084.006	0	KROUZEK VODICI / LEAD RING / FÜHRUNGSRING	GR4300280-T47	1
17	96.900.001	0	TESNEVÍ KOMBINOVANE / COMBINATION SEALING / KOMBIDICHTUNG	PW4200500-Z20N	1
18	96.900.021	0	TESNEVÍ KOMBINOVANE / COMBINATION SEALING / KOMBIDICHTUNG	RSK200280-46N	1

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Pos./Position/Position;  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozebr/Stock size/Abmessung

## 7.51. Trať / Track / Bahn

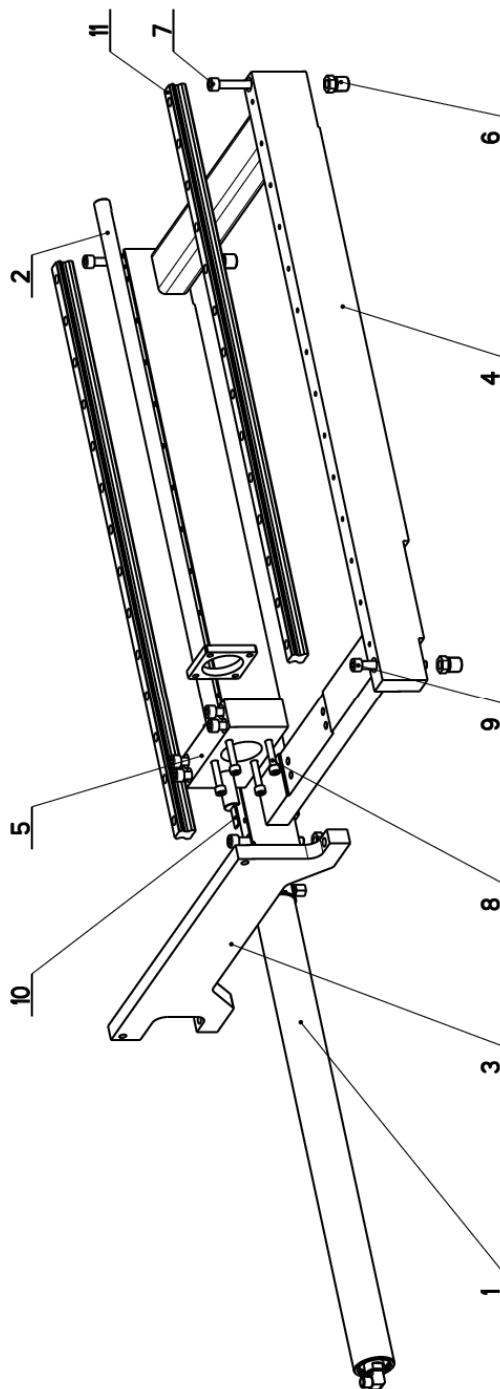

NAZEV SESTAVY TRAT	CÍSLO SESTAVY 201.R412-050	STROJ PRL450
		Konstruoval: FOLTYN
		Datum: 24. 01.2012
		Meritko: 1:5





7.52. Kusovník / Piece list / Stückliste -  
Trat' / Track / Bahn

Císlo Sestavy 201.R412-050		Ver. 0		Název sestavy TRAT/TRACK/BAHN	
Poz.	Objednací číslo	Ver.	Název položky	Rožmer	Ks
1	201.R311-150	0	VALEC SVERAKU / VICE CYLINDER / SCHRAUBSTOCKZYLINDER		1
2	30.R311-103	0	JEDNOTKA ODMEROVANI / MEASURING UNIT / MESSEINHEIT	D 20	1
3	30.R412-003	0	DESKA / BOARD / PLATTE	P 20x140	1
4	30.R412-051	0	TRAT / TRACK / BAHN		1
5	30.R412-052	0	DRZAK / HOLDER / HALTER	HR 80x40	1
6	30.R412-055	0	SROUB STAVECI / ADJUSTMENT BOLT / STELLSCHRAUBE	6HR 19	4
7	90.001.25.069	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M10X100	2
8	90.001.25.078	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M8X90	4
9	90.001.25.175	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M10X90	6
10	91.271.001	0	PASKA ELGO / /	S 10	1
11	99.200.227	0	VEDENÍ LINEARNÍ / LINEAR GUIDE / LINEARE FÜHRUNG	MSA2SR 820-20/20 N	2

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position;  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rožmer/Stock size/Abmessung

### 7.53. Válec svěráku / Vice cylinder / Schraubstockzylinder

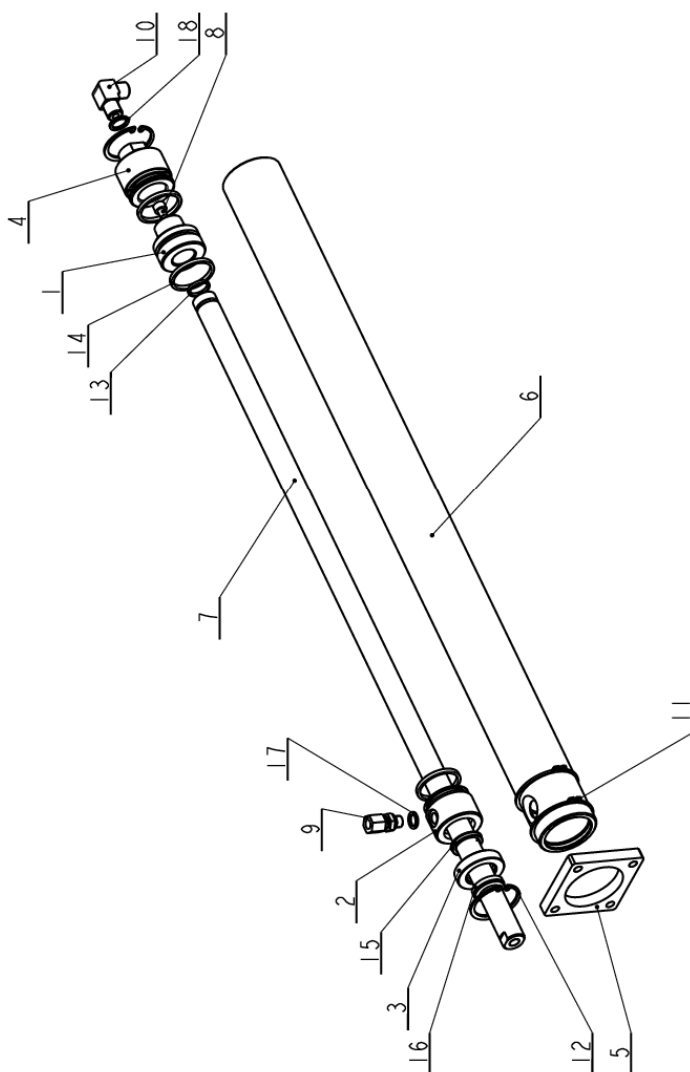


MAZEV SESTAVY VALEC SVĚRAKU	CÍSLO SESTAVY 201.R311-150	STROJ PROL IN
		Konstruoval: VINOHRADSKY
		Datum: 15. 10. 2010
		Meritko: 3:10


7.54. Kusovník / Piece list / Stückliste -  
Válec svěráku / Vice cylinder / Schraubstockzylinder

Císlo Sestavy 201.R311-150		Ver. 0		Název sestavy VALEC SVĚRAKU/VICE CYLINDER/SCHRAUBSTOCKZYLINDER	
Poz.	Objednací číslo	Ver.	Název položky	Rozev	Ks
1	30.2107-001	0	PIST / PISTON / KOLBEN	d 45	1
2	30.2107-002	0	PRIŘUBA / FLANGE / FLANSCH	TYC 45	1
3	30.2107-003	0	VÍKO / COVER / DECKEL	d 45	1
4	30.2107-004	0	VÍKO / COVER / DECKEL	d45	1
5	30.0311-109	0	PŘILOŽKA / STRAP / LASCH	HR 70x10	1
6	30.R311-151	0	VALEC PODAVACE / FEEDER CYLINDER / VORSCHUBWALZE	TRUBKA 52/40	1
7	30.R311-152	0	PISTNICE / PISTON ROD / KOLBENSTANGE	TYC 20	1
8	90.001.25.019	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M6x25	1
9	92.002.102	0	SROUBENÍ / BOLTING / VERSCHRAUBUNG	S-GEV-BLLR	1
10	92.004.001		SROUBENÍ UHLOVE / ANGLE BOLTING / WINKELVERSCHRAUBUNG	37701	1
11	95.800.019	0	KROUZEK POJIST.VNEJS / OUTSIDE SAFETY RING / SICHERUNGSRING AUßEN	POJISTNY KROUZEK 52	2
12	95.801.006	0	KROUZEK POJIST.VNITR / INSIDE SAFETY RING / SICHERUNGSRING INNEN	POJISTNY KROUZEK 42	2
13	96.002.007	0	KROUZEK O DYNAMICKY / DYNAMIC O RING / O-RING DYNAMISCH	16x2	1
14	96.002.017	0	KROUZEK O DYNAMICKY / DYNAMIC O RING / O-RING DYNAMISCH	34x3	3
15	96.041.002		TESNENÍ / SEALING / DICHTUNG	20x28x4	1
16	96.060.002	0	KROUZEK STIRACÍ / SCRAPER RING / ABSTREIFRING	KROUZEK STIRACÍ 20	1
17	96.082.001	0	TESNENÍ / SEALING / DICHTUNG	KROUZEK CU 10/14	1
18	96.082.002	0	TESNENÍ / SEALING / DICHTUNG	KROUZEK CU 13/17	1

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Pos./Position/Position;  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozev/Stock size/Abmessung

### 7.55. Plot / Fence / Zaun

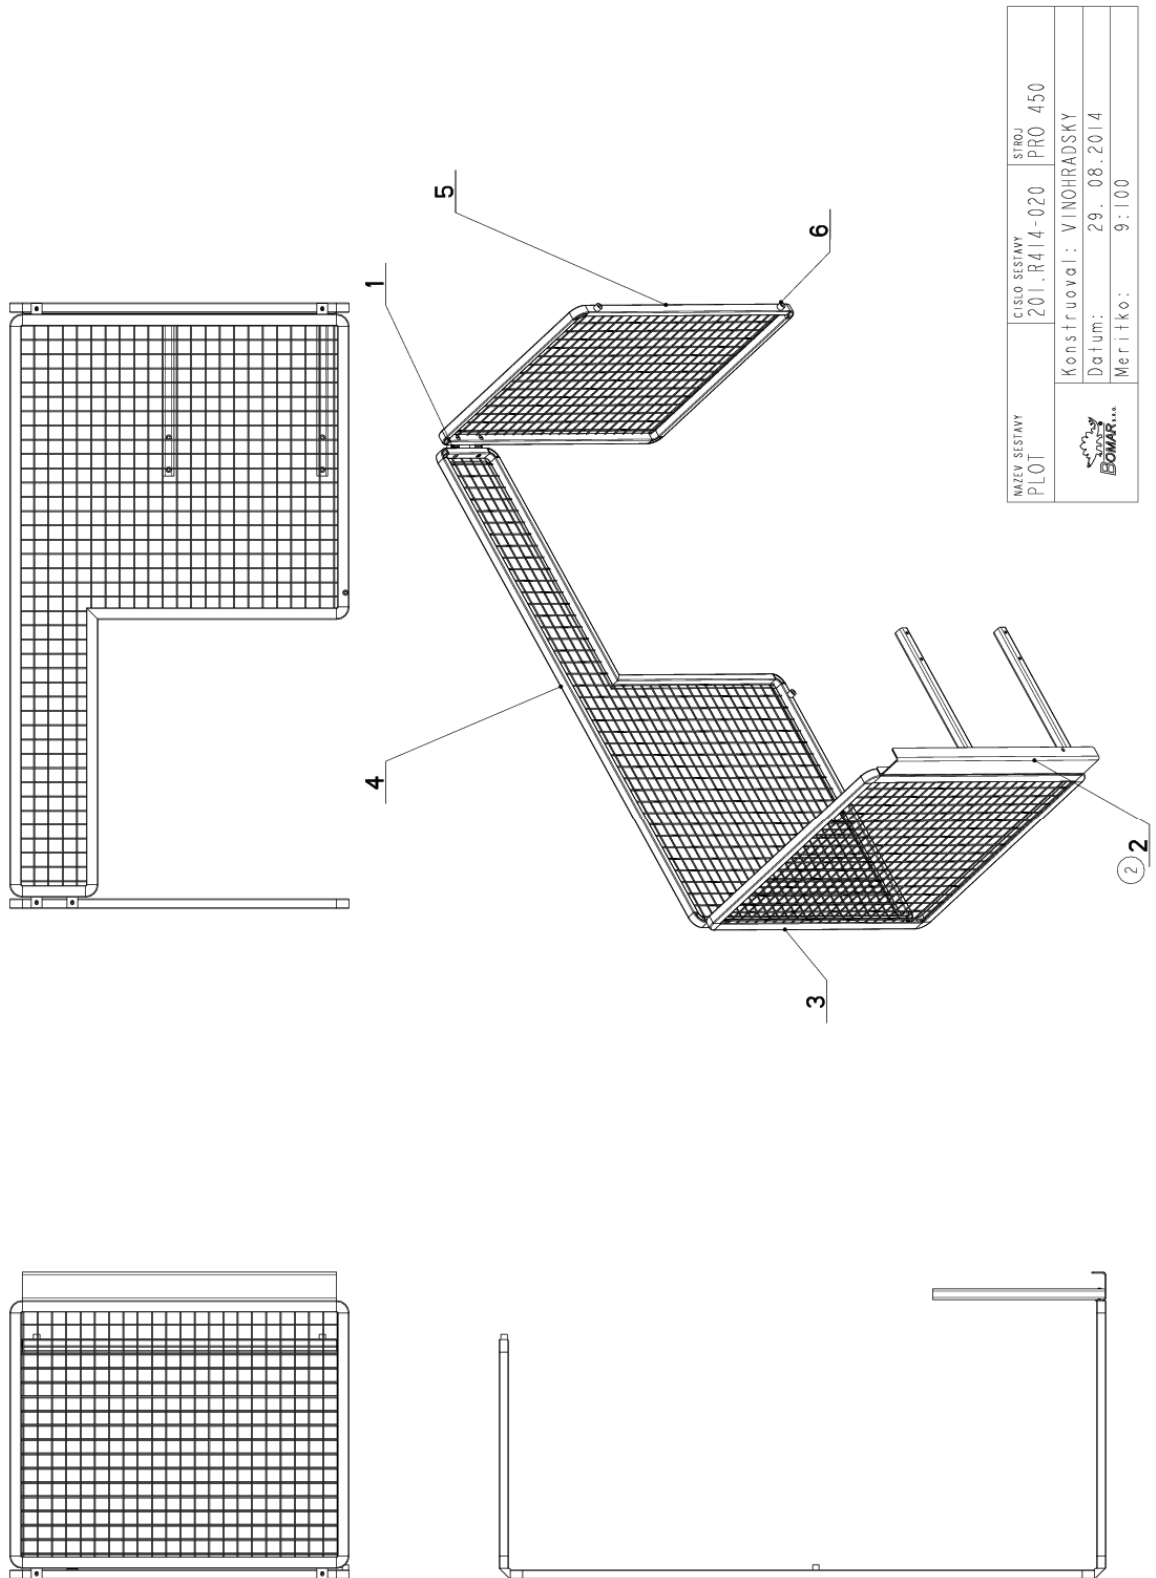

NAZEV SESTAVY PLOT	CISLO SESTAVY 201.R414-020	STROJ PRO 450
		Konstruoval: VINOHRADSKY
		Datum: 29. 08. 2014
		Meritko: 9:100

## 7.56. Kusovník / Piece list / Stückliste - Plot / Fence / Zaun

Císlo Sestavy 201.R414-020		Verz. 2		Název sestavy PLOT/FENCE/ZAUN	
Poz.	Objednací číslo	Verz.	Název položky	Rozebr	Ks
1	30.R214-024	0	DRZAK / HOLDER / HALTER	TYC 30x20	4
2	30.R314-031 (2)	0	DRZAK / HOLDER / HALTER		1
3	30.R414-021	0	PLOT / FENCE / ZAUN		1
4	30.R414-022	0	PLOT / FENCE / ZAUN		1
5	30.R414-023	0	PLOT / FENCE / ZAUN		1
6	95.005.013		KROUZEK / /		3


1. ZRUSEN DISTANC 30.R414-025. 090/ZM305 30.10.2012 SLEZACKOVA

2. ZRUSEN DRZAK 30.R414-031 A NAHR. 30.R314-031. 159/ZMI82 29.8.2014 LATAL

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verz. (Verz./Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Pos./Position/Position;  
Objednací číslo/Purchase order number./Bestellnummer; Název položky/Volume title/Name der Position; Rozebr/Stock size/Abmessung

## 7.57. Válec pomocný / Auxiliary cylinder / Hilfszylinder


Císlo Sestavy 201.R414-250		Ver. 0		Název sestavy VALEC POMOCNY/AUXILIARY CYLINDER/HILFSZYLINDER	
Poz.	Objednací číslo	Ver.	Název položky	Rožmer	Ks
1	30.R414-251	0	VALEC POMOCNY / AUXILIARY CYLINDER / HILFSZYLINDER		1
2	30.5511-009	0	EXCENTR / CAM / EXZENTER	6HR 24	2
3	30.R414-252	0	TYC / POLE / STANGE	d 15	1
4	90.150.50.008	0	PODLOZKA / WASHER / UNTERLEGSCHIBE	PODLOZKA 15	2
5	95.001.015	0	LOZISKO / BEARING / LAGER	6202 2RS	2
6	30.R414-253	0	VALECEK / CYLINDER / ROLLE	TR 42x7	1
7	90.003.20.001	0	SROUB STAVECI / ADJUSTMENT BOLT / STELSCHRAUBE	SROUB M5x6	2
8	94.008.003	0	PANA UPINACI / ATTACHMENT LEVER / SPANNHEBEL	MBx40	1

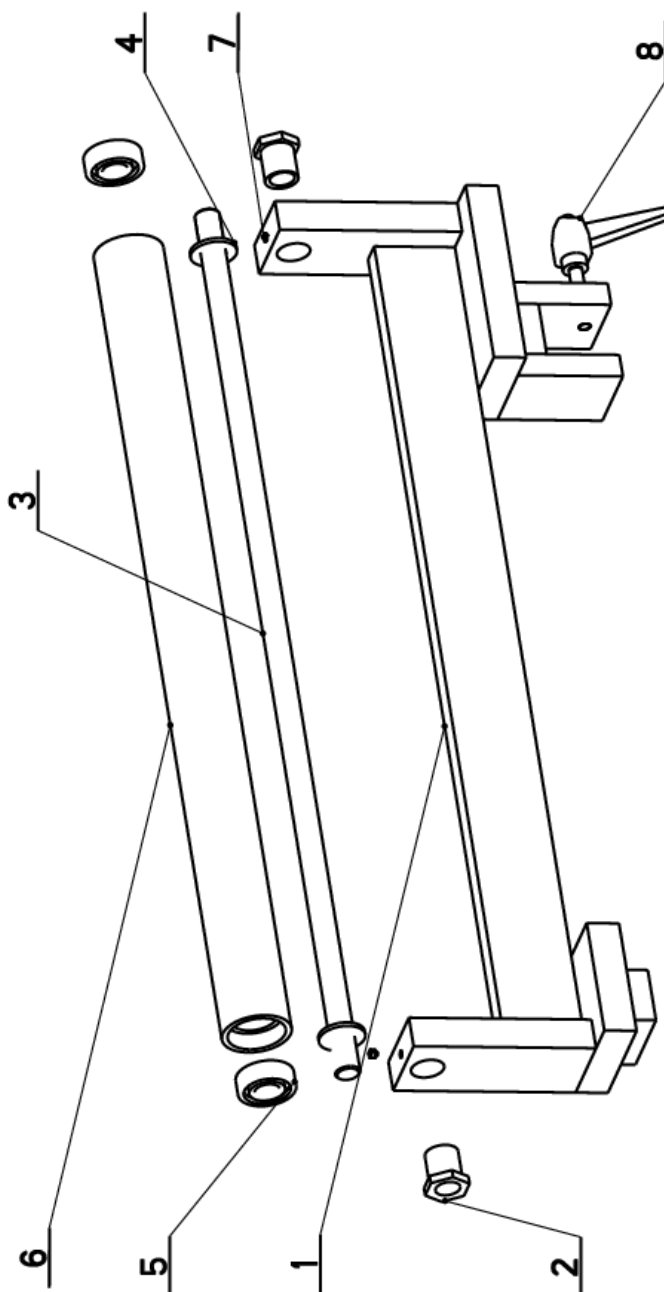


Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz./Position/Position;  
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rožmer/Stock size/Abmessung



## 7.58. Válec zvedací / Lifting cylinder / Hebezyylinder

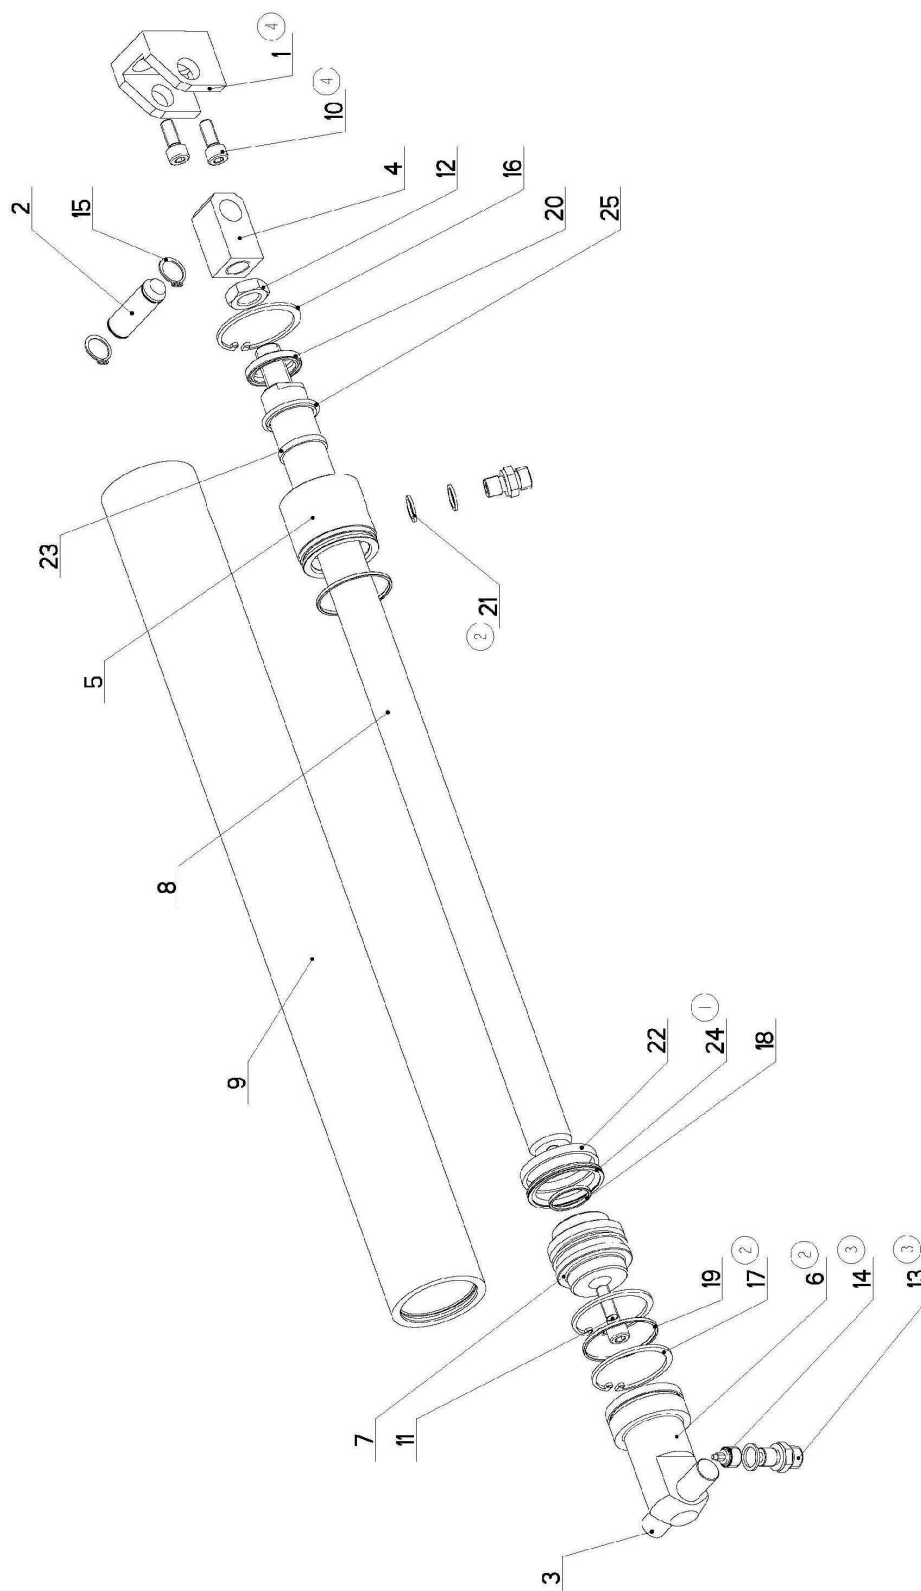

NAZEV SESTAVY VÁLEC ZVEDACÍ	ČÍSLO SESTAVY 201.Y407-010	STROJ IN460GH
		
Konstruována: MUSIL		
Datum: 10. 04. 2014		
Měřítko: 2:5		




**7.59. Kusovník / Piece list / Stückliste -  
Válec zvedací / Lifting cylinder / Hebezyylinder**

Císlo Sestavy		Ver.		Název sestavy	
201.Y407-010		4		VALEC ZVEDACÍ/LIFTING CYLINDER/HEBEZYLYNDER	
Poz.	Objednávací číslo	Ver.	Název položky	Rozměr	Ks
1	30.0807-008 (4)	3	DRŽAK / HOLDER / HALTER	HR 40x40	1
2	30.0807-009	2	CEP / LUG / BOLŽEN	d 16h9	1
3	30.8307-205	0	CEP / LUG / BOLŽEN	d 16h9	1
4	30.8607-001	0	DRŽAK / HOLDER / HALTER	HR 25x25	1
5	30.C407-012	1	VÍKO / COVER / DECKEL	d 55	1
6	30.Y307-003 (2)	3	VÍKO / COVER / DECKEL	d 55	1
7	30.Y307-012 (2)	1	PIST / PISTON / KOLBEN	d 55	1
8	30.Y407-002	0	PISTNICE / PISTON ROD / KOLBENSTANGE	d 28 f8	1
9	30.Y407-011	3	VALEC / ROLLER / ZYLINDER	TR 62/50H8	1
10	90.001.25.032 (4)	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	8x20	2
11	90.001.25.083	0	SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE	M8X30	1
12	90.101.55.003	0	MATICE / NUT / MUTTER	MATICE M16	1
13	92.002.001 (2)	0	SROUBENÍ PRŮMĚ / DIRECT BOLTING / GERADE VERSCHRAUBUNG	G 1/4"	2
14	92.151.008 (3)	0	VENTIL POJISTNÝ / SAFETY VALVE / SICHERUNGSVENTIL	VPN-H 1/4"	1
15	95.800.007	0	SEGR HRÍDEL. / OUTSIDE SAFETY RING / SICHERUNGSRING AUSSEN	POJISTNÝ KROUZEK 16	2
16	95.801.009	0	SEGR DIRA / INSIDE SAFETY RING / SICHERUNGSRING INNEN	POJISTNÝ KROUZEK 52	1
17	95.801.018 (2)	0	KROUZEK POJIST.VNITR / INSIDE SAFETY RING / SICHERUNGSRING INNEN	POJISTNÝ KROUZEK 50	2
18	96.002.011	0	KROUZEK O DYNAMICKY / DYNAMIC O RING / O-RING DYNAMISCH	24X2	1
19	96.002.019	0	KROUZEK O DYNAMICKY / DYNAMIC O RING / O-RING DYNAMISCH	46x2 MBR 70SH	2
20	96.061.009	0	KROUZEK STIRACÍ / SCRAPER RING / ABSTREIFRING	WD2200280 Z201	1
21	96.082.002 (2)	0	TESNENÍ / SEAL RING / DICHTUNGSRING	13/17x1.5 CU	3
22	96.084.001	0	KROUZEK VODICÍ / LEAD RING / FÜHRUNGSRING	GP6500500-T47	1
23	96.084.006	0	KROUZEK VODICÍ / LEAD RING / FÜHRUNGSRING	GR4300280-T47	1
24	96.900.013 (1)	0	TESNENÍ KOMBINOVANÉ / COMBINATION SEALING / KOMBIDICHTUNG	PT0200500	1
25	96.900.021	0	TESNENÍ KOMBINOVANÉ / COMBINATION SEALING / KOMBIDICHTUNG	RSK200280-46N	1

- 1.ZRUSENO TESNENÍ 96.900.001 A NAHRAZENO 96.900.013. 336/ZM006 10.1.2011 SLEZACKOVA  
2.ZRUS.REDUKCE 30.9107-509,SROUBENÍ 30.30.1807-005,ZRUS.VÍKO 30.Y307-005 A NAHR.30.Y307-003,ZRUS.SROUBENÍ 92.003.001 A NAHR.92.002.001,ZRUS.PIST 30.LM07-504 A NAHR.30.Y307-012,ZRUS.1xPOJ.KROUZEK 95.801.009 A NAHR.95.801.018, PRID.1xKROUZEK 96.082.002. 026/ZM027 18.2.2011 SLEZACKOVA  
3.VENTIL 92.151.001 PRECISLOVAN NA 92.151.008. 222/ZM212 30.7.2013 SLEZACKOVA  
4.PRID.DRŽAK 30.0807-008,2XSROUB M8x20(90.001.25.032). 062/ZM50 10.4.2014 SLEZACKOVA

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version); Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz./Position/Position);  
Objednávací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

## 7.60. Podstavec / Base / Untersatz

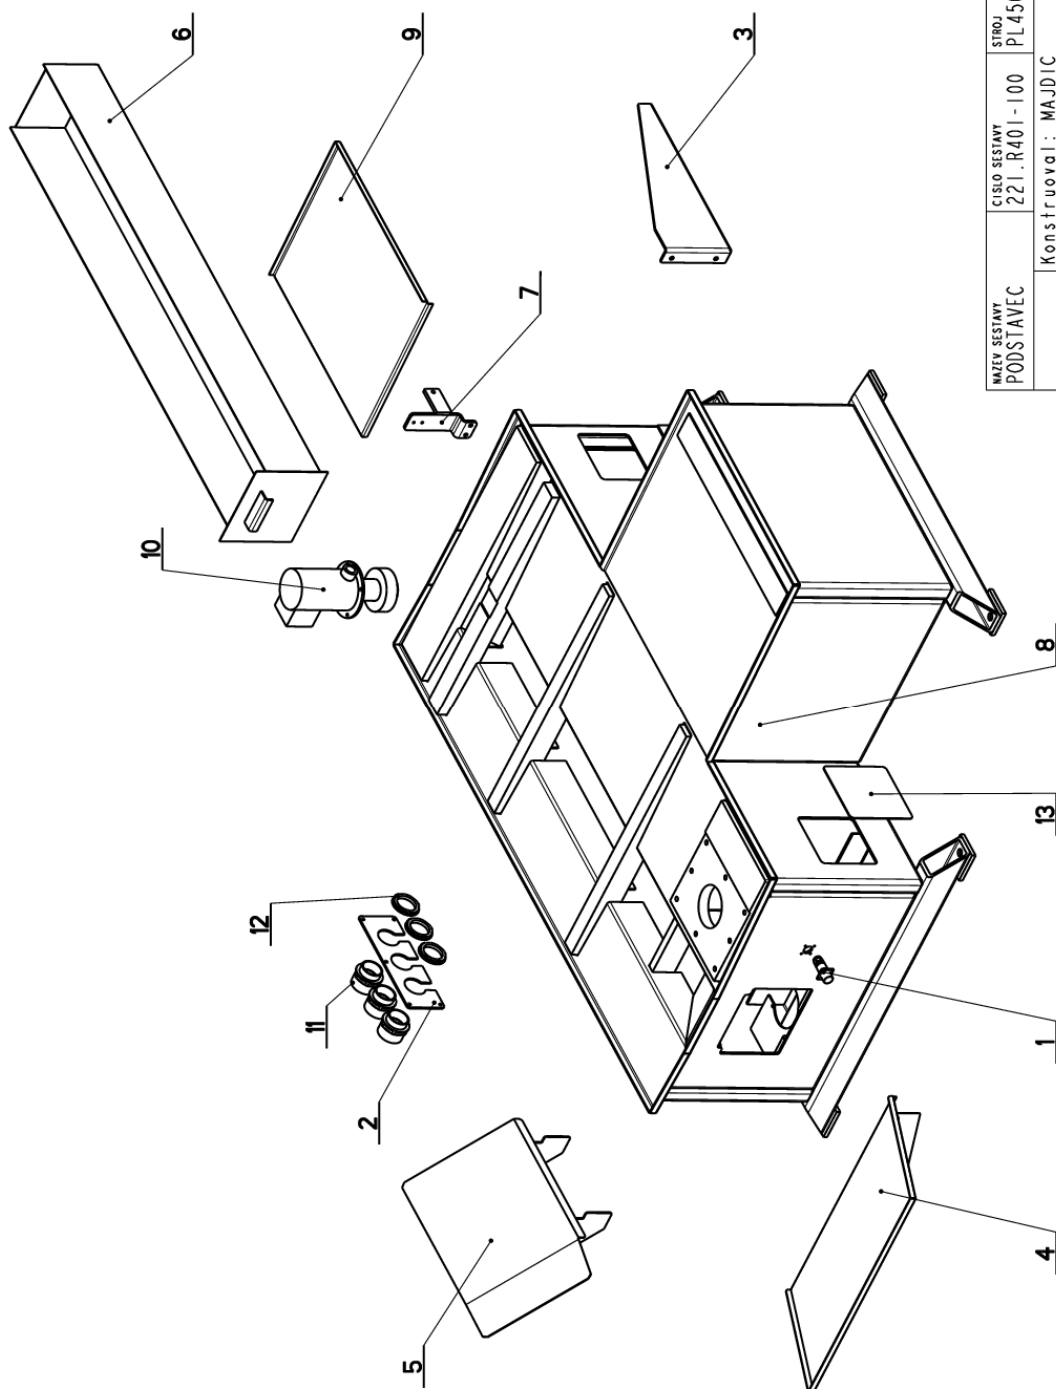

NAZEV SESTAVY PODSTAVEC	CISLO SESTAVY 221.R401-100	STROJ PL450A
Konstruoval: MAJDIC		Datum: 05. 12. 2012
Meritko:		1:100

## 7.61. Kusovník / Piece list / Stückliste - Podstavec / Base / Untersatz

Císlo sestavy / 221.R401-100		Název sestavy / PODSTAVEC/BASE/UNTERSATZ		Ver. 0	
Por.	Objednáací číslo	Ver.	Název položky	Rožmer	ks
1	262.007	0	KONEKTOR / CONNECTOR / STECKVERBINDER		1
2	30.R201-056	1	VÍKNO / COVER / DECKEL	P 4x100	1
3	30.R301-008	0	DRŽÁK / HOLDER / HALTER	P4x212	1
4	30.R301-053	1	KRYTÍ / COVER / ABDECKUNG		1
5	30.R314-260	0	KRYTÍ / COVER / ABDECKUNG		1
6	30.R401-006	0	VANA / TANK / WABNE		1
7	30.R401-013	0	DRŽÁK / HOLDER / HALTER		1
8	30.R401-101	0	PODSTAVEC / BASE / UNTERSATZ		1
9	30.R401-102	0	DRŽÁK / HOLDER / HALTER		1
10	91.020.015	0	CERPAKLO / PUMP / PUMPE	3 COA 4-12	1
11	91.071.022	0	VÝVODKA / BUSHING / TÖLLE		3
12	91.072.016	0	MATICE / NUT / MUTTER		3
13	94.101.039	0	ZASLEPKA / PLUG / BLINDFLANSCH	15x15x4	1

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position;  
Objednáací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rožmer/Stock size/Abmessung